


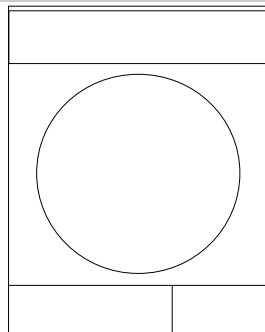

Dryer

User manual

3886 CNT



Please read this user manual first!

Dear Customer,

Thank you for preferring a Arçelik product. We hope that your product which has been manufactured with high quality and technology will give you the best results. We advise you to read through this manual and the other accompanying documentation carefully before using your product and keep it for future reference. If you transfer the product to someone else, give its manual as well. Pay attention to all details and warnings specified in the user manual and follow the instructions given therein.

Use this user manual for the model indicated on the cover page.

Explanation of symbols

Throughout this user manual the following symbols are used:

	Important information or useful hints about usage.
	Warning for hazardous situations with regard to life and property.
	Warning against electric shock.
	Warning against hot surfaces.
	Warning against fire hazard.
	Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations.

Do not dispose of the packaging wastes with the domestic waste or other wastes, discard them to the dedicated collection points designated by the local authorities.



This product was manufactured using the latest technology in environmentally friendly conditions.



WEEE It complies with the WEEE Directive

1 Important instructions for safety and environment

This section contains safety instructions that will help protect from risk of personal injury or property damage. Failure to follow these instructions shall void any warranty.

1.1 General safety

- The dryer can be used by children at and above 8 years old and by persons whose physical, sensory or mental capabilities were not fully developed or who lack experience and knowledge provided that they are supervised or trained on the safe usage of the product and the risks it brings out. Children should not play with the product. Cleaning and maintenance works should not be performed by children unless they are supervised by someone.
- Children of less than 3 years should be kept away unless continuously supervised.
- Adjustable feet should not be removed. The gap between the dryer and the floor should not be reduced with materials such as carpet, wood and tape. This will cause problems with the dryer.
- Always have the installation and repairing procedures carried out by the **Authorized Service**. Manufacturer shall not be held liable for damages that may arise from procedures carried out by unauthorized persons.
- Never wash the dryer by spraying or pouring water onto it! There is the risk of electric shock!

Important instructions for safety and environment

1.1.1 Electrical safety



Electrical safety instructions should be followed while electrical connection is made during the installation.

- Connect the dryer to a grounded outlet protected by a fuse at the value specified on the type label. Have the grounding installation performed by a qualified electrician. Our company shall not be liable for any damages that will arise when the dryer is used without grounding in accordance with the local regulations.
- The voltage and allowed fuse protection is stated on the type label plate.
- The voltage specified on the type label must be equal to your mains voltage.
- Unplug the dryer when it is not in use.
- Unplug the dryer from the mains during installation, maintenance, cleaning and repair works.
- Do not touch the plug with wet hands! Never unplug by pulling on the cable, always pull out by grabbing the plug.
- Do not use extension cords, multi-plugs or adaptors to connect the dryer to power supply in order to decrease the risk of fire and electric shock.
- Power cable plug must be easily accessible after installation.



Damaged mains cable should be changed notifying the Authorized Service.



If the dryer is faulty, it must not be operated unless it is repaired by an authorized service agent! There is the risk of electric shock!

Important instructions for safety and environment

1.1.2 Product safety



Points to be taken into consideration for fire hazard:

Below specified laundry or items must not be dried in the dryer considering fire hazard.

- Unwashed laundry items
- Items soiled with oil, acetone, alcohol, fuel oil, kerosene, stain removers, turpentine, paraffin or paraffin removers must be washed in hot water with plenty of detergent before being dried in the dryer.

For this reason especially the items containing the above specified stains must be washed very well, to do this use adequate detergent and choose a high washing temperature.



Below specified laundry or items must not be dried in the dryer due to the fire hazard:

- Garments or pillows bolstered with rubber foam (latex foam), shower bonnets, water resistant textiles, materials with rubber reinforcement and rubber foam pads.
- Clothing cleaned with industrial chemicals.

Items such as lighter, match, coins, metal parts, needle etc. may damage the drum set or may lead to functional problems. Therefore check all the laundry that you will load into your dryer. Never stop your dryer before the programme completes. If you must do this, remove all laundry quickly and lay them out to dissipate the heat.



Clothes that are washed inadequately may ignite on their own and even may ignite after drying ends.

- You must provide enough ventilation in order to prevent gases exiting from devices operating with other types of fuels including the naked flame from accumulating in the room due to the back fire effect.

Important instructions for safety and environment



Underwear that contains metal reinforcements should not be dried in the dryer. Dryer may be damaged if metal reinforcements come loose and break off during drying.



Use softeners and similar products in accordance with the instructions of their manufacturers.



Always clean the lint filter before or after each loading. Never operate the dryer without the lint filter installed.

- Never attempt to repair the dryer by yourself. Do not perform any repair or replacement procedures on the product even if you know or have the ability to perform the required procedure unless it is clearly suggested in the operating instructions or the published service manual. Otherwise, you will be putting your life and others' lives in danger.
- There must not be a lockable, sliding or hinged door that may block the opening of the loading door in the place where your dryer is to be installed.
- Install your dryer at places suitable for home use. (Bathroom, closed balcony, garage etc.)
- Make sure that pets do not enter the dryer. Check the inside of the dryer before operating it.
- Do not lean on the loading door of your dryer when it is open, otherwise it may fall over.
- The lint must not be allowed to accumulate around the tumble dryer

1.2 Mounting over a washing machine

- A fixing device should be used between the two machines when installing the dryer above a washing machine. The fitting device must be installed by the authorized service agent.
- Total weight of the washing machine and the dryer -with full load- when they are placed on top of each other reaches to approx. 180 kilograms. Place the products on a solid floor that has sufficient load carrying capacity!

Important instructions for safety and environment



Washing machine cannot be placed on the dryer. Pay attention to the above warnings during the installation on your washing machine.

Installation Table for Washing Machine and Dryer

Dryer Depth	Washing Machine Depth						
	62 cm	60 cm	54 cm	50 cm	49 cm	45 cm	40 cm
54 cm	Can be installed					Can be installed	Cannot be installed
60 cm	Can be installed					Cannot be installed	

1.3 Intended use

- Dryer has been designed for domestic use. It is not suitable for commercial use and it must not be used out of its intended use.
- Use the dryer only for drying laundry that are marked accordingly.
- The manufacturer waives any responsibility arisen from incorrect usage or transportation.
- The service life of the dryer that you purchased is 10 years. During this period, original spare parts will be available to operate the dryer properly.

1.4 Child safety

- Packaging materials are dangerous for the children. Keep packaging materials away from children.
- Electrical products are dangerous for the children. Keep children away from the product when it is operating. Do not let them tamper with the dryer. Use the child-proof lock in order to prevent the children to tamper with the dryer.



Child-proof lock is on the control panel. **(See Child lock)**

- Keep loading door closed even when the dryer is not in use.

Important instructions for safety and environment

1.5 Compliance with the WEEE regulation and disposing of the waste product



This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).

This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Do not dispose of the waste product with normal domestic and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.

1.6 Compliance with RoHS Directive:

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

1.7 Package information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

1.8 Technical Specifications

EN	
Height (Min. / Max.)	84,6 cm / 86,6 cm*
Width	59,5 cm
Depth	54 cm
Capacity (max.)	8 kg**
Net weight (plastic front door usage)	50,5 kg
Net weight (glass front door usage)	52,5 kg
Voltage	See type label***
Rated power input	
Model code	

* Min. height: Height with adjustable feet are closed.

Max. height: Height with adjustable feet are opened maximum.

** Dry laundry weight before washing.

*** Type label is located behind the loading door.



Technical specifications of the dryer are subject to specification without notice to improve the quality of the product.




Figures in this manual are schematic and may not match the product exactly.



Values stated on markers on the dryer or in the other published documentation accompanying with the dryer are obtained in laboratory in accordance with the relevant standards. Depending on operational and environmental conditions of the dryer, these values may vary.


2 Your Dryer

2.1 Overview

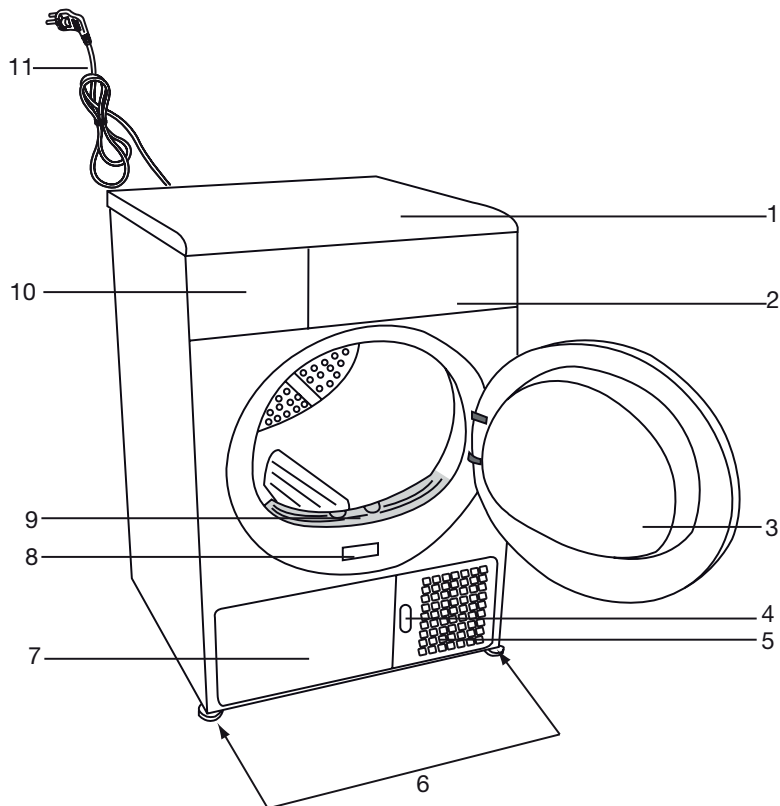

1. Top panel
2. Control panel
3. Loading door
4. Kick plate opening button
5. Ventilation grids
6. Adjustable legs
7. Kick plate
8. Type label
9. Lint filter
10. Water tank drawer
11. Power cord

2.2 Package Contents

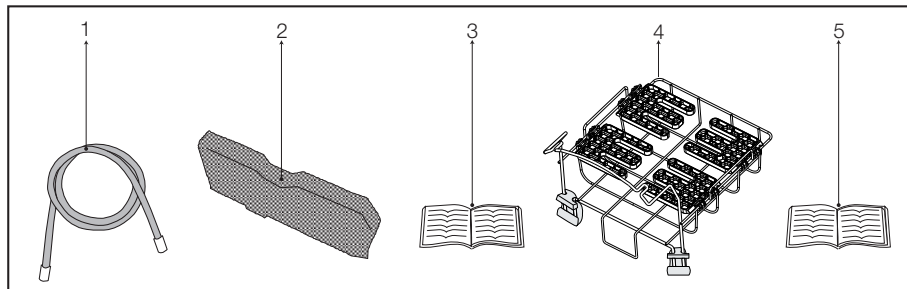

1. Water drain hose *
2. Filter drawer spare sponge*
3. User Manual
4. Drying basket*
5. Drying basket user manual*

*It can be supplied with your machine depending on its model.

3 Installation

Before the calling the nearest Authorized Service for the installation of the dryer, ensure that electrical installation and water drain is appropriate referring to the user's manual. **(See 3.4 Connecting to the drain and 3.6 Electrical connection)** If they are not suitable, contact a qualified electrician and technician to make necessary arrangements.



Preparation of the dryer's location as well as the electrical and waste water installations is under customer's responsibility.



Prior to installation, visually check if the dryer has any defects on it. If the drier is damaged, do not have it installed. Damaged products cause risks for your safety.



Let your dryer wait for 12 hours before starting to use it.

3.1 Appropriate installation location

- Install the dryer on a stable and level surface.
- Dryer is heavy. Do not move it by yourself.
- Operate your dryer in a well ventilated, dust-free environment.
- The gap between the dryer and the surface should not be reduced by the materials such as carpet, wood and tape.
- Do not cover the ventilation grills of the dryer.
- There must not be a lockable, sliding or hinged door that may block the opening of the loading door in the place where your dryer is to be installed.
- Once the dryer is installed, it should stay at the same place where its connections have been made. When installing the dryer, make sure that its rear wall does not touch anywhere (tap, socket, etc.).
- Place the dryer at least 1 cm away from the edges of other furniture.
- Your dryer can be operated at temperatures between +5°C and +35°C. If the operating conditions fall outside of this range, operation of the dryer will be adversely affected and it can get damaged.
- Your product shall run with a connection to the wireless network in your house. The controls made on the HomeWhiz application will be provided over this network, so the wireless signal reception where the machine is located should be sufficient.



Do not place the dryer on the power cable.

3.2 Removing the transportation safety assembly




Remove the transportation safety assembly before using the dryer for the first time.

Open the loading door.

There is a nylon bag inside the drum that contains a piece of styrofoam. Hold it from its section marked with **XX XX**.

Pull the nylon towards yourself and remove the transportation safety assembly.

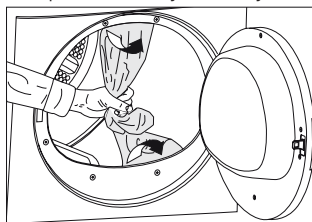

Check that no part of the transportation safety assembly remains inside the drum.

3.3 Under counter installation

This product can be installed under a counter if the height of the counter is sufficient.



While using undercounter dryer, it should never be operated without undercounter installation part. For the appropriate undercounter installation part contact the Authorized Service.

Dryer Depth	60 cm	54 cm
Stock number of under-bench installation part	2979700200	2973600200

Leave at least 3 cm of space around the sides and the rear wall of the dryer when installing it under a counter.



If installed under a countertop, drying durations can extend.

Installation

3.4 Connecting to the drain

In products equipped with condenser unit, water accumulates in the water tank during the drying cycle. You should drain accumulated water after each drying cycle.


You can directly drain accumulated water through the water drain hose supplied with the product instead of periodically draining the water collected in the water tank.

Connecting the water drain hose

1-2 Pull hose at the behind of the dryer by hand in order to disconnect it from where it is connected. Do not use any tools to remove the hose.

3 Connect one end of the drain hose supplied with the dryer to the connection point from where you removed the hose of the product in previous step.

4 Connect the other end of the drain hose directly to the wastewater drain or to the washbasin.

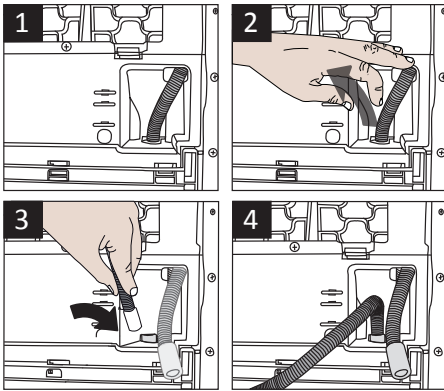

Hose connection should be made in a safe manner. Your drain house will be flooded if the hose comes out of its housing during water discharge.



Water drain hose should be attached to a height of maximum 80 cm.




Make sure that the water drain hose is not stepped on and it is not folded between the drain and the machine.

3.5 Adjusting the feet

In order to ensure that the dryer operates more silently and vibration-free, it must stand level and balanced on its feet. Balance the machine by adjusting the feet.

Turn the feet to left or right until the dryer stands level and firmly.

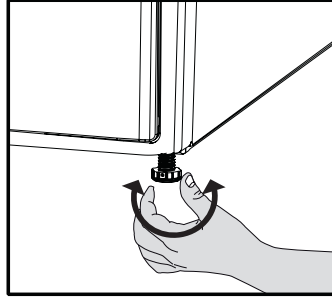

Never unscrew the adjustable feet from their housings.

3.6 Electrical connection

For specific instructions for electrical connection required during installation (see 2.1.1 Electrical Safety)


3.7 Wireless Network Settings

Your appliance and the application should be connected for application to be usable.

To establish this link, follow the instructions below.


First installation:

1. Press and hold Anti Creasing/Settings buttons of your machine for 3 seconds to enter settings menu to adjust wireless network settings.

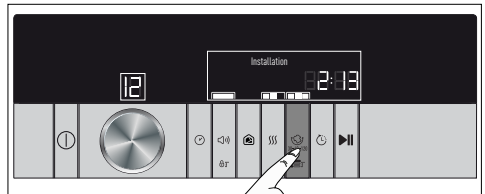


Installation

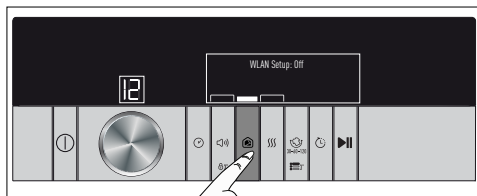

2. Find the WLAN Setup by using right-left buttons of HomeWhiz button when you enter the settings menu.

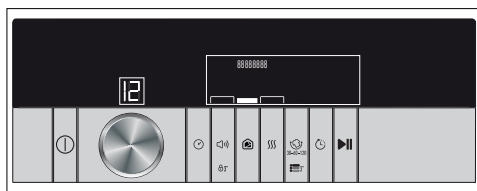

3. Activate WLAN Setup by pressing the button in the middle. In the display of your machine "WLAN Setup: On" phrase will occur and a password of eight digits will be given.



4. When the 8-digit password appears on the screen of your tumble dryer, enter the settings menu on your smart device and connect to the Dryer AP Wireless Network using the password provided.

The connection icon  will flash and "Connecting ..." message will be displayed. Once connected, the connection icon  will be continuously lit and the message "Connected" will appear.

5. Enter the application and perform the setup as per the application's instructions.



Repeat this process in case of changing the modem password or home network name.

3.8 Transportation of the dryer

Unplug the dryer before transporting it. Drain all water that has remained in the dryer. If direct water drain connection is made, then remove the hose connections.




We recommend carrying the dryer in upright position. If it is not possible to carry the machine in the upright position, we recommend carrying it by tilting towards the right side when looked from the front.


3.9 Warnings about sounds



It is normal to hear a metallic noise from the compressor sometimes during operation.

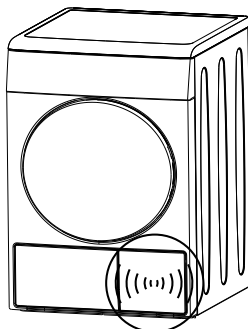

Water collected during operation is pumped to water tank. It is normal to hear pumping noise during this process.

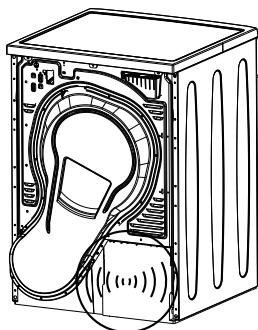

3.10 Changing the illumination lamp

In case an illumination lamp is used in your laundry dryer

To change the Bulb/LED used for illumination of your tumble dryer, call your Authorized Service.

The lamp(s) used in this appliance is not suitable for household room illumination. The intended purpose of this lamp is to assist the user to place laundry in the tumble dryer in a comfortable way. "The lamps used in this appliance have to withstand extreme physical conditions such as vibrations and temperatures above 50 °C."

4 Preparation

4.1 Laundry suitable for drying in the dryer

- Always obey the instructions given on the garment tags. Dry only the laundry having a label stating that they are suitable for drying in a dryer and make sure that you select the appropriate programme.

LAUNDRY DRYING SYMBOLS											
	Drying Symbols										
	Drying Settings										
	IRON										
	Dry or Steam		Iron at high temperature	Iron at medium temperature	Iron at low temperature						
	Maximum temperature		200 °C	150 °C	110 °C						

4.2 Laundry not suitable for drying in the dryer



Delicate embroidered fabrics, woolen, silk garments, delicate and valuable fabrics, airtight items and tulle curtains are not suitable for machine drying.

4.3 Preparing laundry for drying

- Laundry may be tangled with each other after washing. Separate the laundry items before placing them into the dryer.
- Dry garments having metal accessories such as zippers, inside out.
- Fasten the zippers, hooks and buckles and button sheets.

4.4 Things to be done for energy saving

Following information will help you use the dryer in an ecological and energy-efficient manner.


- Spin your laundry at the highest speed possible when washing them. Thus, the drying time is shortened and energy consumption is reduced.
- Sort out the laundry depending on their type and thickness. Dry the same type of laundry together. For example thin kitchen towels and table clothes dries earlier than thick bathroom towels.
- Follow the instructions in the user manual for programme selection.
- Do not open the loading door of the machine during drying unless necessary. If you must certainly open the loading door, do not to keep it open for a long time.
- Do not add wet laundry while the dryer is in operation
- Clean the lint filter before or after each drying cycle. **(See 6.1 Cleaning Lint Filter / Loading Door Inner Surface)**

Preparation

- Clean the filter drawer regularly either when the Filter Drawer Cleaning warning symbol appears or after every 3 drying cycles. **(See 6.4 Cleaning the filter drawer)**
- Ventilate the room, where the dryer is located, well during drying.

4.5 Correct load capacity

Follow the instructions in the “Programme selection and consumption table”. Do not load more than the capacity values stated in the table.

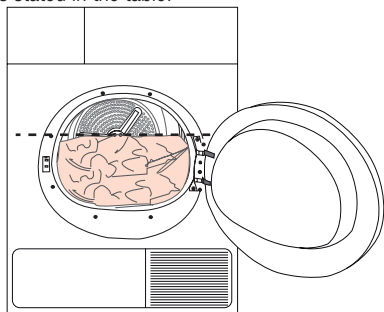

It is not recommended to load the dryer with laundry exceeding the level indicated in the figure. Drying performance will degrade when the machine is overloaded. Furthermore, dryer and the laundry can get damaged.


Following weights are given as examples.

Laundry	Approximate weights (g)*
Cotton quit covers (double)	1500
Cotton quit covers (single)	1000
Bed sheets (double)	500
Bed sheets (single)	350
Large tablecloths	700
Small tablecloths	250
Tea napkins	100
Bath towels	700
Hand towels	350
Blouses	150
Cotton shirts	300
Shirts	250
Cotton dresses	500
Dresses	350
Jeans	700
Handkerchiefs (10 pieces)	100
T-Shirts	125

*Dry laundry weight before washing.

5 Operating the product

5.1 Control Panel

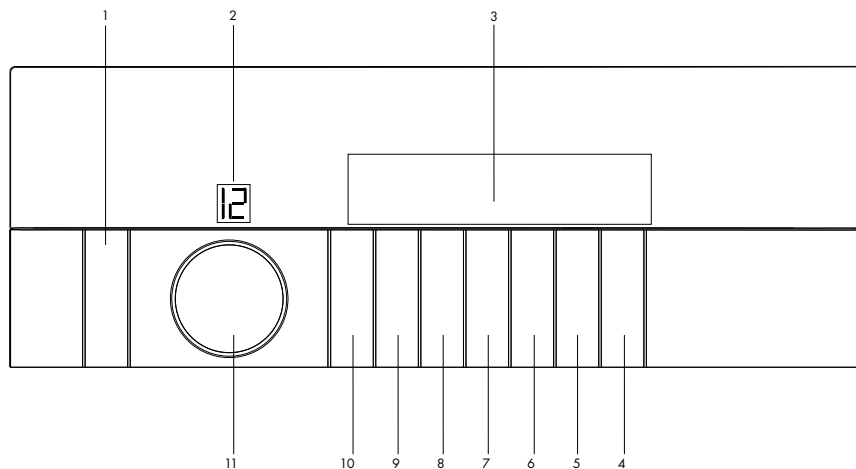

1. On/Off/Cancel button
2. Program Number Indicator
3. Display
4. Start/Stand-by Button
5. Delay Setting Selection Button
6. Wrinkle Prevention Selection Button/Menu Entry Button
7. Dryness Level Setting Selection Button
8. HomeWhiz Button
9. Buzzer Button
10. Timing Schedules Selection Button
11. Program Selection Button

5.2 Screen symbols

The screenshot shows the control panel display for a 'Cotton Cupboard Dry' program. The display includes a title bar, a row of icons (lock, filter, WLAN, anti-creasing, child-proof, water tank, end time setting, HomeWhiz, start/pause), a digital time display showing '00:00', and a row of progress bars. A legend on the right side of the screen lists the following symbols and their meanings:

- Display info line
- Remaining time indicator*
- Filter drawer cleaning warning symbol
- Filter cleaning warning symbol
- WLAN symbol
- Anti-Creasing symbol
- Child-proof lock warning symbol
- Water tank warning symbol
- End time setting symbol
- HomeWhiz symbol
- Start/pause symbol

*Time that appears on display indicates the remaining time until the end of the programme and changes according to the dampness level of the laundry and model of the dryer

Operating the product

5.3 Preparing the Machine

- Plug the machine.
- Place laundry into the machine.
- Press **On/Off/Cancel** button for 1 second (long).
- When your machine is turned on for the first time, it turns on with the declaration program (cotton wardrobe dry).



Pressing **On/Off/Cancel** button does not mean that the program has started. Press the **Start / Stand-by** button to start the program.

5.4 Program selection

- Determine the suitable program from the table below where drying levels are presented.
- Use the **Program Selection** button to select the program you wish.

Extra Dry	Only cotton clothes are dried under normal temperature. Thick and multi-layered laundry (towels, bed sheets, denim trousers etc.) are dried so that they can be placed in wardrobe without ironing.
Wardrobe Dry	Normal laundry (tablecloths, underwear etc.) are dried so that they can be placed in wardrobe without ironing.
Iron Dry	Normal laundry (shirts, dresses etc.) are dried to be ready for ironing.



For detailed program information, see "Program selection and consumption chart" ..

5.5 Main programs

The following main programs are available depending on fabric type.

• Cotton

Dry durable laundry with this program. It dried under normal temperature. It is recommended for your cotton laundry (bedsheets, bedding, towel, bathrobe etc.)

• Synthetic

Dry sensitive laundry with this program. It is recommended for your synthetic laundry.

5.6 Additional programs

The following additional programs are available in the machine for special situations.



Additional programs may vary depending on the features of your machine.

• Bedding

Dry fibre quilts with a label that indicates it can be dried in drying machine. Load the quilt correctly to prevent damage to the machine and the quilt. Remove the quilt cover before loading the quilt to the machine. Load the quilt to the machine after folding it in two.

- Do not load more than 1 double size fibre quilt (200x200 cm). Do not dry items that contain cotton material such as quilts, pillows etc.
- Do not dry items other than quilts such as carpets, rugs, hall rugs etc. This may cause permanent damage to your machine.



To get better results from drying machine programs, your laundry should be washed with suitable program in your washing machine and wrung with recommended wringing speed.

• Shirts

Dries shirts more delicately and causes less wrinkles for easy ironing.



Shirt might remain slightly damp at the end of the program. It is recommended not to leave the shirts inside the drying machine.

• Jeans

Use to dry denim clothes wrung in the washing machine with high speed.

• Mix

Use to dry synthetic and cotton clothes that don't give out colour together.

• Sportswear

Use to dry clothes made out of synthetic, cotton or mixed fabrics.


• Silent

Lowest level of noise and sound is emitted to the operating environment with this program. Sound level is half of the cotton wardrobe dry program.

Operating the product

- **WoolProtect**

Use this program to dry wool clothes with a phrase that indicates it can be dried in drying machine on its label for wool products that can be washed in the washing machine.


	<p>The wool drying program of this machine is certified by The Woolmark Company for the drying of wool products that can be dried in the drying machine provided that they are washed and dried as per the instructions on the label on the clothing and the instructions of the manufacturer of this machine. (M1618) Woolmark trade mark is a certification trade mark in United Kingdom, Ireland, Hong Kong and India.</p>
--	---

- **Daily**

This programme is used to dry cottons and synthetics daily, and lasts for 100 minutes.

- **Delicates**

You can dry your highly delicate laundry (silk blouses, fine underwear, etc.) that are suitable for drying or laundry which is advised to be hand-washed at a lower temperature.


	<p>It is recommended to use a cloth bag to avoid certain delicate garments and laundry from getting creased or damaged. Take your laundry immediately out of the dryer and hang them after the programme ends in order to prevent them being creased.</p>
--	---

- **Refreshing**

Ventilates for 10 minutes without blowing hot air. You can ventilate the cotton and linen clothes that have been enclosed for a long time with this program to remove their odour.






- **Timer programs**

You may select 10 min, 20 min, 30 min, 40 min, 50 min, 60 min, 80 min, 100 min, 120 min, 140 min ve 160 min Timer programs to achieve the required end drying level at low temperatures.

	<p>In this program, the machine dries for the duration set, regardless of the drying level.</p>
--	---

Operating the product

5.7 Program selection and consumption chart

EN				
Programs	Capacity (kg)	Spin speed in washing machine (rpm)	Approximate amount of remaining humidity	Drying time (minutes)
Cottons / Coloreds				
 Extra dry	8	1000	% 60	184
 Cupboard dry	8	1000	% 60	174
 Iron dry	8	1000	% 60	139
Night (silent)	8	1200	% 60	240
Shirts	1.5	1200	%50	50
Jeans	4	1200	%50	117
Bedding	2.5	1000	%40	120
Mix	4	1000	%60	110
Sportswear	4	1000	%60	105
Daily	1.5	600	%100	100
Delicates	1	800	%40	50
WoolProtect	1.5	600	%50	146
Synthetics				
 Cupboard dry	4	800	% 40	75
 Iron dry	4	800	% 40	59
Energy consumption values				
Programs	Capacity (kg)	Spin speed in washing machine (rpm)	Approximate amount of remaining humidity	Energy consumption value kWh
Cottons linen Ready to wear*,**	8	1000	% 60	1,42
Cottons Ready to iron	8	1000	% 60	1,05
Synthetics Ready to wear	4	800	% 40	0,51
Power consumption of the off-mode for the standart cotton programme at full load, PO (W)				0,5
Power consumption of the left-on mode for the standart cotton programme at full load, PL (W)				1,0
Contains fluorinated greenhouse gases covered by the Kyoto Protocol. Hermetically sealed. R134a / 0,52kg				



„Cotton cupboard dry programme“ used at full and partial load is the standard drying programme to which the information in the label and the fiche relates, that this programme is suitable for drying normal wet cotton laundry and that it is the most efficient programme in terms of energy consumption for cotton.


* : Energy Label standard program (EN 61121:2012)

**All the values on the chart are identified according to EN 61121:2012 standard. Consumption values may vary from the valued in the chart depending on laundry type, wringing speed, ambient conditions and voltage levels. Consumption values are valid under the conditions when wireless network connection is off.

Operating the product

5.8 Auxiliary functions

Audio Warning


 Machine will give an audio warning when the programme comes to an end. Use the **Audio Warning Level** button to adjust the volume level.



You can activate this function either before or after the programme starts.



Dryness settings selection


 **Dryness settings** button is used for adjusting to desired dryness. Program time may change depending on the selection.




You can activate this function only prior to start of program.



Wrinkle prevention selection

 With the wrinkle prevention selection button, it is possible to change the period of wrinkle prevention program. If you will not take the laundry out immediately after the program has completed, you may use Wrinkle prevention function to prevent wrinkling of your laundry. This program rotates the laundry every 240 seconds for the selected period, and thus prevents wrinkling. Level changes are specified in the following pictures.

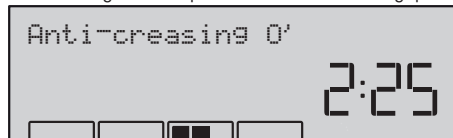

Press **Wrinkle Prevention** to activate this function.




If Wrinkle Prevention function is active, Wrinkle Prevention symbol is illuminated at the end of the program.




Operating the product

Menu entry button


 You may enter the menu by pressing the key  for 3 seconds.




During the 3 seconds while the button is pressed, Settings 3, Settings 2 and Settings 1 are displayed on the screen, and then you enter the menu. Language Selection menu is displayed first when you enter the menu. To move the previous and next options in the menu, **buzzer** and **dryness level selection** buttons are used respectively.

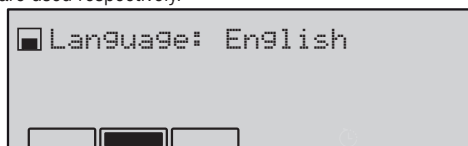

To change the language, press **HomeWhiz** button. **Save Settings** warning is displayed when you press menu entry button for 3 seconds to save the settings.

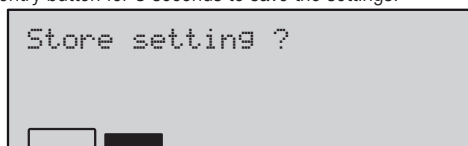


You may save the changes made when you press **HomeWhiz** button on the save settings screen. When you press **buzzer** button, you return to the program selection screen without saving the changes made.

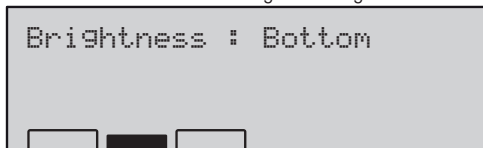

You may select Lower, Upper 1 and Upper 2 brightness levels by pressing the HomeWhiz button on the brightness setting menu.


Spin speed selection

 With the **speed spin setting** menu, you may change the program period of the drying machine by the spin speed setting used in washing machine. For example, spin speed defined for cotton wardrobe dry program is 1000 rpm. The screen period for this spin speed value is 145 minutes. User may reduce the program period to 135 minutes with the higher spin speed of 1200 rpm.



You may change the spin speed as "Spin 1200", "Spin 1400", etc. by pressing the spin speed button. Drying machine automatically updates the program period after you have changed the spin speed.

Reset to factory settings button is used for returning the changes you have made to the factory settings. Press the **HomeWhiz** button in this menu. **Save Settings** warning is displayed, when you press **HomeWhiz** button again, machine is reset to factory settings and returned to program selection screen exiting the menu.

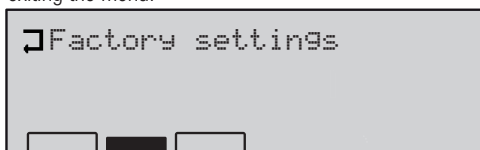

Exit the menu by saving the settings pressing **Wrinkle Prevention** button. User may select the desired program and operate the machine.

Operating the product

5.9 Warning symbols



 
Warning symbols may vary depending on the model of your machine.

Fibre filter cleaning

When the program is completed, the warning symbol for filter cleaning turns on.



Refer to "Troubleshooting" section if filter cleaning symbol constantly flashes.



Water tank

When the program is completed, the warning symbol to empty the water tank turns on.

If the water tank fills up while the program continues, the warning symbol starts flashing and the machine goes into stand-by. In this case, empty the water tank and start the program by pressing the Start / Stand-by button. Warning symbol turns off and program resumes.



Cleaning the filter drawer

Warning symbol flashes periodically to remind that filter drawer must be cleaned.



Loading cover is open

Following warnings are displayed respectively if the loading cover of the drying machine is open.



Delay Setting

- You can delay the end time of the program up to 24 hours with the **Delay Setting** function.
- Open the loading door and place the laundry.
- Select drying program, spin cycle and if needed, additional functions.
- Press the **Delay Setting** selection button and set the delay time you wish. **Delay Setting** symbol turns on. (When the button is pressed and hold pressed, **Delay Setting** proceeds non-stop).
- Press the **Start / Stand-by** button. **Delay Setting** countdown starts and Delay Activated and Program Started messages are displayed on the screen. ":" Separator in the middle of displayed delay time flashes.



You can add or remove laundry within delay time. Delay Setting symbol will turn off at the end of countdown, drying starts and duration of program is displayed. Displayed time is the sum of normal drying time and delay time.

Changing the delay time

- If you want to change the duration during the countdown:
- Press the **On/Off/Cancel** button for 3 seconds to cancel the program. Turn on the machine again and repeat the Delay Setting process for the duration you wish.
- When your machine is turned on for the first time, it turns on with the declaration program (cotton wardrobe dry).
- Cancelling the Delay Setting function
- If you want to cancel the Delay Setting countdown and start the program immediately:
- Press the **On/Off/Cancel** button for 3 seconds to cancel the program.
- Press the **On/Off/Cancel** button to start you previously selected program.


Operating the product

5.10 Starting the program

Press the Start/Stand-by button to start the program.

Indicating start of the program, Start symbol turns on, "▶" separator in the middle of remaining time keeps flashing. Drying and program progress bar are displayed alternately on the screen.

5.11 Program progress status

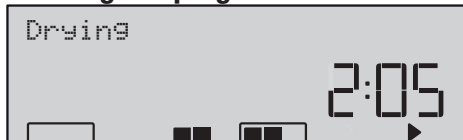

5.12 Child Lock

The machine has a child lock which prevents the program flow from being interrupted when the buttons are pressed during a program. When the child lock is activated, all buttons on the panel except the **On/Off/Cancel** button are deactivated.

To activate the child lock, keep the **Buzzer Selection Button / Child lock button** pressed for 3 seconds.

The child lock has to be deactivated to be able to start a new program after the current program is finished or to be able to interfere with the program. **To deactivate the child lock**, keep the same buttons pressed for 3 seconds.



When the child lock is activated, the lock symbol on the screen turns on.



Child lock deactivates when the machine is turned off and on by the On/Off/Cancel button.

When the child lock is active:

- The machine runs, or in stand-by state the indicator symbols won't change upon changing the position of the program selection button.

5.13 Changing the program after it is started

You can change the program you selected to dry your laundry with a different program after the machine starts running.

- For example, to select Extra Dry instead of Iron Dry, pause the program by pressing the **Start / Stand-by** button.
- Select the Extra Dry program using the **Program Selection** button.
- Press the Start/Stand-by button to start the program.

Adding and removing clothes during stand-by

If you want to add or remove clothes to/from the machine after the drying program starts:

- Press the **Start/Stand-by** button to put the machine in Stand-by state. The drying operation stops.
- Open the loading door while in **Stand-by** state, and close the door after you remove or add laundry.
- Press the **Start/Stand-by** button to start the program.



Adding laundry after the drying operation starts may cause the dried laundry inside the machine to mix with wet laundry and leave the laundry damp at the end of operation.



Adding or removing laundry during drying may be repeated as many times as you wish. But this operation continuously interrupts the drying operation, and thus increases program duration and energy consumption. So, it is recommended to add laundry before the program starts.



If a new program is selected by turning the program selection knob while the machine is in stand-by; the running program terminates and new program information is displayed on the screen.



WARNING: Do not touch the inner surface of the drum while adding or removing clothes during a continuing program. The drum surface is hot.

Operating the product

5.14 Cancelling the program

If you want to cancel the program and terminate the drying operation for any reason after the machine starts running, keep the **On/Off/Cancel** button pressed for 3 seconds.



WARNING: The inside of the machine shall be extremely hot when you cancel the program during machine operation, so run the ventilation program to allow it to cool down.

5.15 End of program

When the program has ended, Fibre Filter Cleaning and Water Tank warning symbols are illuminated on the program monitoring indicator and **"Program Ended"** message is displayed on the screen. Loading cover can be opened and machine is ready for another operation. To turn off the machine, press the **On/Off/Cancel** button.



Wrinkle Prevention function activates the 2-hour (varies as per selection) Wrinkle Prevention program if Wrinkle Prevention is active and laundry isn't taken out of machine after completion of the program.




Clean the fibre filter after each drying. (See "Fibre filter and Loading door inner surface")



Empty the water tank after each drying. (See "Emptying the water tank")

5.16 HomeWhiz Function

 You may select the program you desire, perform auxiliary function settings such as drying level, spin speed selection, wrinkle prevention period etc. and start a program by controlling your drying machine with smart devices with the HomeWhiz application. You may also perform the language, brightness and volume settings on the settings menu of your machine with the smart device. In addition to these features, you may monitor the current status of your machine and the washing time, remaining time and Tank full and Cover open warnings from the application.



Download the application required to use the HomeWhiz function from the application store of your smart device.

With the HomeWhiz function, your drying machine may send you e-mails to make status notifications after the application is installed if you desire. You may activate the email feature by entering your email address during application setup. You can deactivate or reactivate the email feature any time you want from the settings menu of your application.

With the e-mail notifications, your Drying Machine shall send you notification e-mails in the following conditions.

- When the machine is turned on
- When the machine is turned off
- When the machine is operated
- When the program is paused
- When the program is ended
- When the door of the machine is open etc. When the warnings occur

Example mail subject: You have a message from your drying machine

Example mail content: Door open



Port no. 587 shall be open on your internet connection in order to use the e-mail notifications.



For the HomeWhiz function to be usable, HomeWhiz application shall be installed on your smart device and your drying machine shall be connected to your wireless network. When your Drying Machine is not connected to the network, your it operates like a machine without HomeWhiz function.



All safety precautions described in **"Important safety and environmental precautions"** also apply for remote operation with the HomeWhiz function.




When you want to pause your machine with your smart device while the HomeWhiz function is active, the temperature of the laundry is checked and cycle is not paused until a proper temperature is reached. "Your laundry is being cooled" on the screen of your machine. Program is paused when the laundry is cooled adequately.

Operating the product

Wireless Network Setting:

In order to perform the wireless connection settings:


1. Enter the settings menu.

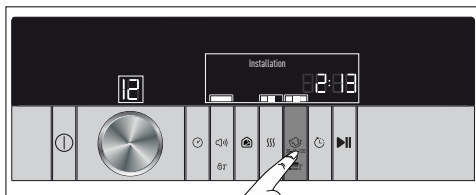


2. Navigate to wireless connection settings.




3. To turn on the connection, set it to On; and to turn it off, set it to Off.

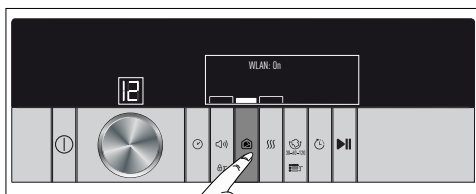

When your drying machine has been connected to the home network, connection is turned on and off without requiring to enter the password again.

The  symbol on the screen indicates wireless connection status.

Your machine is connected to the network when  is on; it is being connected when the symbol is flashing and not connected when the symbol is off.



When "Wireless Connection: On" on your machine, HomeWhiz function can be selected. Check the network connection status if it is not possible to select HomeWhiz function. If connection cannot be established, repeat the initial setup settings over the machine.

5.17 Odour feature

Your drying machine is equipped with odour feature.

Read the ProScent operation manual for the usage of this feature.

There are 3 different scent options that you may use on your machine. Fresh, Flower / Rose, Ocean.

Your machine contains one type of scent capsule, you may obtain the other scent capsules from the authorized services. Use the scent capsules procured from the authorized services only.

6 Maintenance and cleaning

Service life of product extends and frequently experienced problems will be reduced if it is cleaned at regular intervals.

6.1 Cleaning Lint Filter / Loading Door Inner Surface

Lint and fiber released from the laundry to the air during the drying cycle are collected in the Lint Filter.



Such fiber and lint are generally formed during wearing and washing.







Always clean the lint filter and the inner surfaces of the loading door after each drying process.




You can clean the lint filter housing with a vacuum cleaner.

To clean the lint filter:



- Open the loading door.
- Remove the lint filter by pulling it up and open the lint filter.
- Clean lint, fiber, and cotton raveling by hand or with a soft piece of cloth.
- Close the lint filter and place it back into its housing.

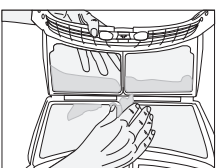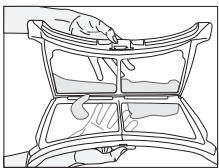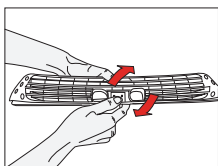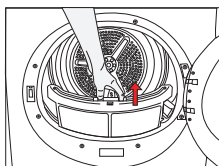

- A layer can build up on the filter pores that can cause clogging of the filter after using the dryer for a while. Wash the lint filter with warm water to remove the layer that builds up on the lint filter surface. Dry the lint filter completely before reinstalling it.

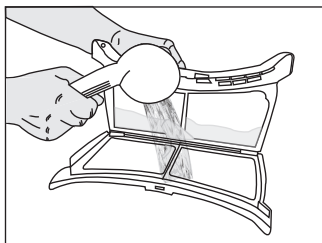

- Clean the entire inner surface of the loading door and loading door gasket with a soft damp cloth.

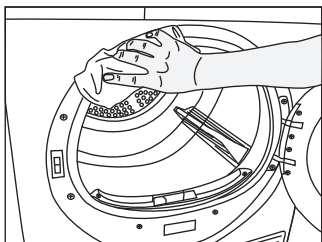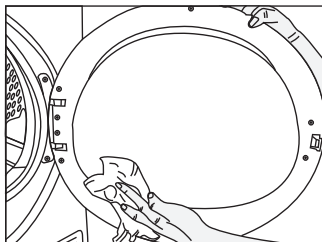

Maintenance and cleaning

6.2 Cleaning the sensor

There are dampness sensors in the dryer that detect whether the laundry is dry or not.

To clean the sensors:

- Open the loading door of the dryer.
- Allow the machine to cool down if it is still hot due to the drying process.
- Wipe the metal surfaces of the sensor with a soft cloth, dampened with vinegar and dry them.




Clean metal surfaces of the sensors 4 times a year.



Do not use metal tools when cleaning metal surfaces of the sensors.



Never use solvents, cleaning agents or similar substances for cleaning due to the risk of fire and explosion!

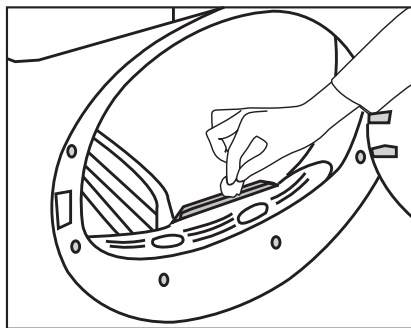

6.3 Draining the water tank

Dampness of the laundry is removed and condensed during drying process and the water that arise accumulates in the water tank. Drain the water tank after each drying cycle.



Condensed water is not drinkable!




Never remove the water tank when the program is running!


If you forget to drain the water tank, the machine will stop during the subsequent drying cycles when the water tank is full and the Water Tank warning symbol will flash. If this is the case, drain the water tank and press **Start / Pause** button to resume the drying cycle.

To drain the water tank:

- Pull the drawer and remove the water tank carefully.

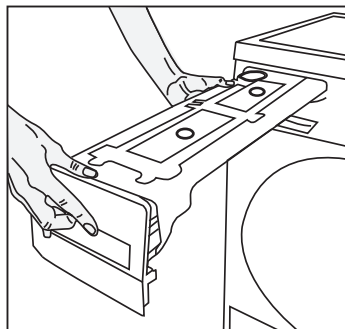

- Drain the water in the tank.

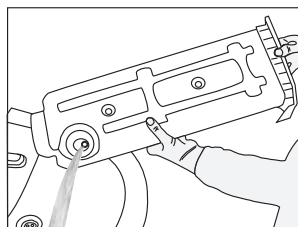

- If there is lint accumulation in the funnel of the water tank, clean it under running water.
- Place the water tank into its seat.



If the direct water draining is used as an option, there is no need to empty the water tank.

Maintenance and cleaning


6.4 Cleaning the filter drawer

Lint and fiber that could not be captured by the lint filter are blocked in the filter drawer behind the kick plate. Filter Drawer Cleaning warning light will light up maximum at every 3 drying cycles as a reminder.


There is a two-level filter in the filter drawer. The first level is the filter drawer sponge and the second level is the filter cloth.

To clean the filter drawer:


- Press the kick plate button to open the kick plate.

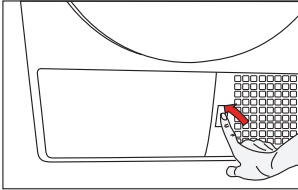


- Remove the filter drawer cover by turning it in the direction of arrow.

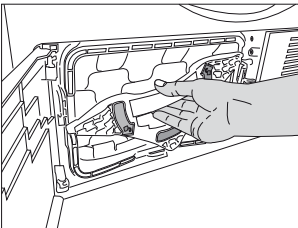


- Pull out the filter drawer.

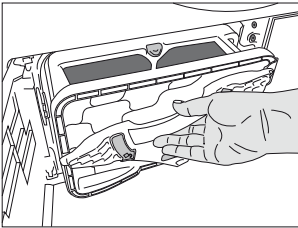


- Open the filter drawer by pressing the red button.

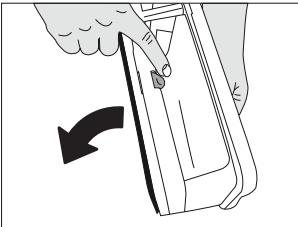

- Take out the filter drawer sponge.

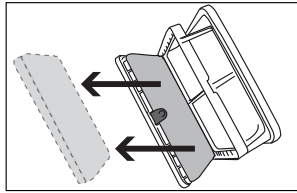

- Clean lint, fiber, and cotton raveling on the filter cloth by hand or with a soft piece of cloth.
- When you notice a layer that may lead clogging on the filter cloth, please clean the layer by washing in warm water. Let the filter cloth dry thoroughly before installing back the filter drawer.

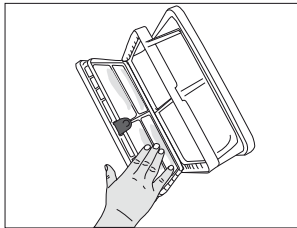


- Wash the filter drawer sponge by hand to remove the fiber and lint on the surface. After washing the sponge, squeeze it by hand and remove the excess water. Well-dry the sponge before storing it.




It is not necessary to clean the sponge if lint and fiber accumulation on it is not significant.

- Place the sponge back into its place.

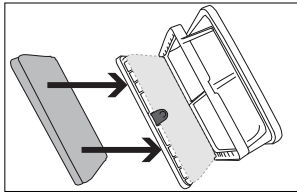


- Close the filter drawer as to lock the red button.

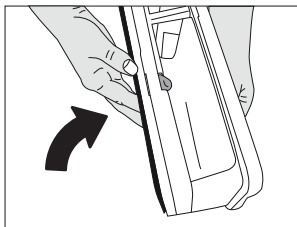


Maintenance and cleaning

- Place the filter drawer back into its place, turn the filter drawer cover in the arrow direction and close it securely.

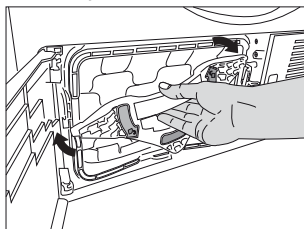

- Close the kick plate cover.

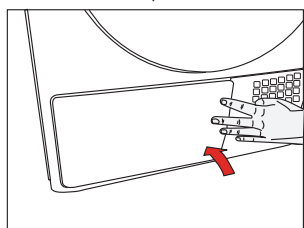



Drying without the filter drawer sponge in place will damage the machine!



A dirty lint filter and filter drawer will cause longer drying periods and higher energy consumption.

6.5 Cleaning the evaporator

Clean the lint accumulated on the fins of the evaporator located behind the filter drawer with a vacuum cleaner.

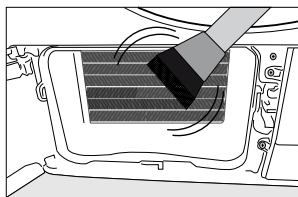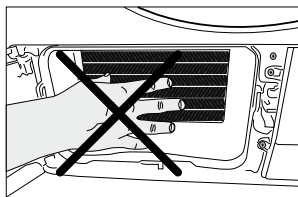

You can also clean by hand provided that you wear protective gloves. Do not attempt to clean with bare hands. Evaporator fins can harm your hand.

7 Troubleshooting

Drying process takes too much time.

- Pores of the lint filter are clogged. >>> Wash the lint filter with warm water.
- Filter drawer is clogged. >>> Clean the sponge and the filter cloth in the filter drawer.
- Ventilation grids on the front side of the machine are blocked. >>> Remove the objects (if any) that block ventilation in front of the ventilation grids.
- Ventilation is not sufficient since the room where the machine is installed is very small. >>> Open the door and window of the room to avoid the room temperature increase too much.
- Lime deposit has built up on the dampness sensor. >>> Clean the dampness sensor.
- Excessive laundry is loaded. >>> Do not load the dryer in excess.
- Laundry is not spun sufficiently. >>> Spin your laundry at a higher speed in your washing machine.

Laundry comes out wet at the end of drying.



After drying, the hot clothes feel damper than their actual dampness level.

- It is likely that the selected programme did not suit the laundry type.>>>Checking the care labels on clothes, select appropriate programme for the laundry type or use timer programmes in addition.
- Pores of the lint filter are clogged. >>> Wash the lint filter with warm water.
- Filter drawer is clogged. >>> Clean the sponge and the filter cloth in the filter drawer.
- Excessive laundry is loaded. >>> Do not load the dryer in excess.
- Laundry is not spun sufficiently. >>> Spin your laundry at a higher speed in your washing machine.

Dryer does not switch on or the programme does not start. Dryer does not start when it is set.

- It is not plugged in. >>> Make sure that the machine is plugged in.
- The loading door is ajar. >>> Make sure that the loading door is closed securely.
- Programme is not selected or the Start / Pause / Cancel button is not pressed. >>> Make sure that the programme is selected and the machine is not in Pause mode.
- Childproof Lock is activated. >>> Deactivate the Childproof Lock.

Programme is interrupted without any cause.

- Loading door is ajar. >>> Make sure that the loading door is closed securely.
- There was a power failure. >>> Press Start / Pause / Cancel button to start the programme.
- Water tank is full. >>> Drain the water tank.

Laundry has shrunk, become felted or deteriorated.

- A programme suitable for the laundry type is not used. >>> Check the garment tag and select a programme suitable for the fabric type.

Drum lighting does not turn on. (On models with lamp)

- Dryer is not switched on with the On / Off button. >>> Make sure that the dryer is switched on.
- Lamp is defective. >>> Call Authorized Service Agent to have the lamp replaced.

End/Anti-creasing symbol is on.

- Anti-creasing programme is activated in order to prevent laundry that has remained in the machine from creasing. >>> Turn off the dryer and take out the laundry.

End symbol is on.

- Programme is over. Turn off the dryer and take out the laundry.

Lint Filter Cleaning symbol is on.

- Lint filter is not cleaned. >>> Clean the lint filter.

Lint Filter Cleaning symbol is flashing.

- Filter housing is clogged with lints. >>> Clean the lint filter housing.
- A deposit has built up on the lint filter pores that may cause clogging. >>> Wash the lint filter with warm water.
- Filter drawer is clogged. >>> Clean the sponge and the filter cloth in the filter drawer.

Water leaks from the loading door

- Lint has accumulated on the inner surfaces of the loading door and on the surfaces of the loading door gasket. >>> Clean the inner surfaces of the loading door and the surfaces of the loading door gasket.

Loading door opens spontaneously.

- Loading door is ajar. >>> Push the loading door to close until you hear a locking sound.
- Water Tank warning symbol is on/flashing.

- Water tank is full. >>> Drain the water tank.
- Water draining hose is bent. >>> If the product is connected directly to a wastewater drain, check the water drain hose.

Filter Drawer Cleaning warning symbol is flashing.

- Filter drawer is not cleaned. >>> Clean the sponge and the filter cloth in the filter drawer.



If you cannot eliminate the problem although you follow the instructions in this section, consult your dealer or the Authorized Service Agent. Never try to repair a nonfunctional product yourself.



Troubleshooting information related to HomeWhiz function is in the HomeWhiz function section.

DECLARATION OF CONFORMITY

Name of the Manufacturer : Arçelik A.Ş. Çamaşır Kurutma Makinesi İşletmesi
Address of the Manufacturer : Org.San.Bol.Ataturk Cad.8.Sk.No:6 59500 Cerkezoy/Tekirdag/Turkey
Contact information of the Manufacturer : +90 282 736 5360
Authorized Person of the Manufacturer : Barış Tekdemir

Concerning the European directives and regulations for electrical and electronic equipment listed in this document,

We, Arçelik A.Ş., hereby declare and take the sole responsibility that the product below, to which this declaration is involved,

Type of Product : **Tumble Dryer**
Brand Name : **ARCELIK**
Product Identity Code : **3886 CNT**
Product Model Code : **H958H22**

fulfills the requirements of the following directives and the related regulations;

- the low-voltage directive 2006/95/EC
- the emc directive 2004/108/EC
- the R&TTE directive 1999/5/EC
- the ErP directive 2009/125/EC
- the standby regulation 1275/2008
- the RoHS directive 2011/65/EU

and is in conformity with the relevant harmonized standards listed below:

- EN 60335-1:2012+AC:2014+A11:2014
- EN 60335-1/A15 (VDE 0700-1/A15):2012-03; EN 60335-1/A15:2011
- EN 60335-2-11:2010 +A11:2012
- EN 60335-2-11 (VDE 0700-11):2011-04
- EN 62233 (VDE 0700-366):2008-11
- EN 62233:2008
- EN 62233 Ber.1 (VDE 0700 - 366 Ber.1):2009-04
- EN 62233 Ber.1:2008
- EN 55014-1:2006+A1:2009+A2:2011
- EN 55014-2:1997+A1:2001+A2:2008 / AC:1997
- EN 61000-3-2:2006+A1:2009+A2:2009
- EN 61000-3-3:2013
- EN 50564:2011
- EN 61121:2013
- EN 50581:2012
- EN 301489 1 V1.9.2:2011 / EN 301489 17 V2.2.1:2012

Tekirdağ, TURKEY & 21.04.2016

Place and Date

Barış Tekdemir
R&D Manager



The Year CE declaration is implemented on the product is 2014

name, surname, position and signature or
the equal data of the authorized person