



Quick Guide

Operating the product

! Read “Safety Instructions” section first!

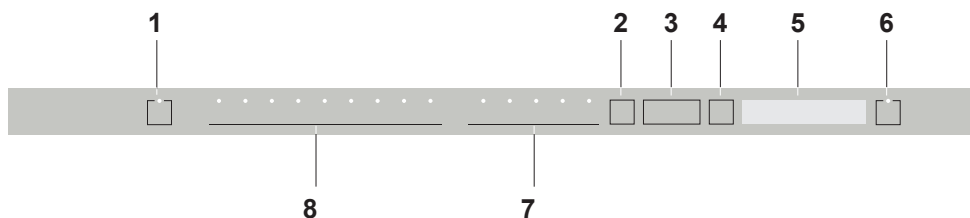

- | | |
|---------------------------------|-----------------------------|
| 1. On / Off Key | 7. Function Selection Keys |
| 2. Menu Key | F1 Hygiene Care function |
| 3. Time Delay Selection | F2 Steam Shine Function |
| / Menu Direction Selection Keys | F3 TrayMaster Función |
| 4. Selection / Confirmation Key | F4 Express Function |
| 5. Display | |
| 6. Start / Pause / Cancel Key | 8. Programme Selection Keys |

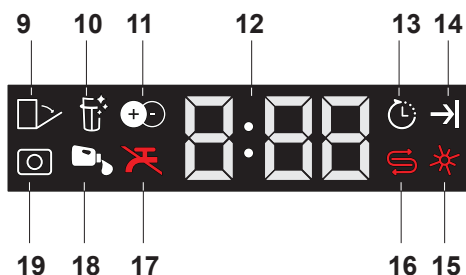

- | | |
|---|--|
| 9. Auto Door Open Indicator (depends on the model) | |
| 10. Filter Cleaning Function Indicator (depends on the model) | |
| 11. IonFresh Function Indicator (depends on the model) | |
| 12. Delay Time / Programme Time Indicator | |
| 13. Delayed Start Indicator | |
| 14. End of Programme Indicator | |
| 15. Rinse Aid Indicator | |
| 16. Salt Indicator | |
| 17. Water Cut-off Indicator | |
| 18. Liquid Detergent Dosing Indicator (depends on the model) | |
| 19. Tablet Detergent Indicator (depends on the model) | |

Programme Data and Average Consumption Values Table								
Programme number	1	2	3	4	5	6	7	8
Programme name	Auto	All-in-Wash	Intensive	Eco *	Delicate	QuickWash (#)	Mini (#)	Prewash
Cleaning temperature	40 °C-65 °C It determines the soiling degree of the dishes and sets the temperature and amount of the washing water as well as the washing time automatically. It is suitable for all dish types.	- It is the most suitable washing programme for daily mixed dishes including plastic items. While delicate glass items are washed in the upper basket, pans and trays can be washed in the lower basket.	70 °C It is suitable for heavily soiled pans and trays.	50 °C Suitable for washing dishes with normal amount of soil. It is the most efficient program in terms of combined power and water consumption. This is used for assessing the compliance with EU's eco-design directive.	40 °C Special programme for gentle cleaning of delicate glassware.	60 °C It is the daily washing programme to wash the normally soiled left dishes in the fastest way.	35 °C It is suitable for quickly washing the lightly soiled dishes that have undergone pre-cleaning process.	- It is suitable to remove the rough remnants on the dishes to be left in the dishwasher. It also prevents odour formation inside the machine.
Degree of Soiling	Medium to high +	Medium +	High +	Medium +	Low +	Medium -	Low -	- +
	+	+	+	+	+	+	+	-
	+	+	+	+	+	+	-	-
Duration (min)	118-196	257	224	239	156	58	30	15
Water (l)	9,4-12,4	19,0	16,8	9,9	14,4	10,6	10,8	4
Energy (kWh)	0,90-1,45	1,53	1,51	0,503	0,92	1,18	0,8	-

Loading Capacity: 16

The consumption values shown in the table were determined under standard conditions. Differences may therefore occur under practical conditions. * Reference programme for testing institutes. The tests in accordance with EN 50242/60436 must be carried out with a full water softener salt dispenser and a full rinse aid reservoir, and using the test programme. The values given for programmes other than Eco 50°C programme are indicative only. (#) Additional functions might cause changes in programme durations.

Quick Guide

Adjusting the water softening system

Washing, rinsing and drying performance of your dishwasher will improve when the water softening system is adjusted correctly.

To adjust the system, first learn the water hardness in your region and adjust as indicated below.

- Unpack the test strip.
 - Open the tap and let the water flow for approx. 1 minute.
 - Dip in the test strip into the water for 1 second.
 - Take out the strip from the water and shake it.
 - Wait for 1 minute.
 - Make the necessary adjustment according to the test strip.
- | Level 0 |  |
|---------|--|
| Level 1 |  |
| Level 2 |  |
| Level 3 |  |
| Level 4 |  |
| Level 5 |  |

After detecting the water hardness:

1. After switching on your machine, press and hold the Menu key for 3 seconds.

i Some models require pressing Menu key once to enter settings menu

2. Using <- and >+> keys, proceed until the water hardness setting indicator becomes on ("r" position will be displayed).


3. Using the Selection key, adjust water hardness level according to the hardness of the supply water. For correct setting please see "Water hardness level setting table".

4. Press On / Off key to save the setting.

Water hardness level adjustment table

Hardness Level	English Water Hardness °dE	German Water Hardness °dH	French* Water Hardness °dF	Water Hardness Level Indicator
Level 0 	0-5	0-4	0-8	Press the Selection key to switch the water hardness level to position 1. (r1)
Level 1 	6-9	5-7	9-13	
Level 2 	10-15	8-12	14-22	Press the Selection key to switch the water hardness level to position 2. (r2)
Level 3 	16-19	13-15	23-27	Press the Selection key to switch the water hardness level to position 3. (r3)
Level 4 	20-24	16-19	28-34	Press the Selection key to switch the water hardness level to position 4. (r4)
Level 5 	25-62	20-50	35-90	Press the Selection key to switch the water hardness level to position 5. (r5)

Perform the same hardness level adjustment that you have set on the control panel also with the regeneration adjustment switch. For example, if you have adjusted to "3" in the control panel, also set the regeneration adjustment switch to 3.

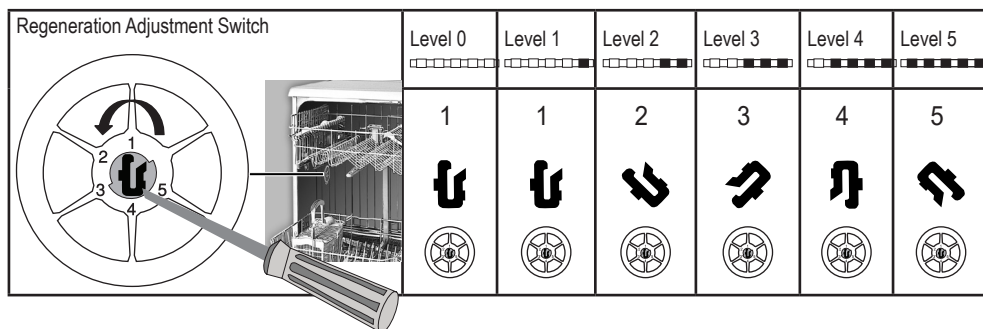

- If the hardness level of the water that you use is above 50°dH or if you are using well water, than it is recommended to use filter and water purification devices.
 - If the hardness level of the water that you use is below 7°dH, there is no need to use salt in your dishwasher. In this case, the Salt Indicator light on the control panel of your dishwasher will light continuously.
 - If the water hardness is set to level 1, the Salt Indicator will light continuously although it is not necessary to use salt. If you use salt under this condition, salt will not be consumed and the lamp will not illuminate.
- i** When moving, you will need to set the water hardness level of your dishwasher again according to the information above, depending on the water hardness of the place you have moved to. If the water hardness level of your machine is adjusted previously, your machine will display the most recent hardness level adjustment.

Heat Pump System Failure (E26)

Confirm the message by pressing any key. The appliance is ready to be operated. Heat Pump system is not used.

Heat Pump Warning

Confirm the message by pressing any key. If the ambient temperature is below the specified temperature, the heat pump is deactivated and the heating resistor is activated.

! Read the heat pump section under the safety warnings in the operation manual first.

- i** Power consumption and program duration of your product varies as per the ambient temperature.
- i** The compressor and the heating resistor may activate under conditions at and below 15 degrees.
- i** You shall be informed with the warning symbol when the heating resistor is activated.
- i** Heat pump system is deactivated when the heating resistor is activated.