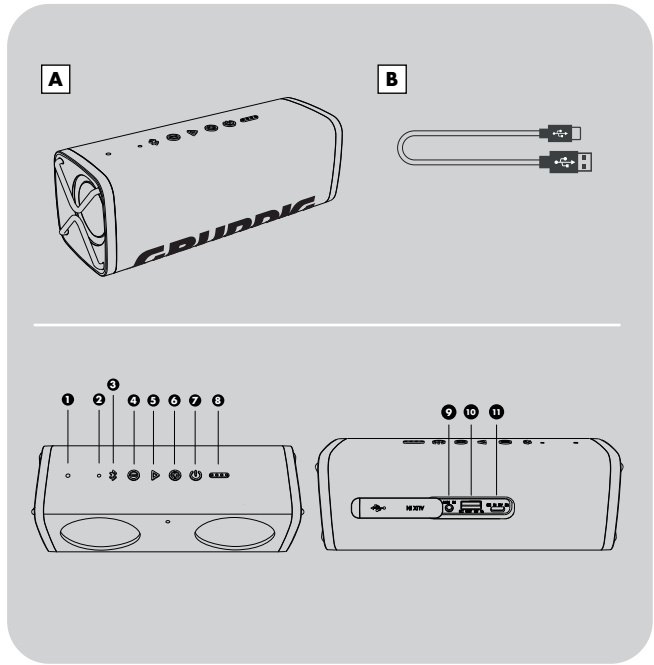




A Grundig Club

1. Mikrofon
2. LED-Anzeige
3. Bluetooth
4. Leiser
5. Wiedergabe/Pause
6. Lauter
7. Ein-/Ausschalten
8. Batterie LED-Anzeige
9. AUX-Eingang
10. DC out (USB A)
11. DC in (USB C)

B USB-C Kabel

A Grundig Club

1. Microphone
2. Indicateur LED
3. Bluetooth
4. Réduire le volume
5. Lecture/Pause
6. Augmenter le volume
7. Marche/Arrêt
8. Indicateurs LED de batterie
9. Entrée auxiliaire
10. DC out (USB A)
11. DC in (USB C)

B Câble USB-C

A Grundig Club

1. Mikrofon
2. Wskaźnik LED
3. Bluetooth
4. Zmniejszanie głośności
5. Odtwarzanie/pauza
6. Zwiększanie głośności
7. Wł./wył. zasilania
8. Wskaźnik LED baterii
9. Wejście AUX
10. DC out (USB A)
11. DC in (USB C)

B Kabel USB-C

- A** Grundig Club
 - 1. Microphone
 - 2. LED Indicator
 - 3. Bluetooth
 - 4. Volume Down
 - 5. Play/Pause
 - 6. Volume Up
 - 7. Power on/off
 - 8. Battery LED Indicator
 - 9. AUX in
 - 10. DC out (USB A)
 - 11. DC in (USB C)
- B** USB-C Cable

A Grundig Club

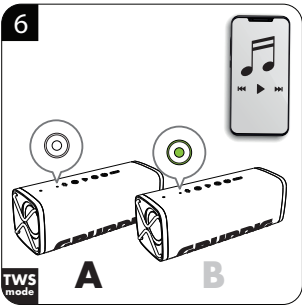
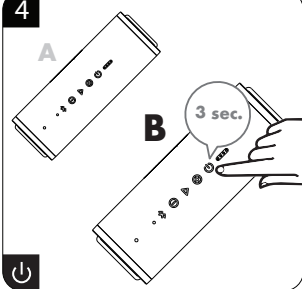
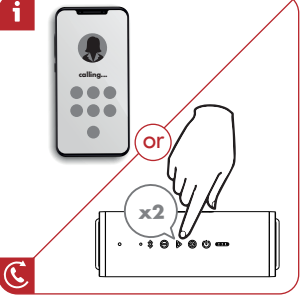
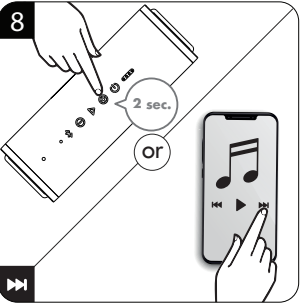
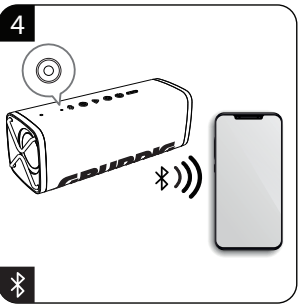
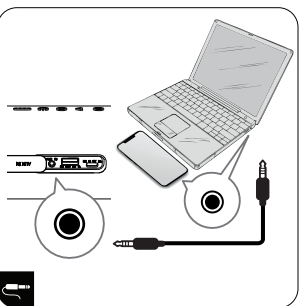
1. Micrófono
2. Indicador LED
3. Bluetooth
4. Bajar volumen
5. Reproducir/Pausa
6. Subir volumen
7. Encendido/Apagado
8. Indicador led de batería
9. Entrada AUX
10. DC out (USB A)
11. DC in (USB C)

B Cable USB-C

A Grundig Club

1. Mikrofon
2. LED Gösterge
3. Bluetooth
4. Sesi Kıs
5. Oynat/Duraklat
6. Sesi Aç
7. Açma/Kapama
8. Pil LED Göstergesi
9. AUX Girişi
10. DC out (USB A)
11. DC in (USB C)

B USB-C Kablo su

[illegible]