



Contact Grill

User Manual



TM 6206 G

EN



01M-8913181100-1022-06

Please read this user manual first!

Dear Valued Customer,

Thank you for preferring this Arçelik appliance. We hope that you get the best results from your appliance which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the appliance and keep it as a reference for future use. If you handover the appliance to someone else, give the user manual as well. Follow the instructions by paying attention to all the information and warnings in the user manual.

Meanings of the symbols

Following symbols are used in various sections of this manual:



Important information and useful hints about usage.



Warning for hazardous situations with regard to life and property.



Warning for electric shock.



Warning for hot surfaces.



CONTENT

ENGLISH

4-17

Important safety and environmental instructions

This section contains safety instructions that will help protect from risk of personal injury or material damage.

Failure to follow these instructions voids any granted warranty.

1.1 General safety

- This appliance complies with international safety standards.
- This appliance may be used by children who are at the age of 8 or over and the people whose physical, perceptive or mental skills are impaired or who are inexperienced or not knowledgeable about the appliance as long as they are supervised or informed and made understood the safe use of the appliance and the encountered dangers. Children should not play with the appliance.
- Cleaning and maintenance should not be performed by children unless they are older than 8 years old and supervised.
- Keep the appliance and its power cable so that they are inaccessible by children under 8 years old.

1**Important safety and environmental instructions**

- If the power cable or the appliance itself is damaged, do not use it. Contact an authorised service.
- Your mains power supply should comply with the information supplied on the rating plate of the appliance.
- For additional protection, this appliance should be connected to a residual current device with a rating of no more than 30 mA.
- Use the appliance with a grounded outlet.
- Do not use the appliance with an extension cable.
- Prevent damage to the power cable by not squeezing, bending, or rubbing it on sharp edges.
- Do not touch the plug of the appliance with damp or wet hands.
- Do not immerse the appliance or its power cable in water.
- Do not leave the appliance unattended while it is plugged in.
- Exterior surface gets hot while the appliance is in use. Do not touch hot surfaces to avoid risk of burning.

1

Important safety and environmental instructions

- Do not leave metal cooking utensils and items on cooking plates.
- Operate and store the appliance on a stable surface.
- Do not attempt to dismantle the appliance.
- Only use the original parts or parts recommended by the manufacturer.
- Unplug the appliance before cleaning and let it completely dry after cleaning.
- Clean only the outer surface and the plates according to the instructions in the Cleaning and Care chapter.
- The appliance is not suitable for outdoor use.
- The appliance should not be operated with an external clock timer or separate remote control system.
- Food items can catch fire due to overheating. Do not allow the appliance to get in contact or be covered with flammable items such as curtains, fabric, wall panels and etc.
- Never use the appliance in or near places where combustible or inflammable ambience or places are present.

1

Important safety and environmental instructions

- Do not use charcoal or similar flammable fuels with this appliance.
- If you keep the packaging materials, store them out of the reach of children.

1.2 Compliance with the WEEE Regulations and Waste Disposal

This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).



This symbol indicates that this product shall not be disposed with other household wastes at the end of its service life. Used device must be returned to official collection point for recycling of electrical and electronic devices. To find these collection systems please contact to your local authorities or retailer where the product was purchased. Each household performs important role in recovering and recycling of old appliance. Appropriate disposal of used appliance helps prevent potential negative consequences for the environment and human health..

1.3 Compliance with RoHS Directive

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

1.4 Package information



Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.



1.5 Things to do for energy saving

Switch off and unplug the appliance after using it. Select appropriate temperatures when cooking your food.

2 Your contact grill

2.1 Overview



1. Handle
2. Locking slider
(On  / Off )
3. Oil flow channel (2 units)
4. Thermostat button
5. Thermostat light
6. Cooking plates - Grill surface
7. Cooking plates - Flat surface
8. Oil collecting reservoir (2 units)

2.2 Technical data

Power supply:

220-240 V ~, 50/60 Hz

Power: 2000 W

Technical and design modification rights are reserved.

The values which are declared in the markings affixed on your appliance or the other printed documents supplied with it represent the values which were obtained in the laboratories pursuant to the pertinent standards. These values may vary according to the usage of the appliance and ambient conditions.

3 Operation

3.1 Intended use

This appliance is intended only for household use and cooking; it is not suitable for professional use.

3.2 Initial use

Since smoke may be emitted during first use, operate the product with no load and make sure that the room is well-ventilated.

3.3 Starting the appliance



WARNING: Make sure that both cooking plates (6/7) are fitted before operating the appliance.

1. Plug in the appliance.
2. Push the locking slider (2) down to position "G".
3. Set the thermostat button (4) which is at position "0" to the desired cooking position.

3.4 Toasting and grilling

1. Set the thermostat button (4) to the desired temperature position (1-4).
 - Thermostat light (5) lights up in red and goes off when the set temperature is attained.



Cooking plates will not start heating between position "0" and "1".

2. Hold the upper lid from the handle (1) and open upwards.
3. Toast or grill in the desired position.
 - Place the food on the cooking plate(s) (6/7).

Plates closed

This position is suitable to use upper and lower cooking plates (6/7) in closed position when grilling. It is preferable to prepare sandwiches, toast/sandwich toast, pizza, waffle, burgers etc.

3 Operation



Thermostat must be set to temperature position "4" for grilling.

Plates of the appliance are in grill oven position

This position must be preferred for foods that should not be pressed as in toasts but require to be heated from above too.

- When the upper lid is in 90° position, pull it upwards from its handle (1) and recline towards the front.
- Repeat these steps in reverse order to close again.

Plates half-open

It must be used to cook on the lower cooking plate (6/7).

- Lift the upper lid (1) from the handle and leave it at 90° position.



WARNING: Upper cooking plate is hot (6/7).

Two plates in horizontal position

This position provides two large grilling areas. It must be preferred for cooking sausages, steak, fish, vegetables etc.

- When the upper lid is in 90° position, pull it upwards from its handle (1) and recline backwards until it attains horizontal position.
- Repeat these steps in reverse order to close again.



WARNING: Use cutlery which are wooden or made of heat-resistant plastic to turn the food or take the food from the cooking plates.

4. When the cooking procedure is complete, take the food from the plate(s) by lifting upper lid from the handle (1) in closed or half-closed position.

3 Operation



WARNING: Be very careful when taking the food from the appliance; metal parts of the appliance and the food itself can be very hot.

5. Set the thermostat button (4) to position "0".
6. Unplug the appliance and wait for it to cool down.
7. Hold the upper lid from the handle (1) to close.

3.5 Oil collection containers

- Use oil collection containers (8) for foods that may release fats or other liquids.
 - Both plates of the appliance are equipped with oil flow channels (3).
 - Use one oil collection container (8) when the plates are in closed position and two when they are in open position.
1. Place oil collection container(s) (8) under the oil flow channel(s) (3) (see 2.1, figure 9).
 2. Take out and clean the oil collection containers (8) at the end of the operation (see 4.2).

3 Operation

3.6 Detaching / attaching the plates



WARNING: Make sure that the appliance is completely cold before touching the cooking plates (6/7). Do not touch the cooking plates when hot.

1. Hold the upper lid from the handle (1) to open.
2. Push the plate locking latches located on the front side of the lower and upper cooking plates (6/7).
 - Remove the plates by hand.
3. To attach the cooking plates (6/7) again, place the cooking plates into the seats at the inner-back section of the appliance and seat them in place.

3.7 Double-sided cast cooking plates

Cooking plates (6/7) can be used double sided in flat and grill positions. You can use flat side of the plate to cook eggs.

3 Operation

3.8 Cooking setting and durations

Thermostat settings and approximate cooking durations for certain foods are provided on the lid of the appliance.

Food to Cook	Cooking Level	Recommended Serigraphy Duration
 Toasting Bread	4	(2-4 mins.)
 Toast Sandwiches	4	(5-7 mins.)
 Cooking Sausages	3	(8-10 mins.)
 Hamburger Patty	3	(6-8 mins.)
 Skewer (Red)	4	(8-12 mins.)
 Steak (Red)	4	(11-14 mins.)
 Cooking Chicken	4	(10-13 mins.)
 Cooking Fish	3	(15-20 mins.)

3 Operation



WARNING :

Cooking times on the cover of the appliance are recommended for grill oven position.



WARNING: Cooking durations may vary depending on the food type, voltage fluctuations, environmental conditions and cooking position of the appliance.

4 Cleaning and care

4.1 Cleaning

1. Set the appliance to "O" position and unplug it.
 2. Wait for the appliance to cool down completely.
 3. Remove the cooking plates (6/7). (see 3.5).
- Use a damp cloth to clean the outer surface of the appliance. Dry off the outer surface thoroughly.
 - You can keep the cooking plates (6/7) in lukewarm water for about 5 minutes and then clean them with some dishwashing liquid and a soft sponge.
 - You can wipe the inner body section where plates are attached with a slightly damp cloth.



Never let electrical parts contact water or get damp.



When cleaning the cooking plates (6/7), use only a sponge or a soft cloth not to damage the non-stick coating.



WARNING: Do not wash the cooking plates (6/7) in dishwasher.

- Dry all parts with a soft towel before starting to use the appliance after cleaning it.



WARNING: White water stains may form on the cooking plates if left wet.



WARNING: Never use gasoline, solvent, abrasive cleaning agents, metal objects or hard brushes to clean the appliance.




Clean the appliance after each use to prevent bacterial growth and to have it well-kept.

4 Cleaning and care



WARNING: It is recommended to clean the cooking plates after they have cooled down after each cooking process in order to facilitate cleaning.

4.2 Storage

- Unplug the appliance and let it cool down before storing it.
- Hold and close the upper lid from the handle (1) and set the locking slider (2) to position “”.
- You can store the appliance in the upright position.
- If you do not intend to use the appliance for a long time, store it carefully.
- Store the appliance in a cool and dry place.
- Keep the appliance and cable out of the reach of children.

4.3 Handling and transportation

- During handling and transportation, carry the appliance in its original packaging. The packaging of the appliance protects it against physical damages.
- Do not place heavy loads on the appliance or on the packaging. The appliance may get damaged.
- Dropping the appliance may render it non-operational or cause permanent damage.