


Before using your Vacuum Cleaner please read this manual carefully and keep it for future reference.

Vacuum Cleaner User Manual

MODEL: DWVC 7500

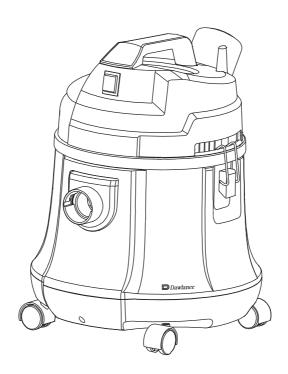


Read This Manual

Inside you will find many helpful hints on how to use and maintain your Vacuum Cleaner properly. Just a little preventation care on your part can save you a great deal of time and money over the life of your Vacuum Cleaner. You'll find many answers to common problems in the chart of troubleshooting tips. If you review the chart of troubleshooting tips first, you may not need to call for service.

Characteristic:

Dry & wet dual purpose
Safety protection device to ensure normal work of the motor.
Base with jack to store accessories easily.
Blow function to satisfy different people's requirement.

Name of Parts:

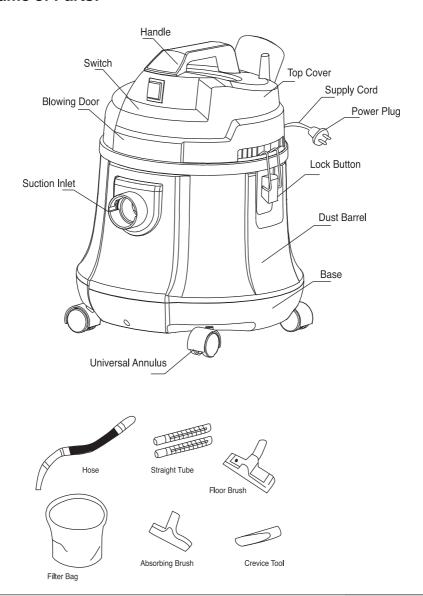

You can choose suitable accessories for different conditions.

Bristle Brush
 For cleaning the dust on hard floor or the carpet.

Rubber Brush
 For cleaning the water on hard floor or the carpet.





• Crevice Brush
For cleaning corner edges and drawers etc. where it is difficult to clean.





Blowing Door
 For blowing the dust in the gap.

Warning:

- 1. Read this instruction booklet carefully.
- This appliance is for domestic use only. Use it as described in this instruction booklet.
- 3. Before using the appliance, check that the mains power voltage corresponds to the voltage shown on the rating plate.
- 4. It is class II electric appliance, so it needs not to be earthed.
- 5. Do not use it in the flammable and explosive place. (Fig.1)
- 6. Do not block the flow of air. Blocking the air suction or exit may damage the motor. (Fig.2)

 




Fig.2

- 7. Do not use the appliance to vacuum all the below things:
- Lighted stub, hot ashes and other combustible things. (Fig.3)



Fig.3



Fig.4

- Matter with oil content. (Fig.4)
- Sharp matter. (Fig.5)



Fig.5



Fig.6

- Those tiny powder, like powder of lime, land of plaster etc, may block the filter bag and the flow of air. It may damage the motor. (Fig.6)
- Those things that can produce lather like washing powder, cleanser etc. There may be some bubble blowing from the air exit. Please dry it first and then restart it.
- 8. Do not turnover the Vacuum Cleaner. Otherwise the water may enter the motor to damage it. (Fig.7)
- · Do not use the appliance as a lift pump.
- · We suggest you do not use it as a producer's equipment.







- 9. Always remove the plug from the power socket when the appliance is not in use and before carrying out any cleaning or maintenance operation.
- 10. Keep the Vacuum Cleaner away from direct sunlight and the place with high temperature. Heat can deform and discolor the plastic parts of the unit. (Fig.8)
- 11. Check the hose periodically. Replace it in time if there is damage of any kind. (Fig.9)



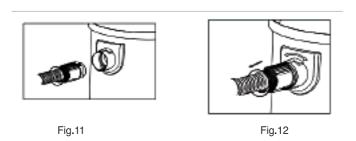


Fig.10

- 12. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. (Fig. 10)
- 13. Never use methylated spirits or other solvents to clean the appliance.
- 14. Never leave the appliance unattended when it is switched on. Keep the appliance out of the reach of children or infants.
- 15. Do not switch the appliance on if it appears to be faulty in any way.
- 16. Do not remove the plug from the socket by pulling the cable or the appliance itself.
- 17. This appliance can be used by children aged from 12 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 18. Keep the appliance and its cord out of reach of children less than 12 years old.


How to use:

- 1. Prepare for use connection:
- Insert the flexible tube in to the air intake duct. To do this, slide intake duct cover, insert the tube and press until it clicks into the position. (Fig.11)
 To remove it, press down the button and pull out the hose. (Fig.12)



To use the blow function, just need to plug the hose into blowing door.

· Connect the flexible tube, extensive tube and accessories correctly.

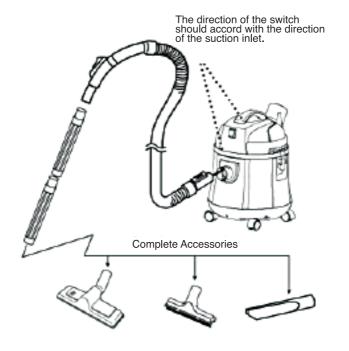

2. Switch on the appliance:

Before use please check the filter bag is installed. The Vaccum Cleaner will not work without the filter bag.

• Press the ON/OFF button to switch the appliance on. (Fig.13)


 


Fig.13

 Change the air power control knob on the handle adjusts the suction. The greater air door, the lesser the suction.



3. Please take off the dust bag when using for the wet function.



4. Assemble 4 universal wheels at the bottom.



Safety Device:

- When the Vacuum Cleaner is filled with water in the dust barrel, the float will rise and the
 appliance will stop working. In addition to this you will hear an abnormal sound. If the power
 supply hasn't been cut off yet, immediately cut off the power supply and spill the water in the
 barrel. Once done restart the machine.
- When the vacuum is overturned, the float will risen. In that case, cut off the power supply and position the vaccum in the upright position.
- If you run the vacuum or leave it alone while the float is risen, it may damage the motor and lead to fire.

Maintenance:

1. Clean the dust barrel:

When finishing cleaning or when the suction has decreased, cut off the power supply and empty the barrel.

Refer to the following steps:

- (1) Release the lock button and lift the top cover. (Fig.14)
- (2) First remove the filter bag, hold the center edge of the bag and shake it around 20 times up and down. (Fig.15)







Fig.14

Fig.15

- (3) Remove the filter bag and clean the dust in the barrel. (Fig.16)
- (4) Replace the bag and the top cover. (Fig.17)

 


Fig.16



Fig.17

If you do not empty the barrel in time, the dust in the barrel will start to smell. It is recommended to clean the barrel periodically. Before using again, dry the barrel completely.

- 2. Clean the filter:
 - If the filter bag is blocked badly, clean it with water. If you need, you can use some neutral or mild cleanser to clean the bag.
- (1) Remove the filter bag.
- (2) Clean it. (Fig.18)
- (3) Dry it. (Fig.19)

After drying it, replace it according to the primary steps.

Do not use boiled water to clean it or dry it in front of or on top of a fire.

3. Clean the Vacuum Cleaner and the accessories.



- Clean the accessories and the vacuum with soft cloth dipping it in water or neutral/mild cleanser. (Fig.20)
- (1) Do not clean the body of Vacuum Cleaner with substances such as petrol or oil-like liquid. Please wipe it with water or neutral detergents.
- (2) Wipe the applaince with a soft moist cloth.

Remove the dirt or grime adhering to the floor brush with old tooth brush every month. (Fig.21)

 



Fig.20

Fig.21

Troubleshooting:

Trouble	Check part	Resolve
Motor doesn't work	Power plug	If it is not plugged in please plug in.
Suction decrease	Hose	If it is blocked, clean it; if straight tube doesn't connect well, connect it well.
	Dust barrel	If it is full of water, empty it.
	Filter bag	If it is blocked, clean it.
Hose comes away from the inlet	Hose connection	Plug the hose into the inlet.

 Circuit Diagram:





The widest service center network in the country with more than 200 outlets



Dawlance Reliable service is available for all household products
Services at your doorstep within 24 hours
Call Center Services available all week from 8:30am to 8:30pm

Service UAN # 021-111-11-7359 (RELY)

Head Office: Dawlance Center 7/4, Civil Lines-9

Dr. Ziauddin Ahmed Road, Karachi.

Ph: (021) 35652450-9

E-mail: customer.service@dawlance.com.pk

Website: www.dawlance.com.pk

د اؤلینس ریدئبل با

