


**Dawlance**  
ریلائبل ہے!

**Dawlance**

## Fully Automatic Washing Machine User Manual

DWT 1166 X ADS+

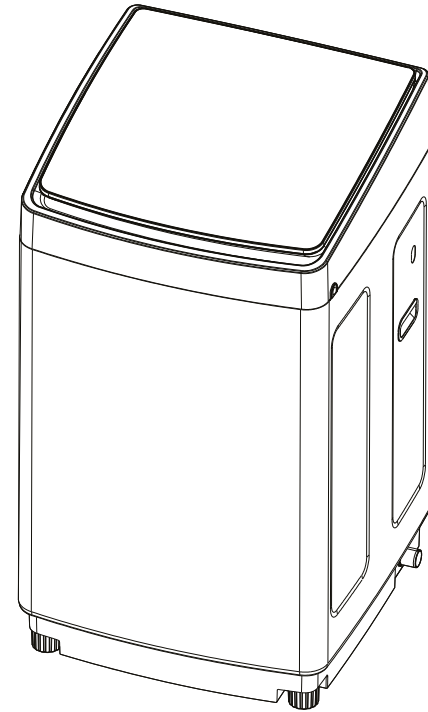

Before operating this unit, please read this manual thoroughly, and retain for future reference.

# Contents

## Before using

Parts name.....	1
Cautions.....	2
Installation and adjustment.....	4
How to use drainpipe.....	5
Water inlet installation.....	6

## Operation


Preparation before operation.....	8
Load laundry.....	9
Use of detergent.....	9
Control panel instructions.....	10
Operation steps.....	12
Maintenance.....	13
Troubleshooting.....	14
Other functions.....	16

## Specifications

Model	DWT 1166 X ADS+
Rated voltage and frequency	220V~50Hz
Water level/water volume (about)	65 Litre
Product dimension (WxDxH)	560x560x965 (mm)
Rated input power-rated voltage	Refer to Specification Label
Inlet Pressure	0.03 MPa- 0.3MPa

# Parts name

Before using

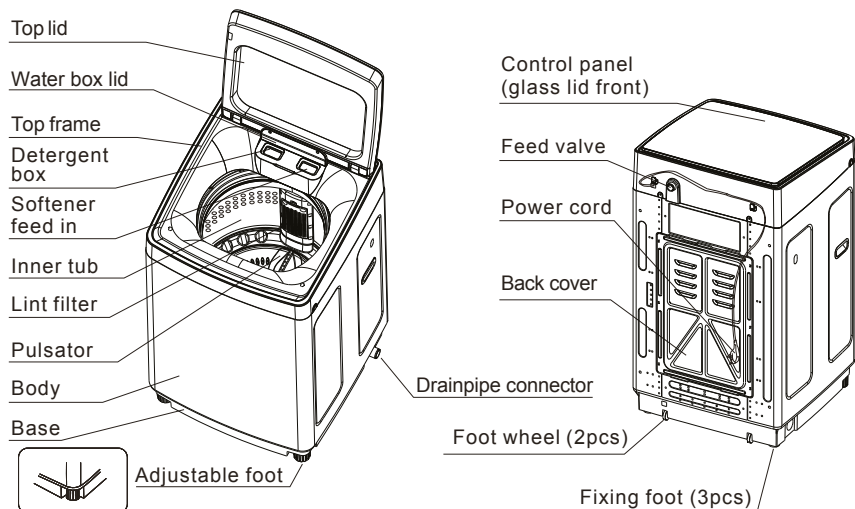

## Accessories

	 The end connecting to the appliance Connector for water inlet hose and tap The end connecting to water inlet hose connector	
Bottom cover (1pc)	Water inlet hose (1pc) Water inlet hose connector (1pc)	Drainpipe (1pc) Drainpipe clip (1pc)

## Symbol definition

Warning symbols 	Pay special attention to the warning symbols. There may be serious risks to personal body safety or damages to the washing machine, if not followed.
Forbidden symbols 	Please stop doing the contents with this symbol, otherwise it will damage the appliance or injure your body.

# Cautions

Before using

<p>Please insert the plug into the power socket with voltage rating 220V A/C.</p>	<p>Always unplug the appliance and turn off the water when the power is cut, the machine is moving, getting cleaned, or it is not in use. Do not insert or pull off the plug with wet hands.</p>
<p>Do not bend, stretch, twist, strap, change, press or rip the electric cable. If the electric cable or plug is damaged or the socket becomes loose, they must be repaired or changed by our appointed repair stations or the professionals of our post-sale service department to avoid danger. The pin of the plug must remain clean. Please clean it carefully with dry cloth, if it is dirty.</p>	<p>Do not install the washing machine in the bathroom or any other damp places. Do not wash the machine with water and do not put wet clothes on the control panel film.</p>
<p>Do not use water hotter than 50°C.</p>	<p>If the machine is placed on a carpeted floor, please adjust the feet in order to allow air to circulate freely.</p>
<p>Do not wash raincoat, bike cover, feather dress and such waterproof laundry as it will cause unusual vibrations during spinning.</p>	<p>Do not share the same socket with other electric appliances. Do not use a damaged plug or a loose socket.</p>

# Cautions

## Before using

Do not put your hands inside while the machine is working. It is dangerous even if the speed is very slow. Take special care of the children and forbid them to climb onto the washing machine.




It is dangerous to alter the specifications or attempt to modify this product in any way.



Do not overload the appliance or put any hot items (such as the kettle with hot water) on the washing machine.



Garments, which have been in contact with volatile petroleum products, should not be washed in the machine.

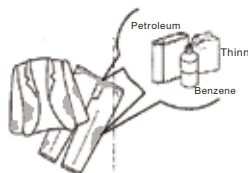

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge. Unless, they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.



Keep the appliance away from direct sunlight and heat sources like the heater.



Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp materials can cause extensive damage and must not be placed in the machine.



- Before washing, please ensure the tap is open and the inlet hose is installed properly.
- It is suggested to use low foam washing powder.

# Installation and adjustment

## Before using


Please install and adjust the machine according to the requirements of the manual. It is very important for your safety and correct operation.

### Unpacking

- Unpack the carton and take out the bottom panel.
- Open the top lid of the washing machine and take out all of the accessories.
- Remove all wrappers, including the polystyrene base.
- You are advised to keep all of the packaging for reuse, in case the machine is to be transported again.

### Installing the bottom cover


- Let the back of the washing machine incline forward. Then make sure the bottom side cover, with the description sticker, is to the back of the machine. Then inserted into the bottom of the machine, as directed by the direction of the arrows.
- Remove the two fixing clamps using a pair of scissors. Insert them accordingly, into the holes indicated by the blacklines. Gently pull the fixing clamps, make sure they do not come out. Ensure that the bottom cover is fixed on the base.

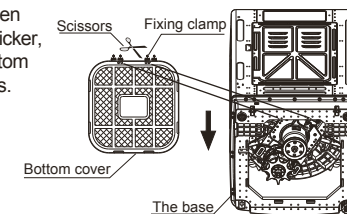


### Positioning

The distance between the washing machine and the wall should be more than 50mm, and the maximum allowed angle of the shank base of the machine is 1°. The slanting or rough ground may cause instability or the operation to stop. Please adjust it with the following methods:

- Make it horizontal  
Use a tied thread with plumb to check if it is horizontal.

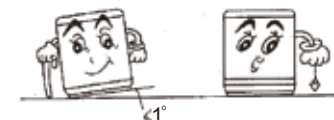

- Adjust the adjustable foot  
1. Lift up the adjustable foot gently, loose the adjustable nut and twist the adjustable foot.  
2. Fasten the nut after adjustment.

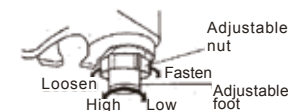

# How to use drainpipe


Before using

## Install drainpipe


Set drainpipe clip into the drainpipe to above 2-3cm (from the drainpipe end without pothook). Now, install the drainpipe into the right drainpipe connector and fix the drainpipe and the drainpipe connector with the clip. After that, put the drainpipe clip on the cabinet.

## How to change the direction of the drainpipe

1. Take off the drainpipe and its clip from the connector. Put a soft mat on the floor & make the washing machine front side down. Now, gently demount the screws on the back cover with a screwdriver and take it out. Demount one screw from the drainpipe connector (on the right side of the washing machine) & loosen it.
2. Extrude the drainpipe with proper force and take out the drainpipe hoop (on right of the washing machine). Loosen the inner drainpipe.

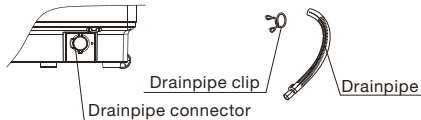


(Section sketch map for washing machine right side)

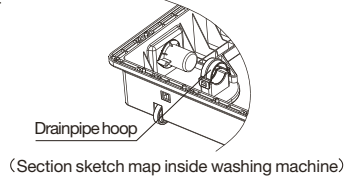

(Section sketch map inside washing machine)

3. With proper force, take down the drainpipe gate stopper on the left side of the washing machine. The drainpipe gate stopper is fixed on the washing machine base with two clips. Please see the fixing type from the place of back cover opening.
4. Pull the inner drainpipe to another side. Please do not make any distortion in the inner pipe; as per the foregoing description, fix inner drainpipe with a drainpipe hoop. With one screw, fix drainpipe connector and install the drainpipe gate stopper to another side. Make the washing machine stand gently and fix the back cover with a screw. Now, install the drainpipe and the drainpipe clip into the drainpipe connector.


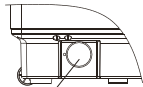


(Section sketch map for washing machine left side)

## Water drainage

The drain hose should drain smoothly.

1. The height of the drain hose should be less than 10cm, otherwise the drainage will not be smooth and would need a long time to drain. The machine may stop, while working.
2. Do not step on or press the drain hose.
4. Purchase a proper hose, if you need an additional one. Its diameter should not be less than 30mm and the length should not exceed 1.5m.

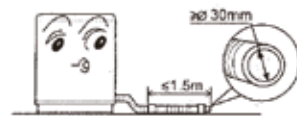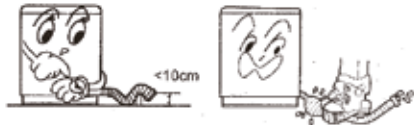

3. Cut the drain hose, if it is too long. Cut the front end of the hose slantingly to make drainage smoothly.




If the additional drain hose is too long, cut some at A or B point.



# Water inlet installation

Before using

## Tap selection

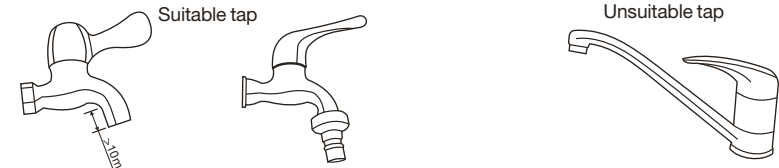

The front end should be longer than 10mm.  
The tap exit end face should be flat and smooth, if not, file it to avoid leakage.

## Connect the inlet hose connector with the tap

1. Press the lower end of the lock lever and push down the slider. Take off the inlet hose connector from the inlet hose, see illustration 1.
2. Loosen the four bolts on the inlet hose connector till the tap can be accessed. Then set the inlet hose connector to the tap, see illustration 2. (If the tap caliber is too large and could not fit the inlet hose end, unscrew the four bolts and take out the bushing. The tap exit end must be flat, otherwise it will leak, see illustration 3).

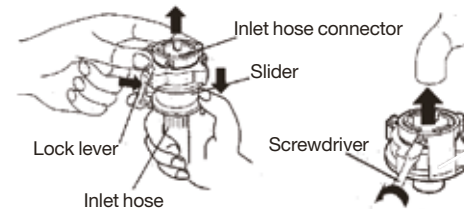


Illustration 1

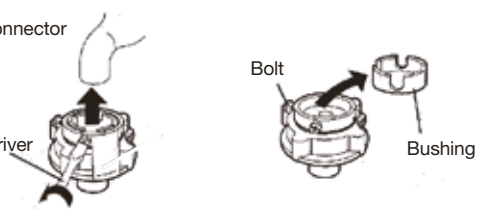


Illustration 2

Illustration 3

3. Fasten the four bolts in the inlet hose connector evenly, see illustration 4.
4. Twist the fastening nut as the illustration, see illustration 5.

Remark: Before twisting the nut, the threading should be about 4mm above the upper surface of the nut. After twisting, the threading becomes less than 2mm above the upper surface of the nut, see illustration 6.



Illustration 4

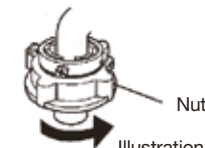


Illustration 5

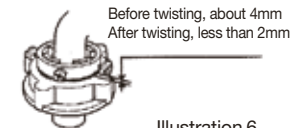



Illustration 6

# Water inlet installation

Before using

## Connect the inlet hose with the washing machine


1. Do not take off the water absorption cushion. Please check if the cushion is dropped or damaged before each use. If it is, contact the seller immediately.
2. Put the inlet hose nut on the inlet valve connector.
3. Fasten the inlet hose nut and swing it gently to make sure it is suitable.

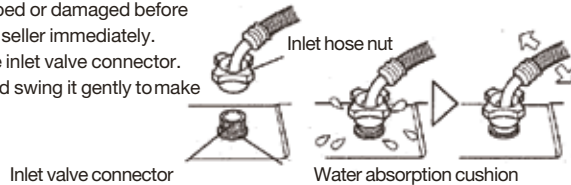

**Cautions:** When installing the washing machine, please use the new hose along with the washing machine. Old hose cannot be reused.


## Connect the inlet hose connector with the inlet hose

1. Push down the slider and insert the inlet hose into the connector.
2. Hang the lock lever to the inlet hose connector and release the slider till a click sound is heard.

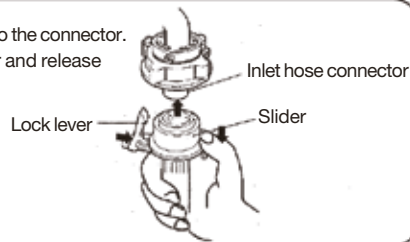


## Check the connection between the inlet hose connector and the tap

1. Swing the inlet hose gently to confirm if it is fastened.
2. After installation, open the tap and check if it leaks.
3. Do not bend the inlet hose with overstrain.
4. Before each usage, check the connection between the inlet hose connector and the tap. Also, make sure that the inlet hose is installed properly. Confirm that they are firmly fitted to prevent dropping from improper installation position.

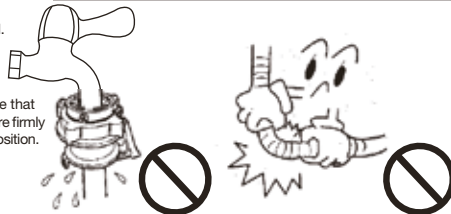

## Dismantle the inlet hose

1. Close the tap.
2. Press the locking lever, push down the slider, and pull off the inlet hose. If the machine is used frequently, the connector of the inlet hose can be kept on the tap to prevent damage to the fixing screw.

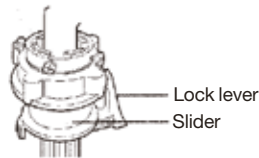


# Preparation before operation

Operation

## Preparation before washing

1. Connect the inlet hose and open the tap.
2. This appliance must be earthed. Confirm the socket is earthed reliably and insert the power plug. The earth terminal should not link to the gas pipeline, tap pipeline etc.
3. Put down the drainpipe.

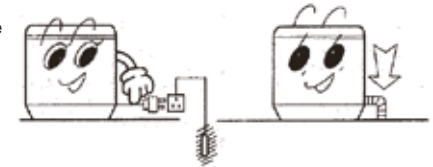

**Warning:** The temperature of the water should be less than 50°C!

Before washing the laundry, please pay attention to the following:

Make sure to be aware if there are any special requirements for the laundry.

Before washing, empty all the pockets of small objects, which may have been left inside (coins, keys, screws etc.) as these could damage the drain pump.



Knot the long band, fasten the buttons and close the zippers.



Do not overload the machine. Load the laundry loosely alternating large items with small ones.



Sort the laundry according to the type of fabric, color-fastness and how dirty it is. Put thin laundry, woollens and such prone to wear and tear laundry into a washing bag.



- A. Make sure the laundry is washable.
- B. It is essential to wash new colored items separately when washing for the first time. White items should not be washed with colored items.
- C. Please immerse the non-absorbable laundry by hand.
- D. Some stains such as fruit, wine, grass, rust etc. are difficult to remove and should be treated before washing with specific products, which can be found in most household shops. In some cases, it may help soak the stain before washing with a special pre-soak product or biological detergent.
- E. Overturn the nap fabric and long floss laundry before putting them into the machine.
- F. Do not put the laundry polluted by chemicals into the machine directly.
- G. Very small items (handkerchiefs, ribbons, socks etc.) should be washed in a washing bag or a pillow case.

## Load laundry

### Operation



- The capacity of washing and spinning of the machine refers to the largest weight of the standard laundry under dry conditions. Washing quantity shall be lower than the rated capacity. The maximum capacity of this machine is 8.0 kg.
- Different thickness, size and type of the laundry will influence the actual washing capacity. It is suitable that the laundry can be turned around normally during washing.
- Do not select high water level when the laundry are less than 1.5 kg to avoid water splashing.

There is no laundry powder input. If the user USES the washing powder. Please follow the instructions and press the "auto drop" button, once after starting up the machine to cancel the auto drop function.

1. Dissolves directly in the washing machine.

- Inject a little water.
- Put in the washing powder and run for about 30 seconds to fully dissolve it.
- Put in the washes and choose the appropriate water level.

2. The instant solution method of washing powder

- Prepare the container and approximately 30°C of warm water.
- Whisk and add the washing powder to dissolve it.

Refer to the instructions of washing powder for the amount of washing powder.

Low foam detergent is recommended.

Please refer to the instructions of washing powder for the dosage of concentrated washing powder.

Notice: Washing powder is easier to pollute than detergent, so use it in moderation.

If the washing powder is of poor quality or has been ineffective for a long time, it may become lumpy. Please pay attention to cleaning the detergent box in time.

### How to use liquid detergent


- Can be directly put into wash bucket. After starting up, press the "auto drop" button once to cancel the auto drop function.
- Auto drop: Open the lid of the water box and pour the detergent into the detergent box (the box can hold about 1.5L) (as shown in the figure below)  
The washing machine will automatically add detergent when the machine is turned on. After putting the clothes and setting the water level, users do not need to add detergent. The washing machine will automatically add detergent according to the water level set by users. When the detergent in the detergent box is insufficient, the washing machine will alarm and prompts the user to add.

### How to use a softener

- Please refer to the product manual for injection amount of softener. Manually add the softener to the washer bucket during the last "rinsing".
- If the softener is put into the softener box through the washer port, please be careful not to exceed the rib in the softener box. The washer will automatically add the softener to the washer bucket during the last rinse.
- Use concentrated softener diluted with 3 times water.

### How to use bleach

- After the water is injected to the specified water level, dilute the bleach in the container and slowly pour into the wash bucket.
- Bleach should not contact the detergent directly. Bleach should be avoided in coloured or patterned clothing.
- Powder - type bleach should be used after dissolving.
- Use method and the amount of bleach should strictly as per the instructions.

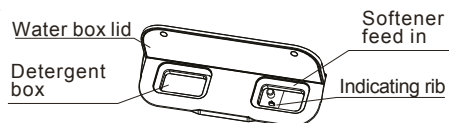


## Control panel instruction

### Operation

#### Mode and meaning of the indicator light

- ☐ The indicator light is always on, indicating that it is not selected.
- ◻ The indicator is flashing, indicating that it has been selected.
- ⚡ The indicator lights flash quickly to indicate that something is wrong.

After selecting the program, water level and other parameters, press this key to start operation. Press this button during operation to suspend operation, and press this button again to continue running until the remaining time is completed.

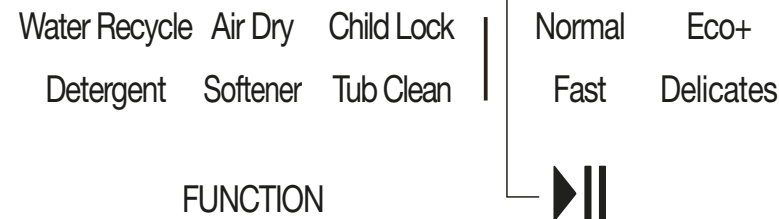

- At the initial state of startup, the detergent lamp is shiny, indicating that the function of automatically putting detergent is selected. Press the function key this time to select detergent, softener, and barrel self-cleaning. Followed by no choice - softener - detergent + softener - tub clean - detergent, the selected will shiny.
- At the initial state of startup, press the function button for more than 2 seconds to switch to the selection of water recycle and air drying, which in turn is water recycle - air drying - no selection. Press the function button for more than 2 seconds again to switch to the above detergent, softener and barrel self-cleaning options.
- After washing machine starts, press function key to select child lock, press again to cancel child lock.

### Water level

- In the process of washing (including rinsing), if you want to fill the water, you can press the "start/stop" key, then press the parameter key to select "water level", then press the "set" key to select higher water level, and then press the "start/stop" key to run, the washing machine will automatically feed water to the set water level, and then continue to run.  
If the changed water level is lower than the current water level in the barrel, the machine will continue running after a pause, and the changed water level will be reflected in the next time the water comes in.
- Automatic filling of water is the process of "soaking", "washing" and "rinsing", if the washing machine detects that the water level drops below the water level by set, the washing machine will be suspended, and automatically rehydrate to set water level and continue operation.

### Initial state

Switch on, press the "power switch" button, and the machine enters the initial state:

- If there is no water in the inner bucket, the machine will in "fuzzy" working state, the detergent lamp is shiny. Wash (default 15 minutes), rinse (default 2 times), spin (default 7 minutes) will twinkle; nixie tube display "- -"; program display "normal". If press "start/pause" directly (press "program" chose "heavy" also have fuzzy function), the machine will fuzzy sensing, sense the amount of clothing automatically. Set water level and finish the whole process of washing.
- If there is water in the inner bucket, the machine will not in "fuzzy" working state, detergent lamp is shiny; wash (default 15 minutes), rinse (default 2 times), spin (default 7 minutes) will twinkle; water level default 7 levels; program display "normal"; nixie tube display water level "7", after 5 seconds display the time of program.

# Control panel instruction

## Operation

- Before washing, the digital timer shows preset time, unit is HOUR.
- If select AIR DRY, the digital timer displays air dry time, unit is MIN.
- Displays 1-10 levels when selecting water level.
- When washing, the digital timer shows the rest time of washing, unit is MIN.
- When trouble encountered, the digital time shows trouble code.
- At the beginning of start, if with FUZZY logic, The digital timer shows "--".



PROGRAM



SELECT

Used to control washing machine in working state or standby state.

- In the initial state of the startup, the program is set to "normal", the normal lamp will shining.
- It can be successively carried out "normal", "spin only", "eco+", "fast", "delicates", "child", "heavy" and "shirts". 8 programs can be choose, selected program lights flashing.

- At the initial state of startup, the light of wash, rinse and spin will shiny and are selected. At this point, press the parameter key to select, which in turn is wash - rinse - spin - water level - soak-pretset - wash + rinse and spin (initial state).
- In the initial state of startup, the setting button is not available. When selecting wash--rinse--spin--water level--soak--pretset by pressing the parameter key, the corresponding washing time, rinsing times, spinning time, water level, soak time and appointment time can be selected by pressing the setting key.
- The washing time option is 15 - 20 - 9 - 12 - 0 cycle. When 0 is selected, the washing process is cancelled; Rinse cycle option is 2 - 3 - 4 - 1 - 0. Select 0 to cancel the rinse process; The spin time is selected as 7 - 9 - 2 - 3 - 5 - 0 cycle. When 0 is selected, the spin process is cancelled; The water level option is 1 to 10; The soaking time option is 0 - 15 - 25 - 35 cycle. Select 0 to cancel the soaking process; The appointment time option is 0 - 2 to 24 loops. When you select 0, cancel the appointment;
- The washing time, rinsing time and spinning time should not select 0 at the same time; The unit of washing time, spinning time and soaking time is minutes; The units of rinsing times: times ; The unit of appointment time: hours. The corresponding, "time and minutes" will be shiny when set.
- Washing time, rinsing times, and spinning time cannot be set when the program selects normal or fast or soft or shirt. Parameters cannot be set when the program selects spin only.

### \*Disclaimer

Saves upto 36% of Detergent on Eco+ program.

Stores upto 15 cycles of detergent while using machine on water level number 4.

# Operation steps

## Operation

### Operation steps

- Put through the power, press POWER SWITCH button, the machine enters into initial condition.
  - If there is no water in the inner bucket, the machine will be in "fuzzy" working state, the detergent lamp is shiny. Wash (default 15 minutes), rinse (default 2 times), spin (default 7 minutes) will twinkle; nixie tube display "--"; program display "normal". If you press "start/pause" - directly (press "program" choose heavy also have "fuzzy" function), the machine in fuzzy will, sense the amount of clothing automatically. Set water level and finish the whole process of washing.
  - If there is water in the inner bucket, the machine will not be in "fuzzy" working state, detergent lamp is shiny; wash (default 15 minutes), rinse (default 2 times), spin (default 7 minutes) will twinkle; water level default 7 levels; program display normal; nixie tube display water level 7, after 5 seconds display the time of program.
- At the initial state of startup, press the "program" key to choose different programs.
- At the initial state of startup, press "parameter" key to choose wash or rinse or spin, then press set key again can choose different washing time or rinsing time or spinning time.
- According to the amount of clothing, press "parameter" key to choose water level, then press "set" key to choose suitable water level.
- At the initial state of startup, press "parameter" to select "soak", and then press "set" to select different soaking time.
- At the initial state of startup, to select the reservation function, press "parameter" to select "preset", and then press "set" to select different appointment times.
- In the initial state, the detergent lamp is shiny, washing machine automatically puts detergent by default. You can also press the "function" key once to cancel this function, and users put the detergent by themselves. When this function is selected, the laundry machine automatically adds detergent according to the water level was set. When the detergent in the detergent box is not enough, the laundry opportunity alarm prompts the user to add.
- In the initial state, press the "function" key to select "detergent (automatic delivery)", "softener", and "tub clean" circulation; hold "function" key more than 2 seconds, can change to "water recycle" and "air dry" selection. Press "function" button for more than 2 seconds again to change to "detergent", "softener" and "tub clean".
- Close the top lid and press the start/stop button to start running. During the operation, press the "function" key once to start the child lock function, and press the function key again to relieve the child lock. If the top lid is opened after starting the child lock function, the washing machine will stop running and alarm.
- When the washing process is over, the buzzer will alarm and the washing machine can be turned off automatically.



## Maintenance methods

### After the end of the programme

- The machine stops automatically, and music the buzzer will remind you to take out the laundry or start again.
- Once you have finished using the machine, you are advised to unplug it and turn off the water tap to avoid unexpected leak or fire.

### External cleaning


Clean the exterior cabinet of the appliance with a soft cloth. Do not use cleanser or volatile chemical materials to clean the machine. These will damage the plastic parts and the surface.



### Magic filter cleaning

1. Pull out the magic filter.
2. Open the box and clean it.
3. Close it and reinstall it.
4. Check if the lint block part is in good condition.

Press this part and pull out to take out the magic filter

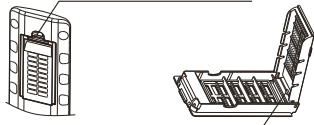

Lint block part (black rubber)

### Clean inlet gate

It is possible that the inlet filter net can be blocked by dust. Please clean it according to the following steps:

1. Close the tap and turn on the power switch.
2. Start the washing machine for 5 seconds (let the water in the inlet hose flows to the tub), and cut off the power supply.
3. Pull off the inlet hose, remove and clean the inlet valve and the inlet net, and install again.



1. Once you have used the machine, you are advised to turn off the water tap. (If necessary, pull out the inlet hose).
2. Do not keep the water in the tub for a long time. When washing is finished, drain it right away.
3. Once you have finished using the machine, you are advised to unplug it.
4. Put the electric cable and the drain hose in order.
5. Wipe the water on the surface and in the tub with a soft cloth and keep the top lid open for a while. It helps prevent mould and stagnant smells from forming inside the appliance.

If the water in the inner tub has possibility to freeze, please do as below:

1. In winter, if the remaining water freezes, it can cause the washing machine trouble. Please take off the water inlet hose and drain out the water from the hose and inner tub.
2. If the water freezes, please don't operate the washing machine. Put 40°C hot water in the tub. The hot water should submerge the pulsator. After a few minutes, rotate the pulsator by hand gently. Now, you can operate the washing machine.

Before contacting the technicians, please make the following checks:

Phenomena	Possible reason
Control panel has no display	Plug is not inserted tightly. No electricity in the socket. Power switch is not turned on. Power supply is cut off.
Inlet hose leaks	Inlet hose connector (connecting with the tap) is not fixed tightly. Inlet hose and washing machine connector is loose.
It does not drain	Drainpipe is not put down. Drainpipe is bended or blocked.
It does not inlet	No water supply. Tap is not open. Inlet hose is blocked.
Spin stops and begins to inlet during spin program	Laundry is too much or too little or the machine is not place stably.
Press the program button to select SPIN, but it does not spin	Do not close the top lid when drain is finished. Open up the top lid when start drain.
The spin is intermittent when spin starts	Balance the laundry to reach to the best spin effect.
First time to use, some water flows from the drainpipe	The remaining water when the factory made test.

## Settlement

Settlement	
	Insert the plug tightly. Check the socket or change to another socket Press the power switch. Check the power supply.
	Install the inlet hose again. Tighten the connector of the machine.
	Put down the drainpipe. Straighten or clean the drainpipe.
	Restart when water supply is resumed. Open the tap. Clean the filter according to before "clean inlet gate".
	The machine is adjusting automatically.
	Close the top lid.
	Normal
	Normal

Notes: If there is still a fault after the above checks, please pull out the plug and contact the seller right away. It is dangerous to repair this product by yourself.

## Other functions

### 1. Give an alarm

Display	Explanation	Settlement
E0	The top lid is opened when preset is started.	Close the top lid and clear up the alarm.
E1	After draining for 7 minutes, it still does not reach to water level.	Open top lid, according to before troubleshooting and settlement to settle it, then close the top lid and clear up the alarm.
E2	The top lid is open while spinning.	Close the top lid and clear up the alarm.
E3	Spin does not balance.	Open the top lid, make the laundry place equally, then close it and clear up the alarm.
E4	After 40 minutes, the inlet still does not reach the settling water level.	Open top lid, according to before troubleshooting and settlement to settle it. Then close the top lid and clear up the alarm.
E5 Child-lock light is flashing synchronously	The top lid is opened after setting child-lock.	Close the top lid and clear up the alarm.
F1	Water level sensor is wrong.	Cut the power supply and call the technicians.
Detergent lamp is twinkling quickly	At the initial state of the machine, the liquid in the detergent box is automatically put into default when it is not enough.	Add manually, release alarm.
Eb Detergent lamp is twinkling quickly	Automatic adding by default, when the liquid in the detergent box is not enough, need add manually.	Add manually, release alarm, press "start/pause" to resume running.

### 2. Imbalance adjustment

During spinning, if the laundry is not placed equally in the tub, it would cause the machine to vibrate violently. This machine has an imbalance adjustment function and the vibration testing system will supervise the running. Once the vibration is beyond a certain level, the adjustment system will start to adjust the imbalance automatically.

### 3. Power supply is cut off automatically

- 1) Press the power supply button. If it does not start the program in 10 minutes, the power supply will be cut off automatically.
- 2) After the washing is finished, the buzzer will remind, and the power supply will be cut off automatically.

## Other functions

### 4. Child lock function

(1) If you set child lock function, all the buttons will be locked including POWER. If the top lid is opened while the washing machine is working, the washing will be stopped and the machine will give an alarm. But if you can close the top lid in 5 seconds, the washing machine will stop alarm and continue working. If you do not close the top lid in 5 seconds, the washing machine will begin draining if there is water in the inner tub. Even closing the top lid will not work. During the draining, the alarm will be given every 10 seconds. When the water in the inner tub is about 5cm higher, the alarm will be given every 10 minutes (alarm is always given). When the draining is finished, the washing machine will be in the state of waiting. If the top lid is closed, the washing machine is unlocked and start working as previous setting.

(2) Once child lock is set and the top lid is opened in 5 seconds during washing or rinse (there is water in the inner tub), the washing machine will drain and give an alarm. If you unlock the function during draining, the washing machine will add water to setting water level and continue working.

### 5. Water recycle function

If you set water recycle function, after the last rinse is finished, the washing machine will not drain and spin. The SPIN and WATER RECYCLE indicator light will flash and an alarm will be given. The washing machine will stop working (if nobody operates, the alarm will be given every 10 minutes and in 1 hour, power supply will be cut off automatically). When you press START/PAUSE, the WATER RECYCLE indicator light will turn on and the washing machine will begin to drain and spin. The user can reuse the water.

 **Dawlance**

**The widest service center network in the country with  
more than 200 outlets**



**Dawlance Reliable service is available for all  
household products**  
**Services at your doorstep within 24 hours**  
**Call Center Services available  
all week 24/7**

**Service UAN # 021-111-11-7359 (RELY)**

**Head Office: Dawlance Center 7/4, Civil Lines-9**

**Dr. Ziauddin Ahmed Road, Karachi.**

**Ph: (021) 35652450-9**

**E-mail: [customer.service@dawlance.com.pk](mailto:customer.service@dawlance.com.pk)**

**Website: [www.dawlance.com.pk](http://www.dawlance.com.pk)**

**ڈاؤلینس ریلیئبل ہے!**