 


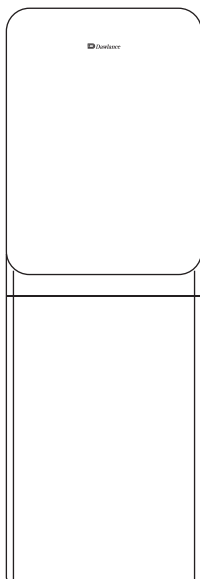

Before using your water dispenser, please read this manual carefully and keep it for future reference.

Water Dispenser **USER MANUAL**

MODEL: WD 1051 NOIR RED



Read This Manual

Inside you will find many helpful hints on how to use and maintain your water dispenser properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your water dispenser. You'll find many answers to common problems in the chart of troubleshooting tips. If you review the chart of troubleshooting tips first, you may not need to call for service.

DIRECTORY

A. SAFETY INSTRUCTION	1
B. FUNCTION INTRODUCTION.....	1
C. PARTS NAMES.....	2
D. OPERATION INSTRUCTION.....	3
E. CAUTION.....	3
F. TROUBLESHOOTING.....	5
G. CLEANING.....	5
H. SPILL FREE CAP INSTALLATION INSTRUCTION.....	6

The packaging material used is recyclable; we recommend that you separate plastic, paper and cardboard and give them to recycling companies. To help preserve the environment, the refrigerant used in this product is R134a (Hydrofluorocarbon-HFC), which does not affect the ozone layer and has little impact on the greenhouse effect. According to WEEE (Waste of Electrical and Electronic Equipment) guidelines, waste from electrical and electronic devices should be collected separately. If you need to dispose of this appliance in the future, do NOT throw it away with the rest of your domestic garbage. Instead, please take the appliance to the nearest WEEE collection point, where available.



A. SAFETY INSTRUCTION

 
1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses and by clients in hotels, motels and other residential type environments; bed and breakfast type environments; catering and similar non-retail applications.
4. The appliance must not be cleaned by a water jet.
5. The appliance is suitable for indoor use only.
6. WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
7. WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
8. The appliance must not be immersed.

B. FUNCTION INTRODUCTION

1. This series model can satisfy the need of tea & coffee and making drinks. It must be used indoor only.
2. With adoption of distinctive thermal isolation technology, this machine can minimize thermal exchange between hot & cold water.
3. WARNING: Do not damage the refrigerant circuit.
4. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

C. PARTS NAMES

WD 1051 NOIR RED

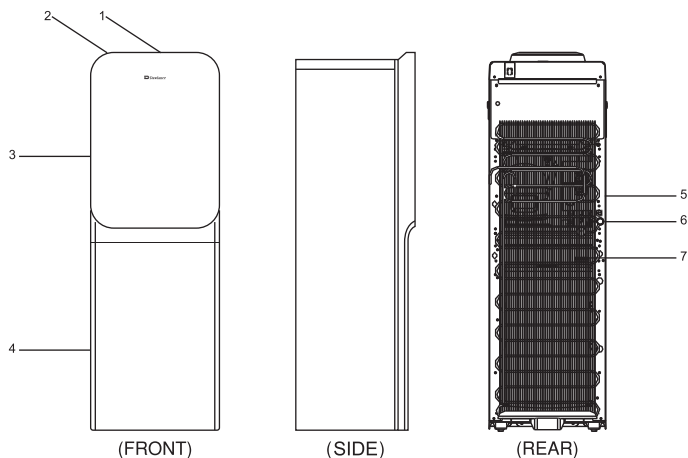


S.No.	PARTS NAMES
1	Bottle supporter
2	Top cover
3	Door
4	Door
5	Power supply cord
6	Outlet of hot water
7	Condenser

NOTE:

This machine is suitable for bottle of 3 or 5 gallons. Don't use unhealthy hard water. This machine should work under environment of temperature from 10°C-43°C, relative humidity not higher than 90%.





D. OPERATION INSTRUCTION

 1. Tear the label from the bottle.
2. Vertically insert the bottle into the bottle supporter on top of the machine. Don't plug the power cord or push the heating switch until water runs out from the tap of hot water.
3. Insert the plug to socket, then turn on the switch. Indicators light up accordingly once the machine works.
4. Vertically pull out the bottle by two hands when the bottle is empty, then replace it with another bottle of water.
5. This appliance should work under environment of temperature from 10°C~43°C.
6. This appliance is not suitable for installation in an area where a water jet could be used.

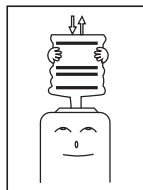

E. CAUTION

    
1. Keep this machine in a dry place and avoid direct sunshine. Rear of the machine should be no more than 75mm from the wall. Never put the machine on paper or foam, which may cause unstable condition. Never put anything flammable beside this machine.
2. To avoid damage to the machine, don't plug the power cord or push the heating switch until water runs out from the tap of hot water.
3. In case hot water is not needed for a long time, turn off the switch accordingly to save power.
4. In case not to use this machine for a long time, turn off the switch, then pull the plug out from socket and drain the remaining water through draining outlet.

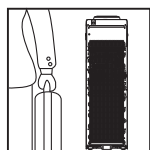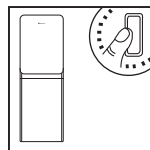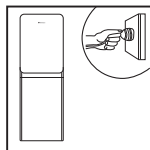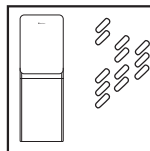


5. Never use organic liquid to clean the machine. Strictly prohibit using water to splash it.



 
6. Never turn the machine on/off by plugging in/out from the socket. Also never increase the length of the power supply cord to avoid fire.

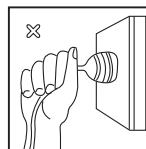

 
7. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

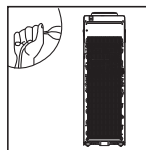

 
8. Never turn the machine upside-down or lean it more than 45°.

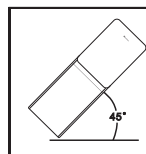

 
9. When the machine is under the ice point and blocked by ice, the cooling switch must be closed for 4 hours before turning it on again to continue its operation.

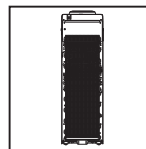

 10. This machine should not be turned on until 3 minutes later after turning off the power switch.

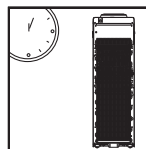

 11. When first time to utilize the refrigerating function, let the refrigerating function be operated for at least 2 hours before putting anything into the cabinet. No wet or hot goods is allowed to be put into the cooling cabinet. Leave suitable space between the goods to ensure the interior airflow.

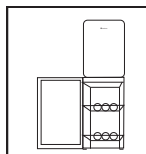

F. TROUBLESHOOTING

Please check the followings before having the machine repaired:

PROBLEMS	POSSIBLE CAUSES	ELIMINATION
No hot or cold water	1. Over consumption of hot or cold water in short time 2. No power supply	1. Just wait a moment, then hot/cold water is available again. 2. Connect plug to socket, turn on heating and cooling switch.
No water running out from taps	1. Empty bottle 2. Inlet of bottle supporter blocked by bottle seal	1. Replace it with another one. 2. Clean out wasted paper & bottle seal, install bottle again.
Leakage from bottle supporter	Broken bottle	Replace it with a new bottle.
Noisy operation	Not placid installation	Place the machine on placid & solid surface.

G. CLEANING

To avoid accident, cut off the power supply before operation according to the following instructions:

1. The machine had been disinfected before departed from factory. Clean the dispenser prior to installing a full bottle of water for the first time.
2. **Cleaning and draining instruction:**
 - ❶ Before cleaning, make sure the power switch in the *O(off)* position and unplug the water dispenser.
 - ❷ Vertically insert the bottle into the supporter on top of the machine.
 - ❸ Open the tap and let about 1 liter water flows into a container.
 - ❹ Remove the water bottle from the dispenser.
 - ❺ Place a large bucket beneath the drain outlet. Remove the drain cover and allow water to drain.
 - ❻ After draining, replace the drain cover and you can use the machine.
Attention: The dispenser heats water to a temperature of approximately 85°C. It can cause severe burns. Please operate it carefully.
3. **Sanitizing**

 
The machine should be disinfected with the disinfectant separately bought from drugstore or marketplace according to the instruction manual of the disinfectant and then clean it with water (see **cleaning and draining instruction**). Generally this should be done every three months.

4. To Remove Mineral Deposits:

Mix 4 liters water with 200g citric acid crystals, inject into the machine and make sure the water can flow out of the hot water tap. Switch on the power and heat it about 10 minutes, 30 minutes later, drain off the liquor and clean it with water for two or three times. Generally this should be done every six months.

Never disassemble this machine by yourself to avoid danger from damaging the machine.

H. SPILL FREE CAP INSTALLATION INSTRUCTION

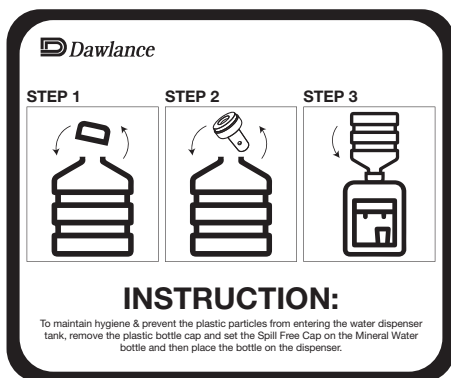

THANK YOU FOR TRUSTING DAWLANCE

This is your personal warranty from **DAWLANCE (PVT.) LTD.** It applies to you as the original purchaser. Provided, it is purchased from an authorized dealer and nor is it transferable.

1. 3 YEARS COMPRESSOR WARRANTY:

If the compressor of the Water Dispenser becomes inoperative as a result of defects in material or workmanship within 3 years of purchase, it will be replaced free of charge by a new or functionally operative compressor, only once.

The cost of gas, parts, labour, home attending and transportation charges will be borne by the customer.

2. ONE YEAR PARTS WARRANTY:

Any part of Dawlance Water Dispenser, which proves to be defective in terms of material or workmanship within one year of purchase, will be repaired or replaced with a new or functionally operative part free of charge.

WARRANTY TERMS & CONDITIONS:

The warranty will be valid provided:

- i) The warranty card has been properly filled and bears the dealer's seal at the time of purchase. Unfilled or partially filled warranty cards and those with cutting and rewriting will not be entertained.
- ii) The Water Dispenser has not been repaired by any person other than a DAWLANCE CUSTOMER SERVICE CENTRE or AUTHORIZED CONTRACT WORKSHOP technician.
- iii) The Water Dispenser has been used with the original 3 pin plug connected to a properly earthed socket.
- iv) The electric wiring has been provided with proper earth, a voltage stabilizer is used with Water Dispenser.

The warranty will not be valid provided:

- v) Where defects have resulted from abnormal electrical load, short-circuiting, low or high voltage and poor wiring.
- vi) Where the Water Dispenser has been tampered with or altered in any way, or has been subject to misuse, negligence or accident, or has its serial number altered, disfigured or removed.
- vii) Damage is caused due to insect bites or Rodents (Mouse, Rat etc.).

LEGAL LIABILITY:

3. This warranty and the use of this product will be governed by Pakistani law.
4. Any proceedings arising out of or in connection with this warranty or the use of the product may only be brought in a court of competent jurisdiction in Karachi.
5. The company shall not be responsible for any loss or damage occurred to the property arising out of the use/operation of the product.
6. The company shall not be responsible for any loss or damage arising out of the use/operation or due to installation of the product.

DEALER
COPY

ذیل نام: _____ خریدار کا نام: _____ ماڈل نمبر: _____
خریدار کا پتہ: _____ خریدار کا کنٹیکٹ نمبر: _____ خریدار کا ای میل: _____

ڈاؤنلینس پر بھروسے اور اعتماد کا شکریہ ماڈل نمبر: سیریل نمبر:

ڈاؤنلینس (پرائیویٹ) لمیٹڈ کی جانب سے یہ آپ کی ذاتی وارنٹی ہے۔ اس کا اطلاق آپ پر اصل خریداری کی حیثیت سے ہوتا ہے۔ بشرطیکہ ہمارے کسی مقرر کردہ ڈیلر سے خریدایا گیا ہو، یہ کسی دوسرے کے نام منتقل نہیں ہو سکتی۔

۱۔ تین سال کی کمپر وارنٹی: ڈاؤنلینس وارڈ سپینسر کا کمپر لیسر اگر میٹرل یا کارگری کے نقص کی وجہ سے تاریخ خرید سے تین سال کے عرصے میں خراب ہوتا ہے تو ناقص کمپر لیسر یا کارآمد کمپر لیسر سے ایک بار مفت تبدیلی کر دیا جائے گا۔ جب کے گیس، فاضل پڑھ جات، مزدوری، گھر پروٹ کرٹ اور نقل و حمل کے اخراجات بڑھ جائیں تو بڑھ جائیں گے۔

۲۔ ایک سال پائرس وارنٹی: ڈاؤنلینس وارڈ سپینسر کا کوئی پڑھ اگر میٹرل یا کارگری کے نقص کی وجہ سے خریداری کی تاریخ سے ایک سال کے عرصے میں ناقص ثابت ہوتا ہے تو بلا معاوضہ ڈرننگی یا تبدیلی نئے یا قابل استعمال پڑھ سے کر دی جائے گی۔

وارنٹی کے قواعد و ضوابط:

وارنٹی کا اطلاق درج ذیل صورت میں ہوگا:

(i) وارنٹی کا مکمل طور پر بھروسہ ہے اور اس پر خریداری کے وقت ڈیلر کی ہر موجود ہے۔ مکمل یا بغیر بھرے ہوئے وارنٹی کارڈ یا لکھائی میں تبدیلی یا اس کو مٹا یا گھٹا یا ہوا اور دوبارہ کھینچنے کی کوشش کی گئی ہو تو اس پر وارنٹی کا اطلاق نہیں ہوگا۔

(ii) وارڈ سپینسر ڈاؤنلینس سروس سینٹر یا منظور شدہ ورکشاپ کے تکنیکیں کے علاوہ کسی غیر متعلقہ شخص سے مرمت نہ کروائی گئی ہو۔

(iii) وارڈ سپینسر کا اور پینل 3 چین کا پلگ تبدیل نہیں کیا گیا ہے اور پلگ صحیح طور پر ارتھ کئے گئے سائٹ میں استعمال کیا گیا ہو۔

(iv) جیک کی انکسٹرٹیکل وارنٹجک یا قاعدہ ارتھ کے ساتھ کی گئی ہو، وارڈ سپینسر کے ساتھ ڈیلج اسٹیل یا نئزرا استعمال کیا گیا ہو۔

وارنٹی کا اطلاق درج ذیل صورت میں نہیں ہوگا:

(v) بجلی کے غیر معمولی لوڈ یا شارٹ سرکٹ، دوئلج کی کمی بیشی یا ناقص وارنٹجک سے ہونے والی خرابیاں۔

(vi) ایسا وارڈ سپینسر جس میں کسی بھی قسم کی تبدیلی یا تخریب کی گئی ہو یا حادثے کا شکار ہوئی ہے یا غلط طریقے سے استعمال کی گئی ہے یا سیریل نمبر تبدیل کر دیا گیا ہے یا اس کے خراب متاد دیے گئے ہوں۔

(vii) کسی بھی انسکٹ (insect) کے نقصان پہنچانے کی وجہ سے خرابیاں یا چھو ہوں کے کترنے سے پیدا ہونے والی خرابیاں۔

قانونی ذمہ داری:

۳۔ اس وارنٹی اور پروڈکٹ پر پاکستانی لاگو قانون۔

۴۔ اس وارنٹی اور پروڈکٹ کے حوالے سے کسی بھی قسم کی پیچیدگیاں صرف کراچی کی عدالتوں میں ہی نمٹائی جائیں گی۔

۵۔ اس پروڈکٹ کو استعمال کرنے سے کسی بھی قسم کا نقصان یا ضائع ہونے پر کوئی ذمہ داری نہیں ہوگی۔

۶۔ اس پروڈکٹ کی انشورینس یا اس کے استعمال کی وجہ سے کسی بھی قسم کے نقصان یا ضائع ہونے پر کوئی ذمہ داری نہیں ہوگی۔

پاکستان: _____ مائیک کا نام: _____ ماڈل نمبر: _____ سیریل نمبر: _____
والدہ/شریک کا نام: _____ چیتہ: _____ شہر: _____
رپائش گاہ کا فون نمبر: _____ دفتر کا فون: _____ موبائل نمبر: _____ ای میل ایڈریس: _____

ڈیلر کے استعمال کے لئے

خریداری کی تاریخ: _____

برائے نام: _____

ڈیلر کی مہر

