



TV USER MANUAL (Start Guidebook)

4K HDR QLED TV



- Please read this user manual for details
- Keep this in safe place for troubleshooting

To enjoy all smart features and services on your Dawlance Google TV, a free Google account, and a reliable broadband internet connection are required.

Content

Safety Information	1
Important Safety Precautions	1
TV Buttons And Terminal Interface	3
External device connection diagram	3
Unpacking & Installation	4
TV Install And Connect.	4
TV Stand Installation Instructions	5
Mounting on a Wall	5
Positioning the TV Guide	6
OSD	7
1. Initial Setup	7
2. HOME	11
3. Settings	12
4. Tv Source setting	14
5. Near Field Voice	14
6. Apple AirPlay and HomeKit	15
7. Accounts & sign-in	16
Help.	17
Problems & Solutions.	18
Specifications	19
Remote control	20

Safety Information



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating in the literature accompanying the appliance.

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**



Warning
The lightning flash with arrowhead symbol within an equilateral triangle, is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

High voltages are used in the operation of this product. To reduce the risk of electric shock, do not remove cover of the cabinet, refer servicing to qualified service personnel.

If the TV any changes or coarse adjustment, electric shocks to be hurt, do not attempt to open a machine-maintenance, customer contact centres needed overhaul.

Important Safety Precautions

Precautions

Read all of the instructions before operating the set. Keep these instructions well for future use.

Warning

A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as :

- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the television set.
- ALWAYS use furniture that can safely support the television set.
- ALWAYS ensure the television set is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the television set or its controls.
- ALWAYS route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
- NEVER place a television set in an unstable location.
- NEVER place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- NEVER place the television set on cloth or other materials that may be located between the television set and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.

If the existing television set is being retained and relocated, the same considerations as above should be applied.



This symbol indicates that high voltage is present inside. It is dangerous to make any kind of contact with any internal part of this product.



This symbol indicates that the fuse may be in the neutral, and that the mains shall be disconnected to deenergize the phase conductors.

If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded by a skilled person so as to provide some protection against voltage surges and built-up static charges.

Product

- Do not block or cover the ventilation openings on the back cover.
- Do not push objects of any kind into this unit through the cabinet slots as they could touch the current carrying parts or short-circuit parts, resulting in fire, electric shock, or damage to the unit.
- Do not attempt to open the cabinet as this may cause damage. There are no parts inside you can service by yourself. Refer all servicing to qualified personnel.
- Do not touch the screen surface with fingers as this may scratch or mar the TV screen.
- Do not impact the TV screen with hard pressure as this may damage the TV screen severely.
- This appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.

Power and Plug

- Unplug the set under the following conditions:
 - If the set will not be used for a long period of time.
 - If the power cord or the power outlet/plug is damaged.
- Follow the instructions to install and adjust the product. Adjust those controls that are covered in these operating instructions as improper adjustment of other controls may result in damage. If this happens, unplug the set and refer to the service personnel.
- If the set is subject to impact or has been dropped and the cabinet has been damaged.
- Where the mains plug or an appliance coupler is used as disconnect device, the disconnect device shall remain readily operable.

Important Safety Precautions

Power Cord and Signal Cable

- Do not allow anything to rest on or roll over the power cord and the signal cable.
- Protect the power cord and the signal cable from being trampled.
- Do not overload the power cord or the power outlet.
- Do not expose the power cord and the signal cable to moisture.

Use Environment

- Do not place the set on an unstable cart, stand, or table.
- Place the set on a place that allows good ventilation.
- Do not use the set near damp, and cold areas.
- Do not expose the set to excessive heat such as direct sunlight, fire, or the like and no naked flame sources, such as lighted candles, should be placed on the apparatus.
- Do not expose the set to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not use the set in dusty environments.
- Operating Temperature: 5°C to 35°C (41°F to 95°F)
Operating Humidity: 20% to 80%, non-condensing
Storage Temperature: -15°C to 45°C (5°F to 113°F)
Storage Humidity: 10% to 90%, non-condensing

Cleaning

- Dust the set by wiping the screen and the cabinet with a soft, clean cloth or some special liquid cleaner.
 - Do not apply excessive force to the screen when cleaning.
 - Do not use water or other chemical cleaner to clean the screen as this may damage the surface of the TV screen.
- All other safety instructions about our TV sets are also applicable here. Wall mount bracket not included.

(**Note:** Certain TV models are not designed to be mounted to the wall.)

Precautions For Using Remote Control

- Use the remote control by pointing it towards the remote sensor. The items between the remote control and the remote sensor will interfere in normal operation.
- Do not make remote control vibrate violently, or splash liquid on the remote control, or put the remote control in a high humidity place.
- Do not place remote control under direct sunlight, which will cause deformation of the unit by heat.
- When the remote sensor is under direct sunlight or strong lighting, the remote control will not work. In this case, please change the lighting or TV's position, or operate the remote control closer to the remote sensor.
- Before Bluetooth searching, please make sure you have turned external Bluetooth devices in the pairing mode. For the Bluetooth remote control supplied with the TV (may not be available in your region), you can press **◀** and **HOME** buttons together to open its pairing mode. For other Bluetooth devices, please read their own instruction manuals for opening the pairing mode.

 
Precautions For Using Battery

Improper using of the battery will cause leakage. So, please follow the methods given below and use carefully.

1. Please note the batteries' polarity to avoid short circuit.
2. When the battery's voltage is insufficient, which affects the use range, you should replace the battery. Remove the batteries from the remote control unit, if you do not intend to use it for a long time.
3. Do not use different types of batteries (e.g., Manganese and Alkaline batteries) together.
4. Do not put the battery into fire, and charge or decompose the battery.
5. Please dispose of batteries in compliance with the relevant environmental protection regulations.
6. **WARNING:** The batteries (battery pack or batteries installed) should not be exposed to excessive heat such as sunshine, fire, etc.

Install Remote Control Batteries

Place two AAA size batteries in the remote control's battery compartment, making sure to match the polarity markings inside the compartment.

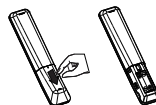


Note: The picture is only for reference.

TV Buttons And Terminal Interface

TV Buttons

Note: The following is only functional schematic, And the actual position and arrangement of different models may be different.

 One key:

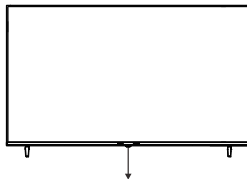

Press this button in standby mode to turn on / off the TV.

Terminal Interface


Note: The following are the various terminal interface, the actual position and arrangement, the number of different models may be different.

	Mini AV External Mini AV Signal Input.		USB input Connect a USB device here to play media files.
	ANT 75 Connect the antenna/cable tv input (75VHF/UHF)		OPTICAL output Connect the SPDIF receiver.
	HDMI input Digital signal input from HDMI video connector.		RJ45 Connect the Internet.
	CI SLOT The card reader input CI (common interface) this requires CAM (conditional access module) used for pay TV.		




*Do not touch or be close to the HDMI, USB terminals, and prevent electrostatic discharge to disturb these terminals while in USB operation mode, or it will cause the TV to stop working or abnormal status.

 External device connection diagram

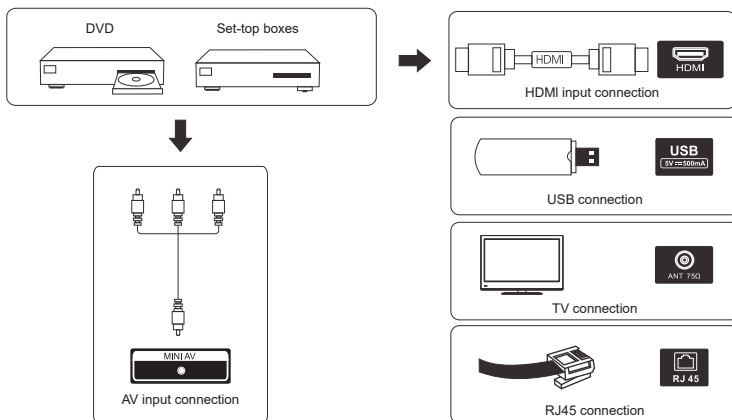

Unpacking & Installation

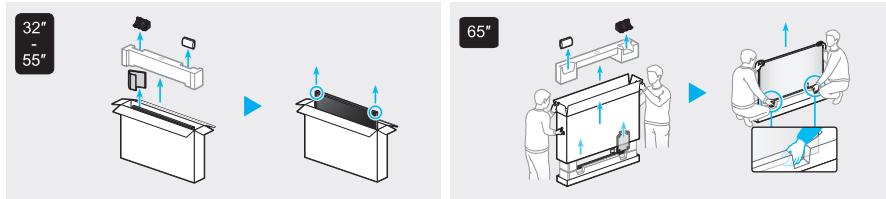 

Note: The pictures are only for reference

 
Unpacking and installation




1 Open the package.



2 Take out the TV.



3 Install the TV stands.

 

4 Connect the power cord.

Standard Accessories



 
Batteries/2



Remote Control



Power Cord



AV Converting Cable



Warranty Card



User's manual

 


Screws/4



Stand Bases/2

TV Install And Connect

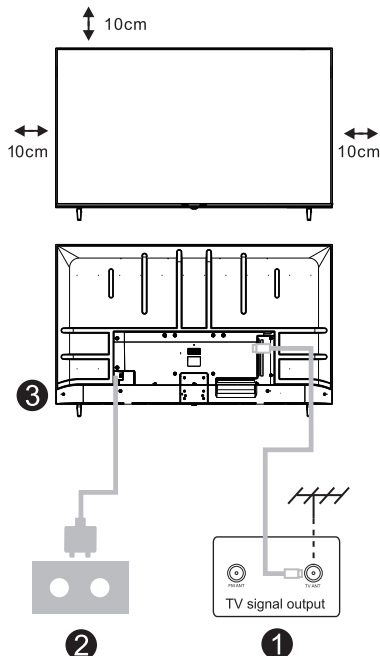

Set your TV

To put your TV on a firm place which can bear the weight of the TV.

To avoid danger, please don't position the TV near water or heating place (such as light, candle, heating machine), do not block the ventilation at the back of TV.

Connect antenna and power

1. Connect the antenna cable to the antenna socket on the back of the TV.

 
2. To plug the power cord of TV (AC 100-240V~ 50/60Hz).

The attached power cord is for this model only

Turn on TV

3. Connect the power supply, enter the standby mode (red light), press the power button of the TV or the power button on the remote control to turn on the TV

Note: If the model has a CI card slot on its top, a silicone plug for the CI card slot can be found in the accessory bag (for models without CI card slot, there is no such silicone plug), please insert the silicone plug into the slot when the CI card is not in use.

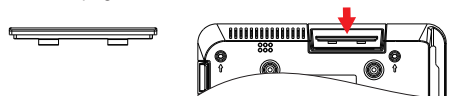

Note: Picture for reference purposes only.

 
TV Stand Installation Instructions

Stand Installation

Step 1: Take out the TV and carefully put it (screen downward) on a stable and flat table with a soft cloth or cushion on it.


Step 2: Please check to make sure there is the same mark (A/B) on the TV back and the correct stand. This step is not available for the stands without any mark on it, or not available for the TV with one stand only.

Step 3: Fix the stands to the TV by using the matching screws provided in the box. The stands may vary depending on the region or model.

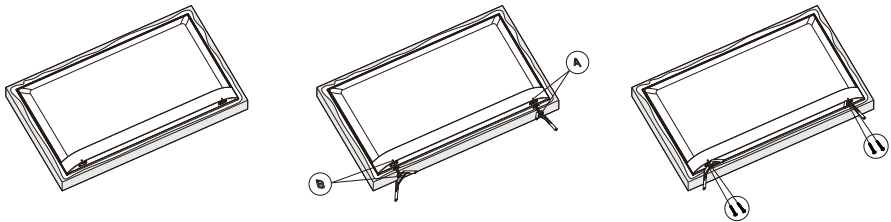


Suggestion:

 To make it more convenient for base installation and to avoid any risk of scratches and damage, we advise you using the type of PH2 screwdriver.

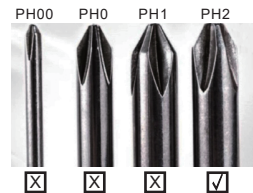

Mounting on a Wall

 - An optional wall mount can be used with your television. Consult with your local dealer to purchase the recommended wall mount bracket. Carefully attach the wall mount bracket at the rear of the TV. Install the wall mount bracket on a solid wall perpendicular to the floor. If you are attaching the TV to other building materials, please contact qualified personnel to install the wall mount. Detailed instructions will be included with the wall mount. Please use a wall mount bracket where the device is adequately secured to the wall with enough space to allow connectivity to external devices.

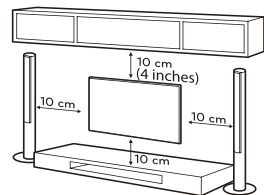


Note: The picture is only for reference.

- Disconnect the power before moving or installing the TV. Otherwise electric shock may occur.
- Remove the stand before installing the TV on a wall mount by attaching the stand in reverse.
- If you install the TV on a ceiling or slanted wall, it may fall and result in severe personal injury. Use an authorised wall mount, and contact the local dealer or qualified personnel. Otherwise it will not be covered by the warranty.
- Do not over tighten the screws as this may cause damage to the TV, and void your warranty.
- To prevent injury, this apparatus must be securely attached to the wall in accordance with the installation instructions.

Mounting on a Wall

 - Use the screws and wall mounts that meet the following specifications. Any damages or injuries by misuse or using an improper accessory are not covered by the warranty.
- Wall-mounted screw: 22-24 inch M4, 28-75 inch M6, 77 inch M8, 85 inch M6, 100 inch M8.
- Note: don't hang at an angle to avoid the risk of falling off.

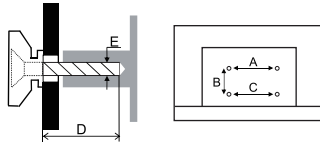

Model Size:		43"		50"		55"		65"	
		Top	Down	Top	Down	Top	Down	Top	Down
Screw	Diameter(mm) "E"	M6	M6	M6	M6	M6	M6	M6	M6
	Depth(mm)	Max	15	15	15	15	15	30	30
	"D"	Min	12	12	12	12	12	20	20
	Quantity	2	2	2	2	2	2	2	2
A*B*C		200*200*200		200*200*200		200*200*200		200*200*200	

Note:

 
1. The pictures are only for reference.

2. For the TV sets with terminals towards the wall, in order to leave enough space to use the terminals, a plastic spacer is needed together with each screw to fix the wall mount. It is a small hollow pillar, the height of which is ≥ 30 mm.

Positioning the TV Guide

Positioning the TV

Install Display on solid horizontal surface such as a table or desk. For ventilation, leave a space of at least 10cm free all around the set. To prevent any fault and unsafe situations, please do not place any objects on top of the set. This apparatus can be used in tropical and/or moderate climates. Fix the rear of enclosure to wall (only for some countries).

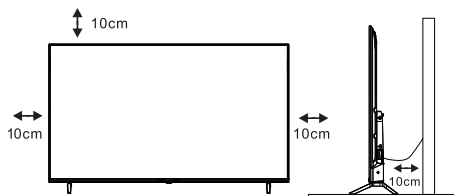

WARNING

Never place a television set in an unstable location, A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

1. Using cabinets or stands recommended by the manufacturer of the television set.
 2. Only using furniture that can safely support the television set.
 3. Ensuring the television set is not overhanging the edge of the supporting furniture.
 4. Not placing the television set on tall furniture (for example, cupboards or bookcases).without anchoring both the furniture and the television set to a suitable support.
 5. Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
 6. Educating children about the dangers of climbing on furniture to reach the television set or its controls.
- * If your existing television set is being retained and relocated, the same considerations as above should be applied.

 
Initial Setup

1. Initial Setup

For the first initial setup, on-screen setup wizard will guide you through setting up your TV. Please follow the guide to setup your TV correctly.


1.1 Pairing Bluetooth Remote

1. Press 'BACK ←' and 'Home 🏠' simultaneously on remote control to enter the Bluetooth pairing mode. The indicator light on remote control will flash when starting the pairing mode.
2. Select the 'Skip' icon to skip the pairing mode.

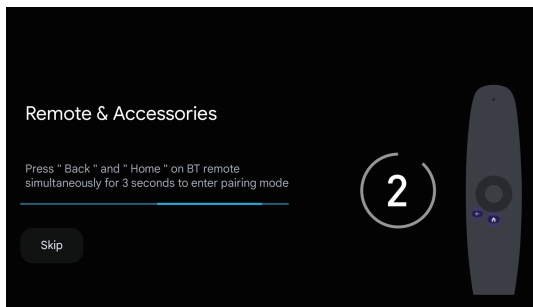


1.2 Language select

 Use ▲/▼ buttons to select system languages, then press 【OK】 to confirm.

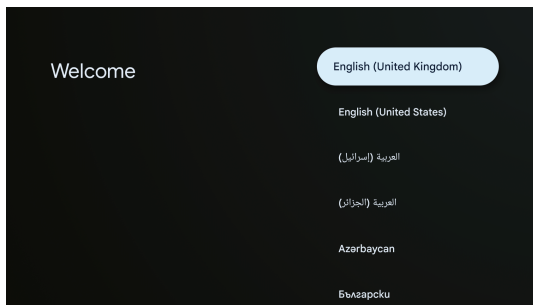

1.3 TV Set-up select

 Use ▲/▼ buttons to select your TV setup, then press 【OK】 to confirm.

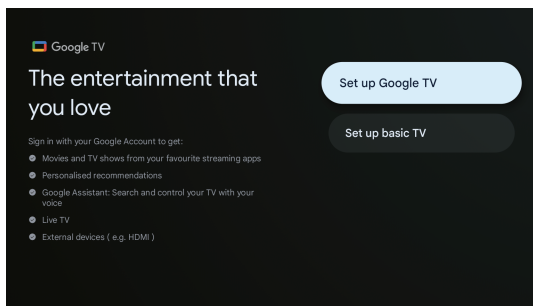

Initial Setup

1.3.1 Set up Google TV™

1. Use your Android™ Smart phone to download and open the Google Home app on your phone.
2. Use the Google Home to scan the QR code on the TV device.
3. Follow the instructions in the Google Home app.

Note: Press **"BACK"** to cancel

 
If you just want to use your TV normally, please select "Set up basic TV"

1.3.2 Set up basic TV

Press **"OK"** button enter to the next page to Select your wifi network.


1.3.2.1 Configure the wifi network

Press **▲ / ▼** buttons to select Wi-Fi you wish to connect to, enter the password and then confirm to connect. If you select "Skip", it could be performed in homepage or settings menu.

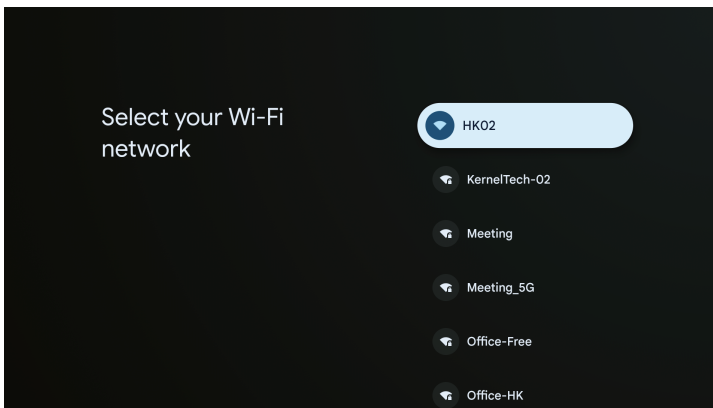

1.4 Terms of Service

 
By accepting the Terms of Service to improve the product experience, select "Accept" to proceed with this condition.

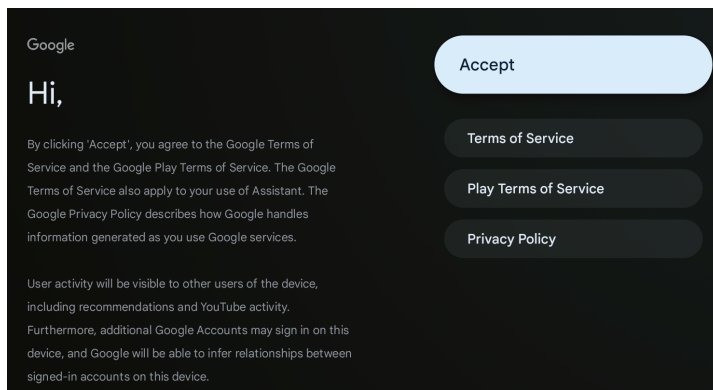

Initial Setup


1.5 Google Services

 Select “Accept” to confirm if you want your location identified on your Google TV and agree to automatically send diagnostic information to help improve your experience.

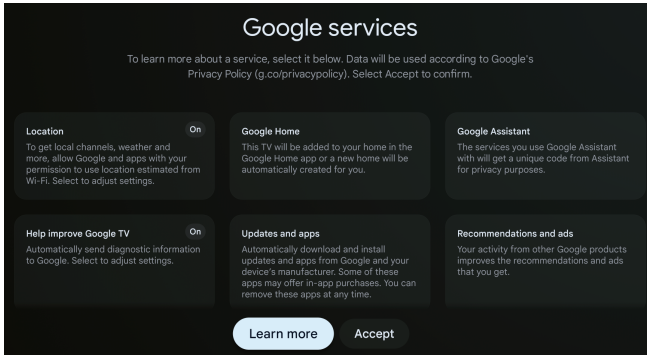


1.6 Region or Country select

 Use ▲ / ▼ buttons to select your region or country, then press 【OK】 to confirm.

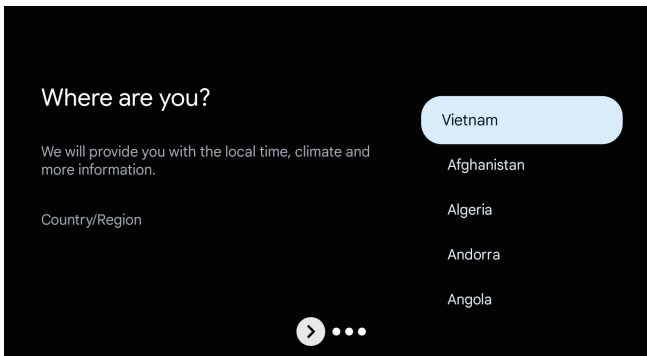

 
1.7 Disclaimer Terms

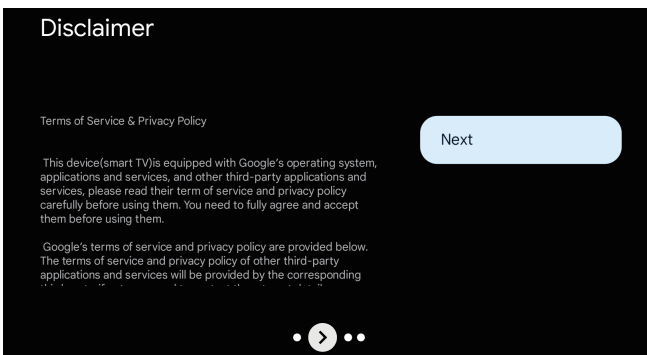

Initial Setup


1.8 Tuner mode Setting

 Use **▲** / **▼** buttons to select Antenna/Cable/Satellite to scan TV channel, then press **【OK】** to confirm. If you select "Skip", the channel scan could be performed in menu.

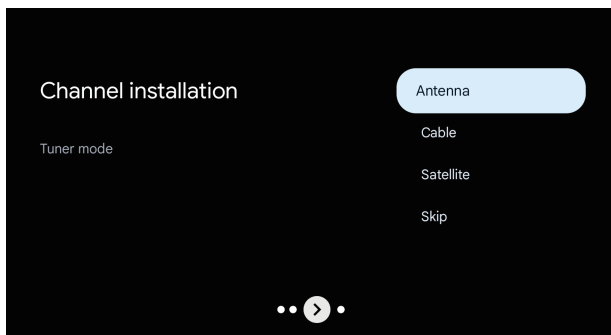

1.9 Check Settings

 
Please verify settings in system settings, then select "Start now".

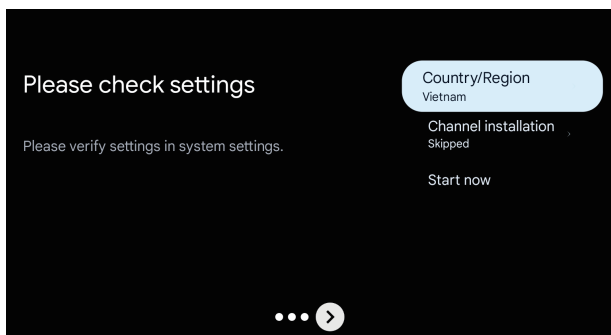

1.10 Play Auto Installs

Select install or un-install the recommended apps by using this process.

 
Select "Start exploring" to the next page.

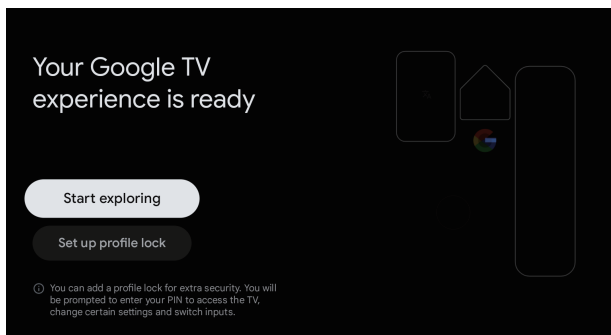

HOME

2. HOME

 Once you have completed initial setup, you will now enter the home by screen or press **⌂** button to display the homepage.

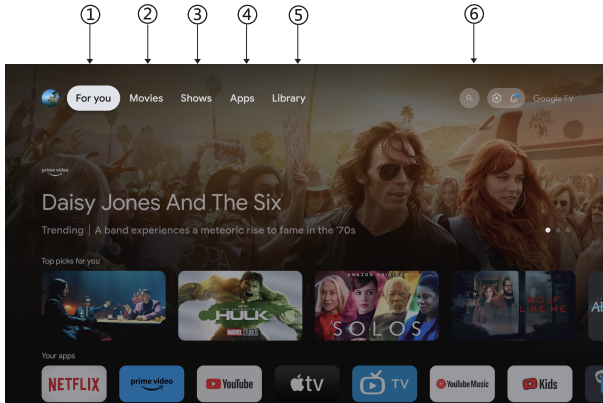

*Some countries home screen UI may display different from above image, please refer to the product for details.

1. For you

Selected the “For you” to browse content from across your apps, intelligently organized just for you.

2. Movies & 3. Shows

Watch what’s happening live. Movies and Shows are grouped in ways that reflect your interests. So you can binge your favorite sagas and find your way to uncharted worlds.

4. Apps

Selected the “Apps” to have access to all your applications. Pre-installed applications are available for you in this row.

5. Library

Find your purchases, rentals and watch listed content across TV, mobile and web here.

6. Search

 
Thousands of movies and shows at the sound of your voice. Ask Google to quickly find what you want to watch.

Settings

3.Settings

Allows to set various performance of your TV .


- 1.Press </> button to select “Settings” which is in the upper right corner of the screen.
- 2.Press ^/v button to select the option which you want to adjust in the Settings menu.
- 3.Press 【OK】 to enter.

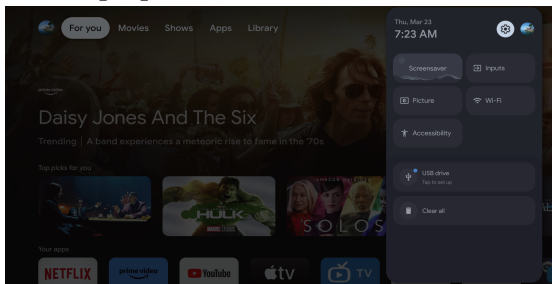

Channel and inputs

Display the scan sub-menu based on different channel installation modes.

 
- 1.Press ^/v button to select “Channel Source” & Inputs”.
- 2.Press 【OK】 to enter “Channels”, then press ^/v choose Analog,Antenna,Cable etc to scan the channels.
- 3.Press ^/v button to select “Inputs”,press 【OK】 to enter “Inputs”,then press ^/v choose HDMI1,HDMI2,HDM3,HDMI4,Composite etc.

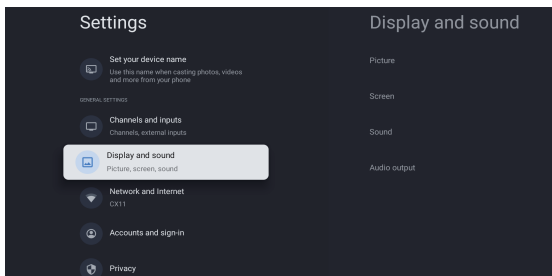

Network & Internet

Adjust all network setting and check connection if you have connection problems.

 
- 1.Press ^/v button to select “Network & Internet” in the settings menu.
- 2.Press ^/v button to select: Wi-Fi/Add new network/Scanning always available/Proxy settings/IP settings.

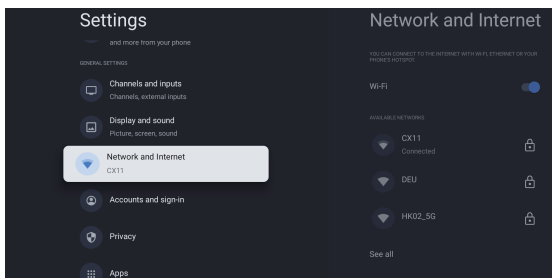

Settings


System

 1. Press **▲/▼** button select the options of About, Date & Time, Timer, Language, Inputs, Picture, Sound, Google Assistant, Reset and others.
2. Press **[OK]** to jump to the corresponding sub-option.

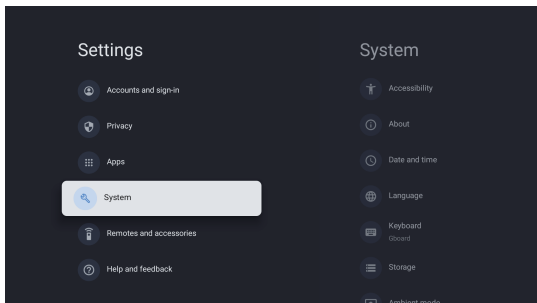

About

 
1. Press **▲/▼** button to check additional information such as System update, Device name, Restart, Status, and more.
 2. Press **←** button to return to the previous menu.
- Press **←** button to exit the menu.

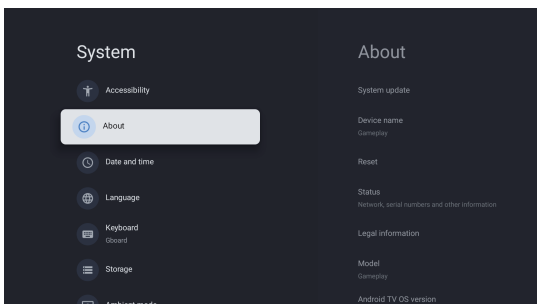

* The above pictures are for reference only, please refer to the product for details.

Factory reset

 If Factory reset is selected, it will erase all data from your device's internal storage, including: your Google Account, system and app data and settings, and downloaded apps.

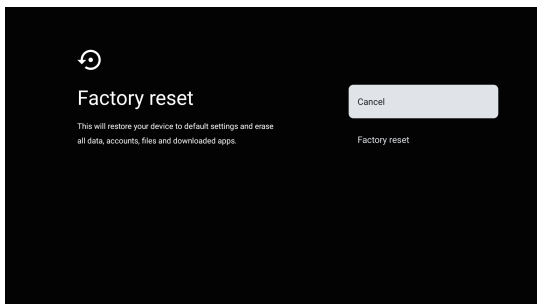


TV Source setting

4. Tv Source setting

To enter TV source in Homepage:

 1. Press  button to select input source.
2. Press  button, then select "Channels" and select "New Channels Available" to enter.

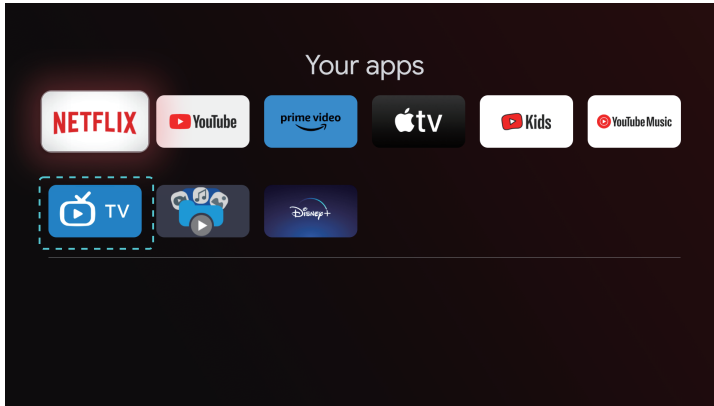

Near Field Voice

1. Near Field Microphone

Microphone of near field voice function. It is best to keep your mouth within 5 centimeters away from the near field microphone while using the near field voice function.

2. Mic Button of Near Field Voice Function

 
Press to start using the near field voice function. Only after successfully connecting your TV to the network, pairing the Bluetooth remote control with your TV and signing in to your Google account, you can press mic button to start using the near field voice function.

< Pair Bluetooth remote control with your TV >

For the remote control supplied with your TV, please finish pairing with your Google TV before using it for near field voice function. The pairing could be done at the first step of "Initial Setup", or in "Settings".

In settings, please refer to the following steps to pair the remote control:


1. Select "**HOME** → Settings → Remotes & Accessories".
2. Press **LEFT** and **HOME** buttons simultaneously until there shows the name of your Bluetooth remote control on the TV searching interface.
3. Press **OK** button to start pairing.
4. It will show "Paired" after Bluetooth remote control is paired with the TV successfully.

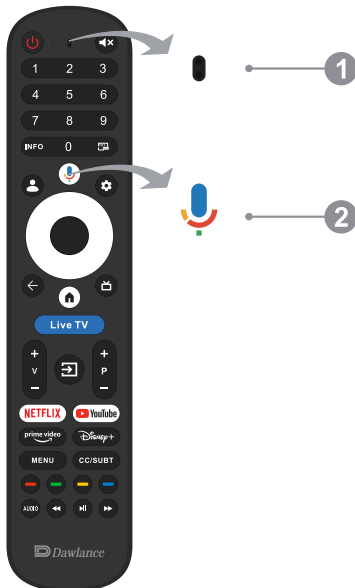


Accounts & sign-in

5. Accounts & sign-in

 
To have access and to download applications, you must sign in with a Google Account.

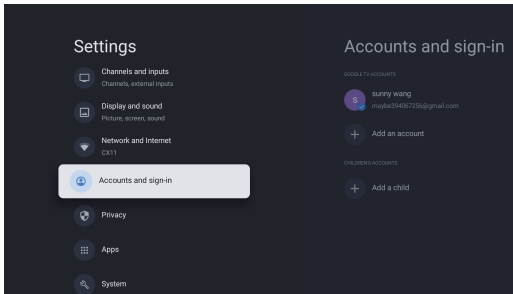

 Once you open Google Play, you will be prompted to sign in or create a new account.

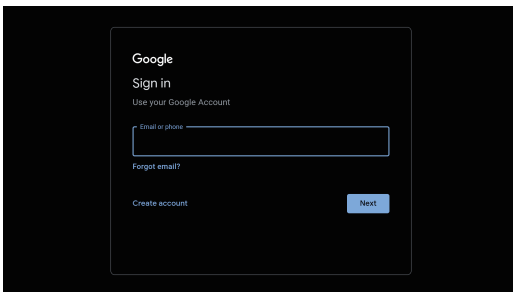

 Once you have signed in, you will be brought to the below page, scroll through the list of applications available for download or go to the search button, and search via entering text or by asking Google Assistant on your voice remote.

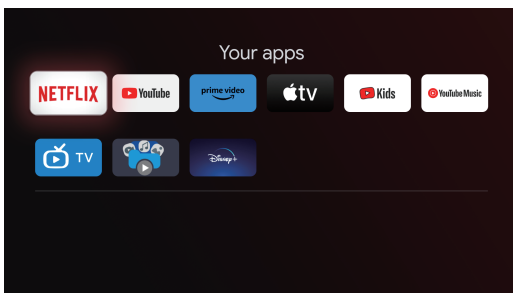

* The above pictures are for reference only, please refer to the product for details.

Help

No power	● Check if the AC cord of TV is plugged in or not. If there's still no power, please disconnect the plug, and reconnect to the socket after 60 seconds. Turn the power back on.
Signal not received properly	● Double or phantom images may appear on your TV if there are high buildings or mountains close to where you are. You can adjust the image thru manual operation: consult instruction of vernier regulation, or adjust the direction of the external antenna. ● If you use an indoor antenna, signal reception may be more difficult under certain circumstances. Adjust the direction of the antenna for optimum reception. If this does not improve reception, you may have to switch to an external antenna.
No picture	● Check if the antenna at the back of the TV is connected properly. ● View other channels to see if the problem still occurs.
Video appears with no audio	● Try increasing the volume. ● Check if the TV's sound is on mute or not.
Audio is present, but video does not appear or is discolored	● Try adjusting the contrast and brightness.
Static noise affects video and audio quality	● Check if the antenna at the back of the TV is connected properly.
Broken lines on screen	● Electrical appliances such as hair dryers or vacuums etc. may be interfering with your TV set. Switch these appliances off.
Remote doesn't work	● Make sure the plastic bag which came with the remote control is removed. Try using the remote in a shorter distance from the TV. Check if the placement of the batteries is correct, or try using new batteries with the remote control. ● The TV will go into Standby mode if it receives no response in a few minutes.
No video (PC mode)	● Please check if the cable is connected to the VGA port correctly, or if the cable is bent in some places.
Vertical line blinking (PC Mode)	● Enter the main menu, and adjust the vertical placement to eliminate the vertical line.
Horizontal tearing (PC Mode)	● Adjust the horizontal placement of the screen to clear any horizontal lines.
Screen is too bright or dark (PC Mode)	● Adjust the brightness or contrast in the main menu.
No response from the PC	● Check if the PC's display resolution is set to a compatible resolution for the TV.
Lines appearing when a device is connected to the RCA port	● Make sure you are using a cable in good quality.
Problems are unresolved	● Unplug the power cable and wait for 30 seconds, then reconnect to the socket. If problems still persist, do not attempt to repair the TV by yourself. Kindly contact the service center.

Do not leave your TV displaying a static image, whether it is from a paused video, menu screen, etc. for an extended period of time, doing so will damage the display and may cause image burn-in.

Problems & Solutions

Note: Problems & solutions 1 to 2 are for the TV models which have network functions, so users of non-connected TV models can disregard them.

1. Fail to link to the network.

- Check if your TV is connected with the network;
- Reboot your TV;
- Consult your Internet service provider, to confirm if access of your router is supported. Refer to the operation manual of your router, and activate its DHCP function after linking the network to your TV.
- Make sure your TV is connected to a router, and make sure your router is powered on. Check that your router/modem has an Internet connection, and that your Ethernet cables/wireless connection is OK. Test your connection with a computer to make sure it is OK. Should the problem persist, contact customer service.
- Check if TV system time is correct or not. Sometimes TV system time is synchronized to the wrong time from abnormal broadcast signal. In this case, please set system time manually.

2. The video could not be played smoothly.

- Videos from your USB flash drive --- It may be caused by abnormal data transmission, or its code rate is far beyond the supported formats of this TV set.
- Videos downloaded from Internet, or online videos.
 - a. It may be caused by the lower bandwidth of your network. A high network speed is required to handle online videos.
 - b. Peak Internet usage times may affect the bandwidth.
 - c. Check if any other computers on the same network are also operating, as they may be using up bandwidth. Especially if they are downloading or playing online videos.
 - d. The video may not be smooth itself, it is not the problem of your TV or network.

3. When two portable hard drives are connected with the TV at the same time, they will not be recognized sometimes.

- All portable hard drives consume a lot of power, which may result in power supply problems. We recommend inserting only one hard drive, or a low power consumption portable hard drive.

4. The video from a portable hard drive (USB) is playing with no sound.

- The audio format of the video in your portable hard drive is not supported by the TV player.

5. Some videos fail to play.

- The formats of the videos may not be supported by the TV, especially videos shot by certain kinds of cameras, generally with their private protocol of

formats, which are not compatible with your TV.

6. Video stops playing midway.

- Mistakes may occur when videos are copied or compressed, so they may automatically stop playing during playback.

7. What should I pay attention to, when I do software updating?

- No power cuts when software updating;
- Avoid any operations with your remote control when software updating;
- Depending on your Internet connection speed, the software updating process may take some time.

8. There are no distinct changes of TV interface after software updating.

- Under certain conditions, software updating may not only update or add new functions but also improve the performance of the TV set, without distinct changes of interface. Also, there may be no changes to the user interface at all.

9. What should I do when software updating process stops due to a sudden power-off?

- If you do software updating by USB, do not pluck the USB drive from your TV, and restart your TV to continue software updating; If you do software updating by Network, also restart your TV and check if it is functioning correctly.

10. With a USB device being inserted into the TV in advance, I am prompted that no USB devices are detected after I access Media, why?

- There may be something wrong with your portable hard drive(s), damaged or with low voltage. It's recommended to provide an additional power supply to the hard drive(s).

11. External device cannot be recognized.

- Some external devices (e.g. webcam, smart phone, tablet, game handle, and external wireless adapter) may not be compatible with the TV and cannot be supported for certain functions (wireless display, gesture control, face recognition, if any). Please try a similar device. If it does not work, contact your local dealer.

12. Voice search does not work.

- Check if your remote control has been successfully paired with your TV.
- Check if the language setting is correct.
- Check if Google server is available and stable.

Specifications

Screen Size	power Consumption	Main accessories
24"	30W/36W	User 's manual x1 Remote controller x1 Power cord x1 AAA Batteries x2 Warranty Card x1 Base Stands x2 Wall Mount x1 Screws x4 AV Cable RF Cable Connector
28"	31W/36W	
32"	40W/56W	
40"	60W/70W/90W	
42"	65W/70W/90W	
43"	70W/80W/90W	
50"	100W/108W/120W	
55"	118W/135W/170W	
58"	135W/160W	
65"	160W/165W/190W/200W	
75"	185W/230W/250W/260W	



 
Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012–2025 Dolby Laboratories. All rights reserved.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

Remote Control

- ① Switches the TV between on and standby mode.
- ② Indicator light
- ③ Mute or restore your TV sound.
- ④ **INFO**: Displays the present channel information such as the current time and channel name.
- ⑤ **TEXT**: Press to enter Teletext when play the program.
- ⑥ **Google Assistant**:
Talk to Google to control your TV using your voice.
- ⑦ **Profiles**: Switch between profiles.
- ⑧ **Setting**: In the HOME page, this button is "Dashboard" function. On the Live TV, this button is "Menu" function.
- ⑨ **Navigation buttons**: Cursor UP/LEFT/RIGHT/DOWN.
- ⑩ **Back**: Press to move back through menus.
- ⑪ **Live Guide**: Open the Live TV EPG.
- ⑫ **HOME**: Displays the home screen.
- ⑬ **Live TV**: Press it to enter Live TV.
- ⑭ **Inputs**: Display/Select signal source options.
- ⑮ **NETFLIX**:
Connects to NETFLIX for viewing online TV shows and films (internet connection required).
- ⑯ **YouTube**:
Connects to YouTube (internet connection required).
- ⑰ **Prime video**:
Connects to Prime video (internet connection required).
- ⑱ **Disney+**:
Connects to Disney+ (internet connection required, some regions may not support it).
- ⑲ **MENU**: Displays the OSD (On Screen Display) menu.
- ⑳ **SUBT**: Close Caption.
- ㉑ **Audio**: Displays the Audio Language list and select an audio language or audio format if available (only applicable when the TV programme has this feature).
- ㉒ **Media control**: Fast forward/back
Play the last/next program
Play/Pause program

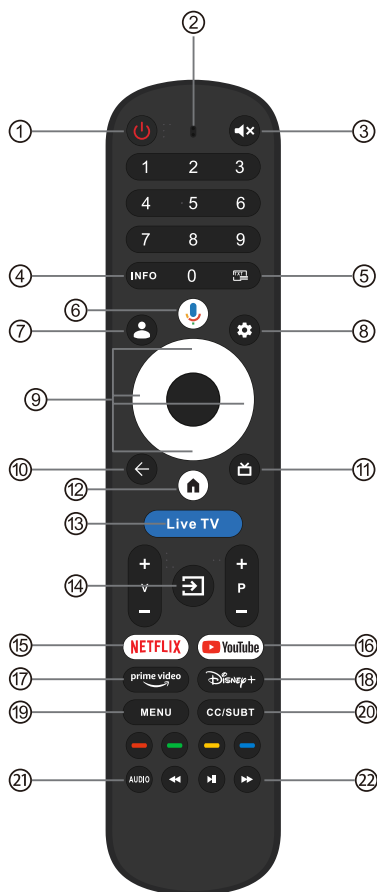

* Google Assistant is not available in certain languages and countries. Availability of services varies by country and language.

* Google TV is the name of this device's software experience and a trademark of Google LLC. Google, YouTube, Google Cast and YouTube Music are trademarks of Google LLC.



**The widest service center network in the country with
more than 400 outlets**

**Dawlance Reliable service is available for all
household products**

Services at your doorstep within 24 hours

**Call Center Services available
all week 24/7**

Service UAN: 021-111-11-7359(RELY)

Head Office: Dawlance Center 7/4, Civil Lines-9

Dr.Ziauddin Ahmed Road, Karachi.

Ph: (021)35652450-9

E-mail: customer.service@dawlance.com.pk

Website: www.dawlance.com.pk

