 


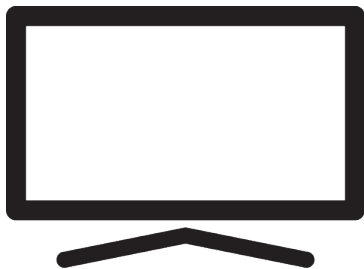

## Television

### User Manual



A XL100 C

## Please read this manual first!

---

Dear Customer,

Thank you for choosing this product. We wish your product, produced with high quality and technology, to offer you the best efficiency. Therefore, carefully read this entire manual and other supplied documentation before using the product and keep it for future reference. If you hand over the appliance to someone else, give them the user manual as well. Follow the instructions by paying attention to all information and warnings specified in the user manual.

Keep in mind that this user guide may apply to several product models.

If the user manual contains more than one model, the differences between the models are clearly specified in the manual.

### Symbols and their explanation

There are below symbols in user manual and on the product:

|                                                                                  |                                              |
|----------------------------------------------------------------------------------|----------------------------------------------|
|  | Risk of death or injury.                     |
|  | Useful tips on important information or use. |
|  | Electric shock warning.                      |
|  | Read the user manual.                        |

## Table of Contents

|          |                                                                                    |           |          |                                                              |           |
|----------|------------------------------------------------------------------------------------|-----------|----------|--------------------------------------------------------------|-----------|
| <b>1</b> | <b>Safety Instructions</b>                                                         | <b>4</b>  | 3.4      | Product Introduction                                         | 13        |
| 1.1      | Intended Use                                                                       | 4         | 3.5      | Keypad                                                       | 14        |
| 1.2      | Electrical Safety                                                                  | 4         | 3.5.1    | Switching the Appliance On from the Standby Mode             | 14        |
| 1.3      | Fire Safety                                                                        | 5         | 3.5.2    | Switching and Restoring the Appliance to/from the Sleep Mode | 14        |
| 1.4      | Transportation Safety                                                              | 5         | 3.5.3    | Switching the Appliance to the Standby Mode                  | 14        |
| 1.5      | Installation Safety                                                                | 5         | 3.6      | Connecting the Antenna and the Power Cord                    | 15        |
| 1.6      | Safety of Children, Vulnerable Persons and Pets                                    | 5         | 3.6.1    | DVB-S Satellite Antenna Connection                           | 15        |
| 1.7      | Safety During Maintenance and Cleaning                                             | 6         | 3.6.2    | DVB- T, DVB- C and Analogue Antenna Connection               | 15        |
| <b>2</b> | <b>Environmental Instructions and General Information</b>                          | <b>7</b>  | 3.6.3    | Electrical Connection                                        | 15        |
| 2.1      | Conformity with WEEE Regulation and Disposing of Waste Product..                   | 7         | 3.7      | Remote Control                                               | 16        |
| 2.2      | Information on Used Batteries                                                      | 7         | <b>4</b> | <b>Settings</b>                                              | <b>16</b> |
| 2.3      | Information on the Disposal of the Packaging                                       | 7         | 4.1      | Preparation                                                  | 16        |
| 2.4      | Information on Power Saving                                                        | 7         | 4.2      | Initial Set-up and Setting the TV set                        | 17        |
| 2.5      | Information on PCB Conformity                                                      | 7         | <b>5</b> | <b>Additional Information</b>                                | <b>21</b> |
| 2.6      | Information on Interface Requirements                                              | 7         | <b>6</b> | <b>Troubleshooting</b>                                       | <b>22</b> |
| 2.7      | Information on Still Images                                                        | 8         |          |                                                              |           |
| 2.8      | Information on Electromagnetic interference                                        | 8         |          |                                                              |           |
| 2.9      | EU Directives                                                                      | 8         |          |                                                              |           |
| 2.10     | Note for Customers in Turkey                                                       | 8         |          |                                                              |           |
| 2.11     | Wireless LAN Module Specification                                                  | 8         |          |                                                              |           |
| 2.12     | Wireless LAN Module Specification                                                  | 8         |          |                                                              |           |
| 2.13     | Bluetooth (*) Module Specification                                                 | 9         |          |                                                              |           |
| 2.14     | Notes for WLAN Connection                                                          | 9         |          |                                                              |           |
| 2.15     | Information on the Symbols Which May Be Present on the Back Cover of the Appliance | 9         |          |                                                              |           |
| 2.16     | Service Information for Authorised Dealers                                         | 9         |          |                                                              |           |
| 2.17     | Information on Licenses                                                            | 10        |          |                                                              |           |
| 2.18     | Information on Software Updates                                                    | 10        |          |                                                              |           |
| <b>3</b> | <b>Your Product</b>                                                                | <b>11</b> |          |                                                              |           |
| 3.1      | Contents of the Package                                                            | 11        |          |                                                              |           |
| 3.2      | Installation or Hanging                                                            | 12        |          |                                                              |           |
| 3.3      | Inserting Batteries into the Remote Control                                        | 12        |          |                                                              |           |



## 1 Safety Instructions

This section includes the safety instructions that will help prevent personal injury or material damage risks.

Our company cannot be held responsible for the damages that might occur due to failure to observe these instructions.

- Always let the authorized service perform installation and repair works.
- Use only the original spare parts and accessories.
- Do not repair or replace any part of the product unless specified expressly in the user manual.
- Do not perform any modifications on the product.



### 1.1 Intended Use

- This appliance is designed for use in dry rooms.
- Use the product with the supplied stand or a suitable VESA bracket.
- The product is primarily intended for the playback of TV programs, streaming content and music/video material from external devices. Any other use is strictly prohibited.
- It is not intended as an information display or for predominant use as a computer monitor. If a still image or a non-full-format image is displayed for an extended period, visible traces may remain on the screen for some time. This is not a defect that can be used as the basis for a warranty claim.



### 1.2 Electrical Safety



**IMPORTANT SAFETY INSTRUCTIONS. KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.** Immediately followed by: Read all security warnings, instructions, illustrations and specifications provided with this appliance.

 
- The product shall not be plugged into the outlet during installation, maintenance, cleaning, repair, and transportation operations.
- Standby LED is off when the mains plug is disconnected. If the Standby LED is lit then it means that your product is connected to the mains.
- Do not dismantle the product. Security risks may arise and also the guarantee of the product can become void if the television is dismantled.
- The product can only be operated with the power cord or the AC/DC adapter supplied with the product.
- Do not operate the product with a damaged power cord/AC/DC adaptor (if supplied).
- If the plug on the product has an earthing contact, only insert the plug into a socket with an earthing contact.
- Only plug the product into the mains socket after you have connected the external devices and the antenna.
- If the power the cord is damaged, it shall be replaced by authorized service only to avoid any risk that may occur.
- Do not jam the power cord under and behind the product. Do not put a heavy object on the power cord.
- The power cord should not be bent, crushed, and come into contact with any heat source.
- Never use an extension cord or a multi socket to operate your appliance.
- The product shall not be supplied with an external switching device such as a timer or it shall not be connect it to a circuit that is regularly turned on and off by a device.
- The plug of the product shall be in an easily accessible place. If this is not possible, there should be a mechanism (fuse, switch, switch, etc.) on the electrical installation to which the product is connected.

ted, in compliance with the electrical regulations and separating all poles from the network.

- Do not touch the plug of the product with wet hands.
- Do not unplug the product by holding the cable, hold the plug to unplug the product.



### 1.3 Fire Safety

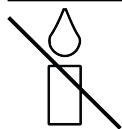

To prevent the spread of fire, keep candles or other open flames away from this product at all times

- Do not cover the ventilation slots on the product.
- Always unplug the power plug and antenna plug during lightning and thunderstorm.
- Keep candles or other open flames away from the TV set.
- Do not expose the batteries to extreme heat such as sunlight, fire or the like.
- Only use batteries of the same type (brand, size, properties). Do not use used and new batteries together.
- Protect the product from moisture. Do not place any vessels filled with water (such as vases) on the product.



### 1.4 Transportation Safety

- Unplug the product before transportation.
- Disconnect antenna cable and other external devices connected to the product.
- Keep the product in its original packaging if it is available, or wrap it in bubble wrap or thick cardboard if the original packaging is not available.
- Take required precautions against falling and tipping of the product. Do not bump or drop the product while carrying it.



### 1.5 Installation Safety

- Do not install the product on an unstable surface. Otherwise, the TV may fall, causing serious injury and death.
- Ensure that the furniture you will place the product can safely support the TV set.
- Make sure that the edges of the product does not protrude beyond the dimensions of the furniture on which it is placed.
- Do not place the product on tall furniture that has the risk of tipping over such as cabinets, sideboards, or bookcases. If you have no other choice, fix the furniture and the TV to the wall to prevent them from tipping over.
- Do not place product on fabric or other materials located between the product and furniture.
- Do not place the product next to heating units or in direct sunlight.
- To ensure adequate ventilation, maintain clearance of at least 10 cm around the product.
- Some furniture surfaces may discolor when they come in contact with rubber. To protect furniture, you can place a sheet made of glass or plastic under the stand. Do not use textile underlays or mats such as doilies.
- Consider the above mentioned warnings whenever you change the location of the product.



### 1.6 Safety of Children, Vulnerable Persons and Pets

- Electrical appliance are dangerous for children and pets. Children and pets must not play with or climb on the product.
- Instruct children that there is danger associated with climbing on furniture when the TV set is to be reached.
- Cleaning and user maintenance should not be performed by children unless there is someone overseeing them.

- Keep the packaging materials out of the reach of children. There is a hazard of injury and suffocation.
- Before disposing of the product, cut the power cord and render it non-functional for children's safety.



## **1.7 Safety During Maintenance and Cleaning**

**WARNING:** Unplug the product during installation, maintenance, cleaning and repairing procedures.

- Clean the cabinet of the product with a dry or a lightly dampened soft cloth.
- Do not use wet cloths and detergents (Glass Cleaning detergents, cologne, and all other cleaning chemicals).
- Clean the display of the product by wiping with a damp cloth. Do not use water or water with detergent.
- Do not use any detergents containing alcohol, spirit, ammonia, or abrasive agents while cleaning.

## 2 Environmental Instructions and General Information

---

### 2.1 Conformity with WEEE Regulation and Disposing of Waste Product

This product does not contain hazardous and prohibited substances specified in the "Regulations for Supervision of Waste Electrical and Electronic Equipment" published by Turkish Ministry of Environment and Urban Planning. Conforms the WEEE Regulation.



This product has been made from high-quality parts and materials which can be recycled and re-used. Therefore, do not throw the product away with household waste and other

waste at the end of its life. Take it to a collection point for recycling electrical and electronic devices. Contact your local authority for the collection points in your region. Help preserve the nature and natural resources by recycling used products. Before disposing of the product, cut the power cord and render it non-functional for children's safety.

### 2.2 Information on Used Batteries



Do not dispose of batteries with the household waste. Used batteries must be returned to retail stores or public collection points. You can help to protect the environment in

this way.

This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical substance symbol. The chemical symbols for mercury (Hg) or lead (Pb) are added if the battery contains more than 0.0005% mercury or 0.004% lead.

### 2.3 Information on the Disposal of the Packaging

- The packaging of the product is manufactured from recyclable materials.
- Dispose of by sorting in accordance with waste regulations.
- Do not dispose of along with normal household waste.

### 2.4 Information on Power Saving

- Those items mentioned below will help you reduce the consumption of natural resources as well as save your money by reducing electricity bills.
- Switch your TV set to stand-by if you will not use it for a while. In standby mode, the TV set uses a very little amount of energy ( $\leq 0.5$  W).
- If you intend to not use the device for an extended period, unplug the power cord from the socket.
- If the device has a main switch, it will be enough to shut down the device via main switch. The device's energy consumption will reduce almost to Zero Watt.
- When you switch off or unplug the TV, the switch-on timer and the programmed recordings will not work.
- Select a location for storing the device where no direct sunlight falls on the screen. Thus, you can select a lower backlight and provide power saving.
- TV consumes less energy when brightness is reduced.

### 2.5 Information on PCB Conformity

- "Does not contain PCB (Polychlorinated Biphenyl)."

### 2.6 Information on Interface Requirements

- This product has been manufactured in compatibility with Telecommunication networks.

## 2.7 Information on Still Images

- Watching the same image for a long time on the screen may cause the still image to remain feebly on the background. Feeble image(s) on the background is/are originated from LCD/LED technology and does/do not require any action under guarantee. To avoid such cases and/or minimize the impact, you may observe the tips below.
- Do not allow the same TV channel to stay on the screen for a very long time. Channel logos may cause this situation.
- Do not allow the images, which are not full screen, to constantly stay on the screen; if not streamed in full screen format by the broadcaster, you can convert the images to full screen by changing picture formats.
- Higher brightness and/or contrast values will lead this impact to appear faster; therefore, you are recommended to watch your TV in the lowest brightness and contrast levels.

## 2.8 Information on Electromagnetic interference

- Devices connected to the product (satellite receiver, DVD player, and etc.) or signal emitting devices (router and etc.) close to the product may cause disturbance in the image and noise in the sound.
- Connection cables used on the product must be shorter than 3 m.
- If the product cannot perform its function due to electrostatic discharge, the user may need to switch off and then switch on the product.
- A shielded, HDMI-certified and ferrite-core cable shall be used with the product.
- If the product cannot be recovered as a result of an electrostatic discharge, user intervention will be required.

## 2.9 EU Directives

This product complies with 2014/53/EU, 2009/125/EC, 278/2009, 642/2009, 2017/1369/EU, 1062/2010, 2011/65/EU, 2019/2013/EU, 2019/2021/EU. directives: To obtain a copy of declaration of compliance (DoC);

Please visit <https://www.arcelik.com.tr/destek/>. You can access the declaration of conformity by typing model number of your television indicated on the cover page of the instruction manual into the field where it says "Enter model number".



This appliance can be used observing the legal regulations in the European countries below.

AT, BE, BG, CH, CY, CZ, DE, DK, EE, ES, FI, FR, GB, GR, HU, IE, IS, IT, LI, LT, LU, LV, MT, NL, NO, PL, PT, RO, SE, SI, SK, HR, TR

5150 -5350 MHz band can be used indoors only. (For Wi-Fi/Bluetooth integrated model or Wi-Fi integrated model). This device can also be operated in the countries outside Europe.

---

## 2.10 Note for Customers in Turkey

This device's WLAN (Wi-Fi) feature can only be used indoors. In Turkey, outdoor use is not allowed. Make sure WLAN (Wi-Fi) feature is closed when using outdoors.

## 2.11 Wireless LAN Module Specification

Frequency Range: Output power (Maximum)

2400 MHz - 2483.5 MHz: <20dBm

## 2.12 Wireless LAN Module Specification

Frequency Range: Output Power (Maximum)

5150 MHz - 5250 MHz: <23dBm

5250 MHz - 5350 MHz: <23dBm

5470 MHz - 5725 MHz: <23dBm

## 2.13 Bluetooth (\*) Module Specification

Frequency Range: Output power (Maximum)

2400 MHz - 2483.5 MHz: <20dBm

(\*) Optional, not available on all products.

## 2.14 Notes for WLAN Connection

### Notes for customers:

The following information is only applicable for devices that are sold in countries enforcing EU regulations

### For the customers in Italy;

Public use is subject to service provider's permission.

### For the customers in Norway;

Radio equipment use is not allowed in a geographical area within 20 km diameter of Ny-Alesund, Svalbard.

### For the customers in Russia;

Short Range Device Applications with FHSS Modulation.

Maximum 2.5 mW e. i. r. p.

for collecting telemetry information for automatic tracking and source calculation systems, 100mW e. i. r. p is the maximum allowed short range device density value permitted for use on outdoor applications without any limitation on installation height. For uses with other purposes, this applies to outdoor application in which this value does not exceed 10m above the ground.

Short range device density for indoor applications is 100mW e. i. r. p maximum.

Short range device applications with broadband modulation with DSSS and other than FHSS.

The maximum average density value for short range devices with broadband modulation with DSSS and other than FHSS is 2 mW/MHz or 100mW e. i. r. p.

For only the purpose of compiling telemetry data for automatic monitoring and source estimation systems, maximum short range device allowed to be used in outdoor applications is 20 mW/MHz or 100 mW e. i. r. p.

Maximum density value for indoor use of short range devices is 10mW/MHz or 100 mW e. i. r. p.

### For the customers in Ukraine;

Maximum short range device density value for indoor uses, along with internal antenna with 6 dBi amplification factor

## 2.15 Information on the Symbols Which May Be Present on the Back Cover of the Appliance



### Double insulation symbol

Indicates that this product doesn't require grounded connection.



### Alternating current symbol

Indicates that the product operates with the mains voltage.



### Direct current symbol

Indicates that this product operates with the AC/DC adapter supplied with the appliance

only

## 2.16 Service Information for Authorised Dealers

This product complies with the European Union directives and regulations specified below:

2014/53/EU Radio Equipment Directive  
2009/125/EC: Directive and relevant for ecodesign for products using energy as well as its following sub-directives;

278/2009: Regulation regarding eco-friendly design requirements regarding energy consumption of uncharged external power sources and average active efficiency (for models with AC/DC adapters);  
642/2009: Regulation regarding environmentally-conscious design requirements for TVs.

801/2013 Amending regulation regarding ecodesign requirements for televisions.

2010/30/EU: Directives regarding Energy Labelling of Energy-Related products as well as its following sub-directives;  
1062/2010: Regulation regarding energy labelling of televisions.  
2011/65/EU: Directive on limitations on use of certain hazardous materials on electric, electronic domestic and office equipment.

## 2.17 Information on Licenses



HIGH-DEFINITION MULTIMEDIA INTERFACE

- The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

 
- Dolby, Dolby Vision, Dolby Atmos and Double-D symbols are registered trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license of Dolby Laboratories. Confidential Unpublished Works. Copyright: © 2012–2024 Dolby Laboratories. All rights reserved.
- The availability of Google Assistant varies by region. Google, YouTube, Android TV, Chromecast built-in and other trademarks are trademarks of Google LLC.

## 2.18 Information on Software Updates

- The features, descriptions and pictures provided in the user manual may change with the update of TV software.

## 3 Your Product

### 3.1 Contents of the Package

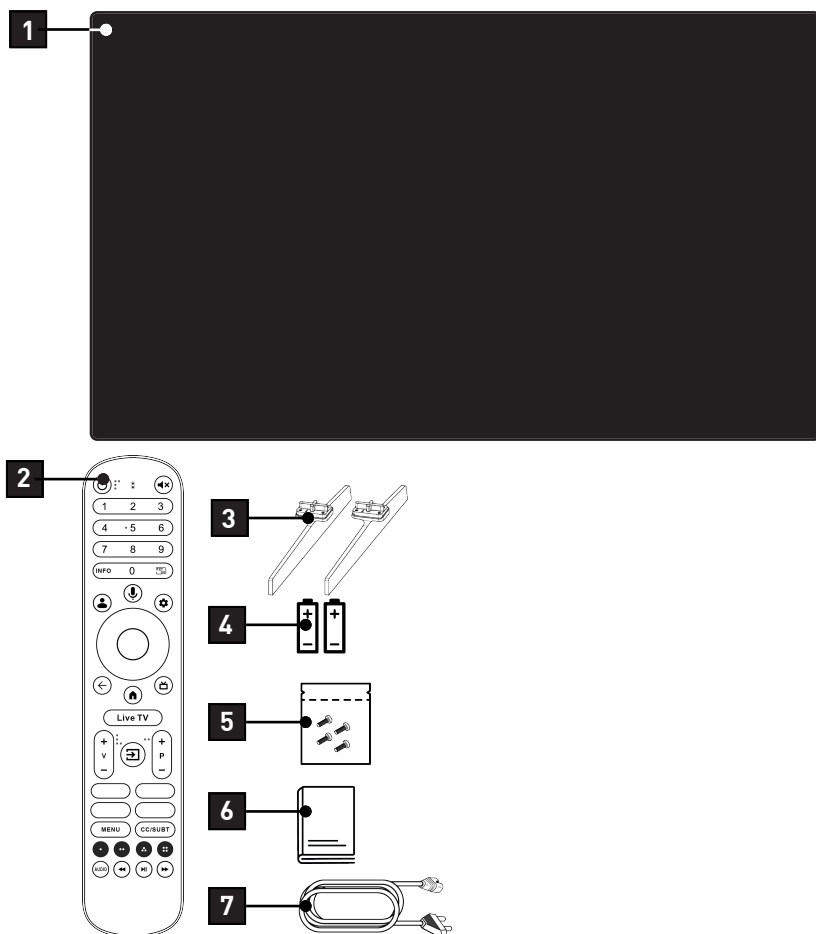

1 Television

3 Stand

5 Screws and installation instructions  
for the stand

7 Power cord

2 Remote control

4 Batteries for remote control

6 Quick instruction manual

## 3.2 Installation or Hanging

Select a location so that no direct sunlight falls on the screen.

### 3.2.1 Installation with Stand

- To mount the stand, refer to the installation instructions included.
- Place the TV set on a hard, level surface.

### 3.2.2 Preparation for Installation with a VESA Installation Kit

Contact authorized dealer to purchase the installation kit.

You will need:

- A pair of scissors,
- A cross-tip screwdriver.

 


Follow the installation instructions for the VESA installation kit.

1. Place the TV in the film on a smooth surface with the screen facing down.
2. Cut open the film on the back side using the scissors.
3. Connect the required cables to the connectors on the TV. Refer to the "Connecting the antenna and the power cord" [► 15] section in this manual.
4. Tie the cables so they do not hang down onto the floor.
5. Screw the VESA installation kit onto the television and mount it according to its installation instructions.

## 3.3 Inserting Batteries into the Remote Control


1. Open the battery compartment.
2. Insert batteries as marked on the bottom of the battery compartment (2 × Alkaline/LR03/AAA).
3. Close the battery compartment.

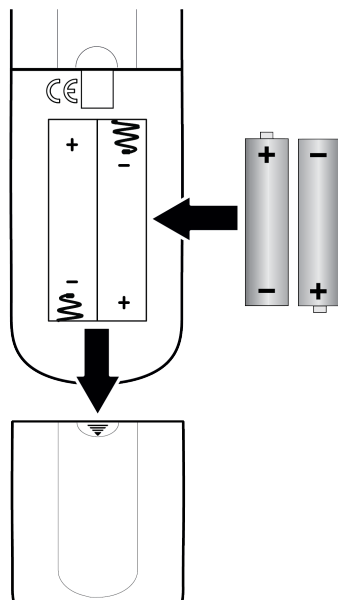

### Notes:


- If the television no longer reacts properly to remote control commands, the batteries may be flat. Never keep flat batteries inside the battery compartment.
- The manufacturer accepts no liability for damage resulting from used batteries.
- Batteries, including those which contain no heavy metal, must not be disposed of with household waste. Please dispose of used batteries in an environmentally sound manner. Find out about the legal regulations which apply in your area.
 
### 3.4 Product Introduction

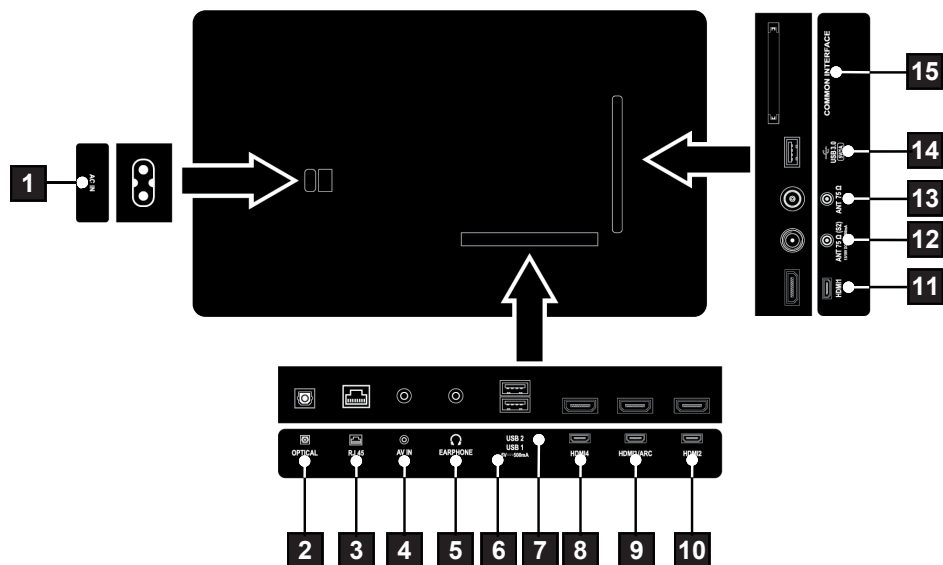

- |                                                                       |                                                                    |
|-----------------------------------------------------------------------|--------------------------------------------------------------------|
| 1 Power cable input.                                                  | 2 Optical audio output.                                            |
| 3 Network connection.                                                 | 4 AV port for digital audio and image data.                        |
| 5 Headphone output.                                                   | 6 USB port for external data medium and keyboard.                  |
| 7 USB port for external data medium and keyboard.                     | 8 HDMI4 input (4K@144Hz, VRR)                                      |
| 9 HDMI3 input (4K@144Hz, VRR)                                         | 10 HDMI2 input (4K@60Hz)                                           |
| 11 HDMI1 input (4K@60Hz)                                              | 12 Satellite antenna socket. Suitable for single-cable SCR system. |
| 13 Input for antenna cable (terrestrial antenna or cable connection). | 14 USB port for external data medium and keyboard. (USB 3.0)       |
| 15 CA module slot for receiving encrypted channels.                   |                                                                    |

## 3.5 Keypad

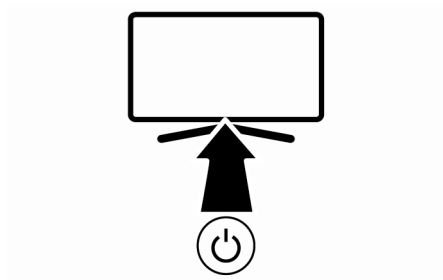 

### 3.5.1 Switching the Appliance On from the Standby Mode

1. Press the  to turn on the TV from the standby mode.

### 3.5.2 Switching and Restoring the Appliance to/from the Sleep Mode

 
1. The TV set switches to sleep mode when the  is pressed shortly while it is on.
2. The TV set switches on from the sleep mode when the  is pressed shortly while it is on the sleep mode.

### 3.5.3 Switching the Appliance to the Standby Mode

1. Press the  for 5 seconds to switch the appliance to the standby mode  
⇒ Turn off menu will be displayed.
2. Select OK and confirm by pressing .
3. The TV set switches to the standby mode.


## 3.6 Connecting the Antenna and the Power Cord

### 3.6.1 DVB-S Satellite Antenna Connection

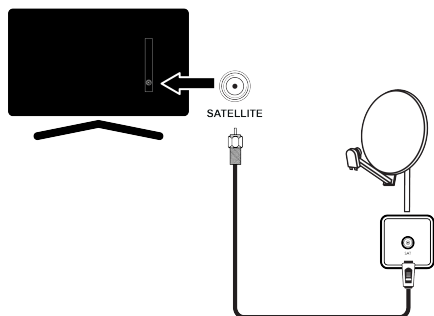

1. To receive digital satellite channels (DVB-S), connect the satellite antenna cable to the **SATELLITE** antenna socket on the TV set.

### 3.6.2 DVB- T, DVB- C and Analogue Antenna Connection

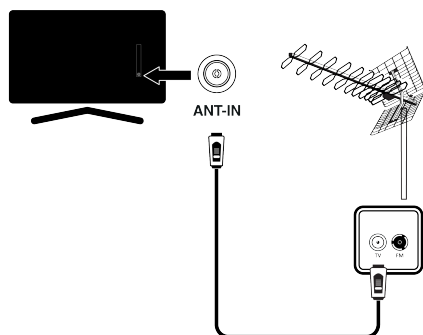 


1. To receive terrestrial digital channels (DVB- T), Digital cable channels (DVB-C) or Analogue broadcast channels, connect the antenna cable to the **ANT IN** socket on the television set.

#### Note:

 - When connecting an indoor antenna, you may have to try it out at different positions until you get the best reception.

### 3.6.3 Electrical Connection

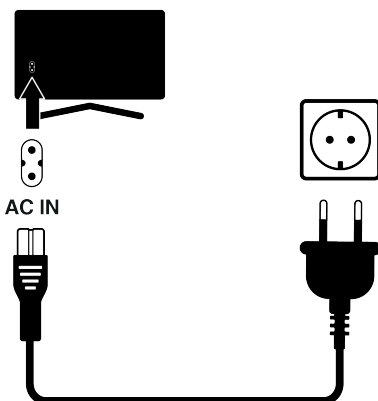


1. Plug the mains cable into the wall socket.



Only plug the device into the mains socket after you have connected the external devices and the antenna.

Do not use an adapter plug or extension cable which does not meet the applicable safety standards. Do not tamper with the power cord.

## 3.7 Remote Control

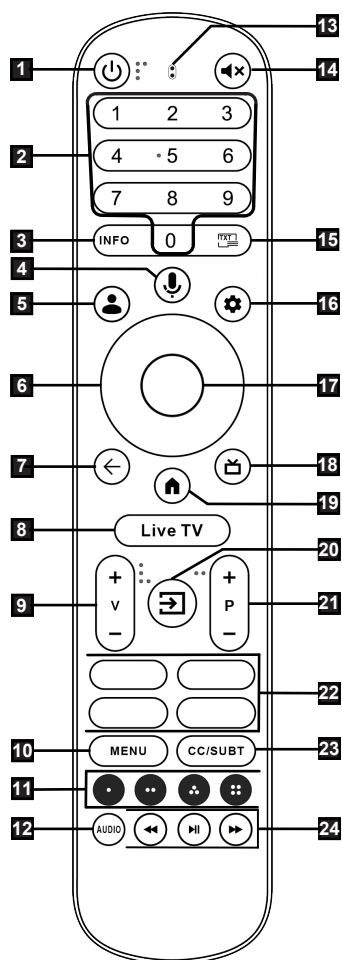 

1. Turns the TV on/off (stand-by).
2. Directly selects the channels.
3. Displays information.
4. Voice Control.
5. Opens the Select Account menu.
6. Up/down, right/left direction buttons.
7. Switches the menus one level back.
8. Switches to the TV Mode.
9. Adjusts the volume.
10. Opens menus of various functions.
11. Selects/activates various functions in menus.
12. Selects audio language.
13. Microphone
14. Turns the sound on/off (Mute).
15. Switches between teletext and TV modes.
16. Opens the control panel.
17. Confirms/activates various functions.
18. Switches to the TV Mode, Opens the electronic TV Guide.
19. Opens the Home menu.
20. Selecting an input.
21. Selects the channels step by step.
22. Application shortcuts.
23. Opens subtitle menu.
24. Play, Stop, Forward, Reverse.

## 4 Settings

### 4.1 Preparation

The Television is fitted with an “installation assistant”, which guides you step by step through the basic settings.

Using the screen dialogue, the user can make supposedly complex settings and data entries simply and clearly for everybody.

Pages and dialogue items appear on the screen, which identify the subsequent and likely operating steps.

#### **Settings for connecting to the home network**

Depending on the connection type of the home network, connect your television to the home network:

- via a LAN connection or

- Wireless network connection with WLAN

### Tuning television channels

Depending on the type of antenna connected, you can decide which channels you would like the television to search for.

### DVB-S digital satellite channels

Sets the digital TV channels.

You have two options for this search:

Basic set-up that pre-sets a standard choice, e.g. Astra satellite 19.2° Eastern; you just need to start the scan; the professional installation, which allows you to make all required settings and set parameters for your receiver system.

### DVB- C digital cable channels

Sets the digital cable TV channels.

### DVB-T digital terrestrial channels

Sets the digital terrestrial TV channels.

#### Note:

 
See Detailed Channel Settings section for more information on digital television channel settings.

## 4.2 Initial Set-up and Setting the TV set

1. Connect the antenna and external device cables.
2. Plug the power cord into the socket.
3. Turn on the television using the  button on the remote control.
  - ⇒ After a while, the remote control pairing menu appears on the screen.
4. To pair the Bluetooth controller, press and hold buttons  and  simultaneously for 5 seconds.
  - ⇒ The LED on the remote control will start blinking.
  - ⇒ Once the TV pairing with the remote control is complete, the  symbol followed by the **Welcome** menu will appear on the screen.

### Important:

- If you experience pairing problems with the Bluetooth remote, you need to reset it. To do this, press and hold buttons  and  on the remote simultaneously for 5 seconds.

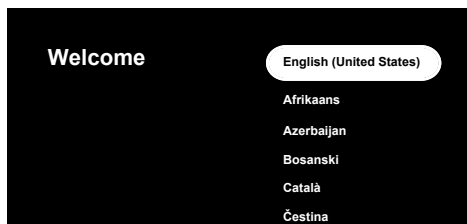

5. Select your language.

#### Notes:

- You can install the product using two methods.
  - **Google TV setup:** Sign in with a Google account and set up Google TV with all online features, antenna broadcasting, and external device connections activated.
  - **Basic TV Setup:** This setup only involves active antenna reception and external device connections.

### Google TV Setup

6. Choose **Set up Google TV**.
7. Select your wireless network using button / and then press button .
8. Enter the wireless network password using the on-screen keyboard, select key , and press button .
  - ⇒ Message **Connecting to ..... network** is followed by Message **Connected**.
  - ⇒ Menu **Sign in** is displayed.
9. Enter the email address using the on-screen keyboard.
  - ⇒ To continue, select the  key from the screen and press the  button.

10. Enter your account password using the on-screen keyboard.

⇒ To continue, select the ➔ key from the screen and press the ● button.

11. Follow the instructions displayed on the television screen.

⇒ **Terms of Service** It is displayed.

12. Select **Agree** and press button ●.

⇒ **Google Services** It is displayed.

13. Select **Agree** and press button ●.

14. To search across all supported TV apps, select **Allow** and press ● or select **No** and press ●.

15. To download the apps you have subscriptions to, select **Confirm** from the list and press ● to continue.

16. Choose your country.

⇒ Menu **Terms of Service** is displayed.

17. Select **Agree** and press button ●.

18. Select your antenna type.

⇒ The next procedure varies depending on the type of antenna selected. Depending on the antenna type you choose... **Antenna, Cable or Satellite** Continue from that section.

⇒ To continue without performing a channel search, select **Skip** and press ●. Then select **Start now** and press ●. Your Google TV will be ready to use.

## Basic TV Setup

19. Choose **Set up Basic TV**.

20. Select your wireless network using button ▲/▼ and then press button ●.

21. Enter the wireless network password using the on-screen keyboard, select key ✓, and press button ●.

⇒ The message **Connecting to ..... network** is followed by the message **Connected**.

22. Follow the instructions displayed on the television screen.

⇒ **Terms of Service** It is displayed.

23. Select **Agree** and press button ●.

⇒ **Google Services** It is displayed.

24. Select **Agree** and press the ● button.

25. Choose your country.

⇒ Menu **Terms of Service** is displayed.

26. Select **Agree** and press button ●.

27. Select your antenna type.

⇒ The next procedure varies depending on the type of antenna selected. Depending on the antenna type you choose... **Antenna, Cable or Satellite** Continue from that section.

## Searching for Satellite Channels

28. Select **Satellite**.

⇒ Menu **Broadcast Type** is displayed.

29. Select **Digital**.

⇒ Menu **Select Operator** is displayed.

30. Select **Operator** and press the ● button.

⇒ Menu **Satellite Settings** is displayed.

| Satellite                                          |                                            |                               |
|----------------------------------------------------|--------------------------------------------|-------------------------------|
| <input type="checkbox"/> 01 Astra4A/SES 5.0°E      | <input type="checkbox"/> 001 10730 H 10730 | Astra4A/SES 5.0°E             |
| <input type="checkbox"/> 02 Hotbird 13B/C/E 13.0 E | <input type="checkbox"/> 002 10770 H 30000 | LNB Type 09750/10600          |
| <input type="checkbox"/> 03 Astra4A/SES 5E         | <input type="checkbox"/> 003 10890 V 27500 | LNB Power Auto                |
| <input type="checkbox"/> 04 Eutelsat 7B/C 7.0E     | <input type="checkbox"/> 004 10890 H 29990 | 22 KHz Auto                   |
| <input type="checkbox"/> 05 Eutelsat 9B 9.0E       | <input type="checkbox"/> 005 10600 V 10770 | Single Cable Off              |
| <input type="checkbox"/> 06 Astra1KR/L/M/N 19.2 E  | <input type="checkbox"/> 006 10890 V 27500 | Intermediate Frequency 1.1210 |
| <input type="checkbox"/> 07 Eutelsat 9E            | <input type="checkbox"/> 007 10730 H 10730 | Satellite Location SatA       |
| <input type="checkbox"/> 08 Hotbird 13E            | <input type="checkbox"/> 008 10770 V 30000 | Enable Protected Pin Off      |
|                                                    |                                            | Protected Pin 0               |
|                                                    |                                            | Sound Boom N/A                |
|                                                    |                                            | DiSeqC 1.0 N/A                |
|                                                    |                                            | DiSeqC 1.0 N/A                |

Signal Level  100

Signal Quality  100

31. Select the satellite you wish to search and press the ● button.

⇒ The satellite name is marked with ✓.

32. Press button ► twice to select Satellite settings.

33. Depending on the antenna system you are using, set the following settings:  
**LNB Type, LNB Power, 22 KHz, Single Cable, Sound Boom, DiSeqC 1.0 or DiSeqC 1.1.**

34. Press the  (blue) button to start the scan.

⇒ Menu **Channel Scan** is displayed.

35. Select **Scan Mode**. Select **Default** and press  or select **Network, Full Scan** and press .

⇒ **Default** - searches the previously defined transponder list.

⇒ **Full Scan** - The entire frequency range between 950 MHz and 2150 MHz is scanned.

36. Select **Channel Type**. For free digital television channels only, select **FTA Channels** or for all channels, select **All Channels** and press button .

#### Notes:

- If you encounter a significant decrease in the number of channels found or a lack of signal, check the cable connection, signal level, and ensure that the Diseq and LNB selections are correct.

37. To start the channel scan, select **Confirm** and press button .

⇒ Menu **Scanning** is displayed and the search for television channels begins.

⇒ The search is complete when the **Channel Installation** menu is displayed.

 
38. To continue, select **Next** and press the  button.

39. To complete the installation and exit, select **Start now** and press button .

#### Searching for Cable Channels

40. Select **Cable** and press button .

41. Menu **Broadcast Type** is displayed.

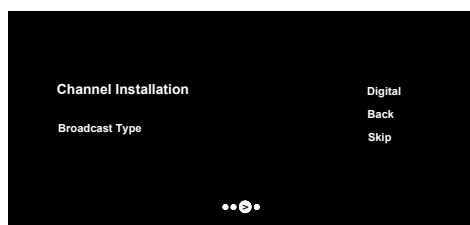

42. Select **Digital** and press button .

⇒ Menu **Digital Channel Installation** is displayed.

43. Select **Scan Type** and press the  button.

44. Select , , **Full Scan**, **Quick Scan**, or **Network Scan** and then press the .

#### Notes:

- Scanning Types **Frequency (MHz)** and **Network ID** are active when **Quick Scan** or **Network Scan** is selected.

45. To start the channel scan, select **Start** and press button .

⇒ The menu **Scanning** is displayed and the search for television channels begins.

⇒ The search is complete when the **Channel Installation** menu is displayed.

 
46. To continue, select **Next** and press button .

47. To complete the installation and exit, select **Start now** and press button .

#### Searching for terrestrial channels

48. Select **Antenna** and press the .

49. Menu **Broadcast Type** is displayed.

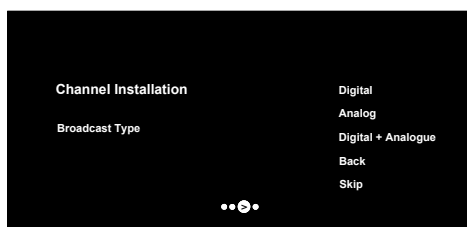

50. To specify whether you want to search only digital channels **Digital**, only analog channels **Analog**, or both **Digital + Ana-**

logue, select **Digital**, **Analog**, or **Digital + Analogue** using the ▲/▼ button and press the ● button.

- ⇒ The menu **Scanning** is displayed, and the search for television channels begins.
- ⇒ The search is complete when the **Channel Installation** menu is displayed.

51. To continue, select **Next** and press button ●.

52. To complete the installation and exit, select **Start now** and press button ●.

## 5 Additional Information

|                                                                                                            |                                                       |
|------------------------------------------------------------------------------------------------------------|-------------------------------------------------------|
| <b>Default Satellite</b>                                                                                   | 21                                                    |
| <b>LNB Power Supply</b>                                                                                    | 13/18 V, 14/19 V*, maximum 500 mA                     |
| <b>LNB switching signal</b>                                                                                | 0/22 kHz 650 mV +/- 250 mV Vpp                        |
| <b>DiSEqC</b>                                                                                              | 1.0 operation, 1.1 operation, 1.2 operation           |
| <b>Digital Stream Reception Ranges</b>                                                                     |                                                       |
| <b>Satellite (DVB-S)</b>                                                                                   |                                                       |
| <b>Ku Band</b>                                                                                             | 10,700 MHz... 12,750 MHz                              |
| <b>Modulation</b>                                                                                          | DVBS QPSK, DVBS2 QPSK, 8 PSK                          |
| <b>IF Band</b>                                                                                             | 950 MHz... 2150 MHz                                   |
| <b>Signal Level</b>                                                                                        | -25 dBm... -65 dBm                                    |
| <b>Cable (DVB-C)</b>                                                                                       |                                                       |
| <b>General Band</b>                                                                                        | 110 MHz... 862 MHz                                    |
| <b>Modulation</b>                                                                                          | 16 QAM, 32 QAM, 64 QAM, 128 QAM, 256 QAM              |
| <b>Symbol Rate</b>                                                                                         | 4.0 Msym/s... 7.2 Msym/s                              |
| <b>Terrestrial (DVB-T)</b>                                                                                 |                                                       |
| <b>UHF/VHF-Band</b>                                                                                        | Bandwidth 7 MHz and 8 MHz                             |
| <b>FFT Size</b>                                                                                            | 2 k, 8 k                                              |
| <b>Modulation</b>                                                                                          | 16 QAM, 64 QAM, QPSK                                  |
| <b>Protection Interval</b>                                                                                 | 1/4, 1/8, 1/16, 1/32                                  |
| <b>Terrestrial (DVB-T2)*</b>                                                                               |                                                       |
| <b>UHF/VHF-Band</b>                                                                                        | Bandwidth 7 MHz and 8 MHz                             |
| <b>FFT Size</b>                                                                                            | 1 k, 2 k, 8 k, 16 k, 32 k                             |
| <b>Modulation</b>                                                                                          | 16 QAM, 64 QAM, 256 QAM, QPSK                         |
| <b>Protection Interval</b>                                                                                 | 1/4, 19/256, 1/8, 19/128, 1/16, 1/32, 1/128           |
| <b>Channel Memory</b>                                                                                      |                                                       |
| <b>Satellite (DVB-S)</b>                                                                                   | 6000                                                  |
| <b>Cable (DVB-C)</b>                                                                                       | 1000                                                  |
| <b>Terrestrial (DVB-T)</b>                                                                                 | 1000                                                  |
| <b>Analogue</b>                                                                                            | 99                                                    |
| <b>Supported Media Formats</b>                                                                             |                                                       |
| <b>Picture</b>                                                                                             | jpg/jpe, bmp, png                                     |
| <b>Music</b>                                                                                               | m4a, aac                                              |
| <b>Video</b>                                                                                               | mov, xvid, mpg, mpe, vob, dat, trp, ts, avi, mp4, mkv |
| (*) Optional, not available on all products. The right of making technical changes and errors is reserved. |                                                       |



**ENERGY**

QR  
CODE



(\*) In order to display the product receipt belonging the product, please use your mobile device to scan the QR code on the energy label, shown with an (\*).

## 6 Troubleshooting

If the solutions listed below do not work, please contact your authorized service/dealer. Note that external devices such as video recorders or satellite receivers can also cause malfunctions.

### Notes:

This is a Class A product. During operation, the device may cause radio interference. In this case, the user may need to correct it. Please contact your authorized dealer.

### Screen on: No Signal.

- Antenna cable not connected >>> Connect the antenna cable.

### Screen is on, Channel Not Found message.

- No channel search has been performed >>> Perform a channel search.

### Low image contrast.

- Image settings are incorrectly adjusted >>> Adjust brightness, contrast, color, and advanced picture settings.
- There's a problem with the broadcast >>> Try switching to a different channel.

### Interference in image and/or sound.

- Interference from other devices near the TV >>> Change the position of the device.

### Shadows, reflections, and/or freezing in the image.

- Channel settings >>> Set up channels automatically or manually.
- Antenna adjustment >>> Have the antenna cable or system checked.

### No color.

- Color intensity is at minimum >>> Increase the color setting.
- TV standard setting (if setting option available) >>> Select the correct color standard.
- There's a problem with the broadcast >>> Please test on another channel.

### There's a picture but no sound.

- Volume is at minimum >>> Turn up the volume.

- Mute enabled >>> Press the mute button or the volume up button.
- There's a problem with the broadcast >>> Please test on another channel.

### The remote control isn't working.

- No optical connection >>> Hold the remote control vertically towards the television.
- Remote control battery level low or batteries discharged >>> Check the batteries, replace them if required.
- Operating condition undefined >>> If available, turn off the television for approximately 2 minutes by pressing the main power button or unplugging it from the socket.

### The image is dark in computer mode.

- The display resolution and refresh rate on your computer are incorrect >>> Change the settings on your computer (e.g., display resolution 1280 x 768, refresh rate 60Hz).

### The screen displays warnings about connection problems.

- Network cable not plugged in >>> Plug in the network cable.
- No wireless network connection >>> Check your wireless network settings.
- Your modem may not have an internet connection or may be malfunctioning. >>> Make sure your modem is connected to the internet.

### Videos in video apps stutter when connected to Wi-Fi.

- Low Internet Connection Speed >>> Low internet connection speed is related to the speed included in your subscribed package or a problem with your internet infrastructure. Contact your internet service provider.

### Videos in video applications stutter when connected via wired cable.

- Low Internet Connection Speed >>> Low internet connection speed is related to the speed included in your subscribed

package or a problem with your internet infrastructure. Contact your internet service provider.

## **Considerations Regarding Errors of Use and Warranty**

---

The following defects can be rectified for a fee. Warranty conditions do not apply for any of these cases;

1. Damages and malfunctions caused by errors in use,
2. Damages and malfunctions during loading, unloading, transport, etc. following the delivery of the goods to the consumer,
3. Damages and malfunctions arising from the electricity (socket, voltage, grounding, etc.), water (water pressure, tap, etc.), natural gas, telephone, internet, etc. network and / or infrastructure (drain, floor, environment, etc.) of the location where the goods are used,
4. Damages and malfunctions caused by Acts of God, fire, flood, etc,
5. Damages and malfunctions arising from the use of the goods contrary to the issues in the description and user manuals,
6. Damages and malfunctions arising from the use of the goods for commercial or professional purposes as defined in the Law No. 6502 on the Protection of Consumers,
7. In the event of maintenance, repair or any other intervention to the goods by unauthorised persons, the warranty given to the goods shall expire.

The warranty period of the goods replaced during the warranty application is limited to the remaining warranty period of the purchased goods.

Manufactured by Arçelik A.Ş.

Origin: Turkey