



Washing Machine

User Manual

Pesumasin

Kasutusjuhend



B3WFU 78225 WB

EN/ET



Table of Contents

1 Safety Instructions.....	4	6.8 Auxiliary Function Selection.....	27
1.1 Intended Use.....	4	6.8.1 Auxiliary Functions.....	27
1.2 Safety of Children, Vulnerable Persons and Pets	4	6.8.2 Functions/Programmes Selec- ted by Pressing the Function Keys for 3 Seconds	28
1.3 Electrical Safety.....	5	6.9 End Time	29
1.4 Handling Safety	5	6.10 Starting the Programme.....	30
1.5 Installation Safety.....	6	6.11 Loading Door Lock.....	30
1.6 Operational Safety.....	7	6.12 Changing the Selections After Programme has Started	31
1.7 Maintenance and Cleaning Safety	8	6.13 Cancelling the Programme	32
2 Important Instructions for Envir- onment.....	9	6.14 End of Programme.....	32
2.1 Compliance with WEEE Directive .	9	6.15 HomeWhiz Feature and Remote Control Function	32
2.2 Package Information.....	9	6.15.1 HomeWhiz Setup.....	33
3 Technical Specifications.....	10	6.15.2 Setting up a Washing Machine Connected to Someone Else's Account.....	34
4 Installation	11	6.15.3 Remote Control Function and Using It.....	35
4.1 Appropriate Installation Location.	11	6.15.4 Troubleshooting	35
4.2 Assembly of Bottom Panel Cov- ers.....	11	7 Maintenance and Cleaning.....	36
4.3 Removing Transportation Safety Bolts	12	7.1 Cleaning the Detergent Drawer	36
4.4 Connecting to Water Supply	12	7.2 Cleaning the Loading Door and the Drum	36
4.5 Connecting the Drain Hose to the Drain	13	7.3 Cleaning the Body and Control Panel.....	37
4.6 Adjusting the Stands.....	13	7.4 Cleaning the Water Intake Filters..	37
4.7 Electrical Connection	13	7.5 Draining Remaining Water and Cleaning the Pump Filter	37
4.8 Start Up	14	8 Troubleshooting	38
5 Preparation.....	14	9 DISCLAIMER / WARNING	42
5.1 Sorting the Laundry	14		
5.2 Preparing Laundry for Washing....	14		
5.3 Tips for Energy and Water Saving	15		
5.4 Loading the Laundry.....	15		
5.5 Correct Load Capacity	15		
5.6 Using Detergent and Softener	15		
5.7 Tips for Efficient Washing	17		
5.8 Displayed Programme Duration ...	18		
6 Operating the Product.....	18		
6.1 Control Panel	19		
6.2 Symbols on the Display.....	20		
6.3 Programme and Consumption Table.....	21		
6.4 Programme Selection	23		
6.5 Programmes	23		
6.6 Temperature Selection.....	26		
6.7 Spin Speed Selection	26		

Please read this user manual first!

Dear Customer,

Thank you for choosing Beko product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product.

Follow all warnings and information in the user manual. Thus, you protect yourself and your product against possible dangers.

Keep the user manual. If you hand over the product to someone else, provide the user manual as well. Warranty terms, usage and troubleshooting methods of your product are in user guide.

Symbols and Definitions

The following symbols are used in the user guide:

	Danger that could result in death or injury.
	Important information or useful hints about usage.
	Read the user manual.
	Recyclable materials.
	Hot surface warning.
WARNING	Danger that may result in property damage to the product or its environment.

1 Safety Instructions

This section includes the safety instructions necessary to prevent the risk of personal injury or material damage.

Our company shall not be held responsible for damages that may occur if these instructions are not observed.

- Installation and repair operations shall always be performed by Authorised Service.
- Use original spare parts and accessories only.
- Do not repair or replace any component of the product unless it is clearly specified in the user manual.
- Do not modify the product.

1.1 Intended Use

- The product's bench life is 10 years. During this period, original spare parts will be available to operate the appliance properly.
- This product has been designed for domestic use. It is not for commercial purposes or it should not be used out of its intended use.
- The product must only be used for washing and rinsing of laundry that are marked accordingly

- This appliance is intended to be used in household and similar applications. For example;
 - Personnel kitchens of stores, offices and other work environments;
 - Ranches,
 - By customers of hotels, motels and other accommodation facilities,
 - Bed and breakfasts, hostel-like environments,
 - Common areas of apartment blocks or laundries.

1.2 Safety of Children, Vulnerable Persons and Pets

- This product may be used by children aged 8 years and older and persons with underdeveloped physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a the product safe way and the hazards involved.
- Children under the age of 3 should be kept away unless continuously supervised.

- Electrical products are dangerous for children and pets. Children or pets should not play with, climb on top or inside the product. Check inside the product before use.
- Use child lock to prevent children from intervening with the product.
- Do not forget to close the loading door when leaving the room where the product is located. Children and pets may get locked inside and drown.
- Children should not perform cleaning and user maintenance works without an adult's supervision.
- Keep the packaging materials away from children. Risk of injury and suffocation.
- Keep all detergents and additives used for the product away from children's reach.
- Cut the power cable and break and deactivate the locking mechanism of the loading door before disposing of the product for children's safety.
- If the power cable is damaged, it must be replaced by the authorised service in order to avoid possible risks.
- Do not tuck the power cable under and behind the product. Do not place heavy objects on the power cable. Do not over bend, crush and touch the power cable to sources of heat.
- Do not use an extension cord, multi-plug or adaptor to operate your product.
- The plug shall be easily accessible. If this is not possible, a mechanism that meets the electrical legislation and that disconnects all terminals from the mains (fuse, switch, main switch, etc.) shall be available on the electrical installation.
- Do not touch the plug with wet hands.
- When unplugging the appliance, don't hold the power cord, but the plug.
- Make sure the plug is not wet, dirty or dusty.

1.3 Electrical Safety

- Product should be unplugged during installation, maintenance, cleaning and repair procedures.

1.4 Handling Safety

- Unplug the product before moving, remove the water outlet and water main connections. Drain any water left inside the product.

- The product is heavy, do not move alone. Do not hold extruding parts such as the laundry loading door to lift and move the product. The upper tray should be tightly fixed for moving.
- Your product is heavy; it should be carried carefully by two people if a staircase is involved. It may cause injuries if your product falls on you. Do not hit and drop the product while carrying.
- Carry the product in an upright position.
- Make sure that the hoses as well as the power cable are not folded, pinched or crushed after the product is fitted into its place after installation or cleaning procedures.
- Check for any damage on the product before installing it. Do not have the product installed if it is damaged.
- Injuries may occur if hands are put into uncovered slots. Close the holes of the transportation safety bolts with plastic plugs.
- Do not install or leave the product at locations where it may be exposed to external environment conditions.
- Do not install the product at locations where the temperature drops below 0 °C.
- Do not place the product on a carpet or similar surface. It would create fire hazard since it cannot receive air from underneath.
- Place the product on a level and hard surface and balance with the adjustable legs.
- Connect the product to a grounding plug protected by a fuse suitable to the current values on the type label. Make sure the grounding is carried out by an expert electrician. Do not use the product without suitable grounding to local/national regulations.
- Plug the product in a socket with voltage and frequency values suitable to those indicated on the type label.

1.5 Installation Safety

- Check the information on the manual and installation instructions to prepare the product for installation and make sure the electrical mains, clean water mains and water outlet are suitable. If not, call a qualified electrician and plumber to have them make the necessary arrangements. These operations are the responsibility of the customer.

- Do not plug the product to loose, broken, dirty, greasy sockets or sockets that has come out their seats or sockets with a risk of water contact.
- Use the new hose set provided with the product. Do not re-use old hose sets. Do not make additions to the hoses.
- Connect the water inlet hose directly to the water tap. The pressure from the tap should be minimum 0.1 MPa (1 bar) and maximum 1MPa (10 bars). 10 to 80 litres of water should be running from the tap in a minute in order for the product to function properly. If the water pressure is above 1 MPa (10 Bars), a pressure-reducing valve should be fitted. The maximum allowed temperature is 25°C.
- Fit the end of the water discharge hose to the dirty water discharge drain, the sink or the bathtub.
- Place the power cable and houses in locations without risk of tripping.
- Do not install the product behind a door, a sliding door or at another location that will prevent the door from opening completely.
- If a drier is to be placed on the product, fix with a suitable connection apparatus obtained from the authorised service.
- There is a risk of contact with electrical pieces when the upper trays is removed. Do not dismantle the upper tray of the product.
- Place the product at least 1 cm away from the edges of furniture.



1.6 Operational Safety

- When you are using the appliances, use only detergents, softeners and supplements suitable for washing machines.
- Do not use chemical solvents on the product. These materials contain an explosion risk.
- Do not operate defective or damaged products. Unplug the product (or turn off the fuse it is connected to), turn off the water tap and call an authorised service.
- Do not place sources of ignition (burning candle, cigarettes, etc.) or sources of heat (irons, furnaces, ovens, etc.) on top of or near the product. Do not put inflammable/explosive materials near the product.
- Do not get on the product.

- Unplug the product and turn off the tap if you will not be using the product for long periods.
- Detergent/maintenance materials may splash out of the detergent drawer if it is opened while the machine is working. Contact of the detergent with your skin and eyes is dangerous.
- Make sure pets do not climb inside the product. Check inside the product before use.
- Do not force open the locked loading door. The door will open once the washing is completed. If the door does not open, use the solutions for "loading door does not open" error in the Troubleshooting section.
- Do not wash elements contaminated with gasoline, kerosene, benzene, reducers, alcohol or other inflammable or explosive materials and industrial chemicals.
- Do not directly use dry cleaning detergent and do not wash, rinse or spin laundry contaminated with dry cleaning detergent.
- Do not place your hands into the rotating drum. Wait until the drum no longer rotates.
- Do not place your hand or a metal object under the washing machine.
- If washing laundry at high temperatures, the discharged washing water would burn your skin if in contact with your skin, for ex. when the discharge hose is connected to the tap. Do not touch the discharge water.
- Take the following precautions to prevent formation of biofilm and malodours:
 - Make sure the room where the washing machine is placed is well ventilated.
 - Wipe the door gasket and loading door glass with a dry and clean cloth at the end of the programme.
- The glass of the loading door will heat up when washing at high temperatures. Therefore, do not touch the loading door glass while washing, especially children.



1.7 Maintenance and Cleaning Safety

- Do not wash the product with pressure washers, by spraying vapour, water or pouring water.

- Do not use sharp or abrasive tools to clean the product. Do not use household cleaners, soap, detergent, gas, gasoline, thinner, alcohol, varnish, etc. while cleaning.
- Cleaning agents containing solvents might reek poisonous fumes(for ex. cleaning solvent. Do not use cleaning products containing solvents.
- There may be detergent residues in the detergent drawer when you open it for cleaning.
- Do not dismantle the filter of the discharge pump while the product is running.
- The temperature in the machine may rise up to 90°C. Clean the filter after the water in the machine cools down in order to avoid risk of getting burnt.

2 Important Instructions for Environment

2.1 Compliance with WEEE Directive



This product complies with EU WEEE Directive (2012/19/EU). This product bears a classification symbol for waste electrical and electronic equipment (WEEE).

This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Do not dispose of the waste product with normal domestic and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.

Compliance with RoHS Directive:

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

2.2 Package Information

Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.

3 Technical Specifications

Supplier's name or commercial brand	Beko
Model name	B3WFU 78225 WB
	7002440007
Nominal Capacity (kg)	8
Maximum spin speed (cycle/min)	1200
Built-In	No
Height (cm)	84
Width (cm)	60
Depth (cm)	55
Single Water inlet / Double Water inlet	+ / -
Electrical connection (V/Hz)	230 V / 50 Hz
Total current (A)	10
Total power (W)	2200
Main model code	1320



SUPPLIER'S NAME **MODEL IDENTIFIER** → (*)

A **A**

The model information as stored in the product database can be reached by entering following website and searching for your model identifier (*) found on energy label.

<https://eprel.ec.europa.eu/>

 The consumption values apply when wireless network connection is turned off.

Symbols Table

											
Prewash	Fast	Fast+	Extra Rinse	Extra Water	Anti Crease	Pet Hair Removal	Steam	Night Mode	Soaking	Rinse Hold	Steeping
											
AutoDose	Liquid Detergent Selection	Softener Selection	Rinse	Spin+Drain	Drain	Temperature	Spin	No Spin	Tap Water (Cold)	No Water	Time Delay
											
Door Lock	Child Lock	On/Off	Start / Pause	Soil Level	Add Garment	Downloaded Program	Wash	Ok (End)	Cancel	AntiCrease+	Drying
											
Extra Dry	Cupboard Dry	Iron Dry	Timed Drying	Clean& Wear							

4 Installation



Please read the "Safety Instructions" section first!



Your washing machine automatically detects the amount of laundry placed inside when selecting a program.

While installing the product, before the first use, calibration should be done to ensure that the laundry amount is detected in the most accurate way.

To do this, select the Drum Cleaning* program and cancel the spin function. Start the program without laundry. Wait for the program to finish, which will take about 15 minutes.

*The program name may vary depending on the model. For the appropriate program selection, review the program descriptions section.

- Please contact the nearest Authorised Service for the installation of the appliance.
- Make sure that the installation and electrical connections of the product are performed by authorised service agent. Manufacturer shall not be held responsible for damages caused by operations performed by unauthorised persons.
- Preparation of the location and electrical, tap water and waste water installations at the place of installation is under customer's responsibility.
- Make sure that the water inlet and discharge hoses as well as the power cable are not folded, pinched or crushed while pushing the product into its place after installation or cleaning procedures.
- Prior to installation, visually check if the product has any defects on it. Do not have the product installed if it is damaged. Damaged products cause risks for your safety.


4.1 Appropriate Installation Location

- Place the product on a hard and level floor. Do not place it onto a carpet with high pile or other similar surfaces. Placing on an improper floor shall cause noise and vibration problems.
- Total weight of the washing machine and the dryer -with full load- when they are placed on top of each other reaches to approx. 180 kilograms. Place the product on a solid and flat floor that has sufficient load carrying capacity.
- Do not place the product on the power cable.
- Do not install the product at places where temperature may fall below 0 °C. Freezing might damage your product.
- Leave a minimum space of 1 cm between the product and the furniture.
- If you will install the product on a surface with steps, never place it close to the edge.
- Do not place the product on any platform.
- Do not place heat sources such as cooker, irons, ovens, heater etc. on the appliance and do not use them on the product.

4.2 Assembly of Bottom Panel Covers

- In order to increase the sound comfort of the product, attach cover A after removing the package foam.


Cover A

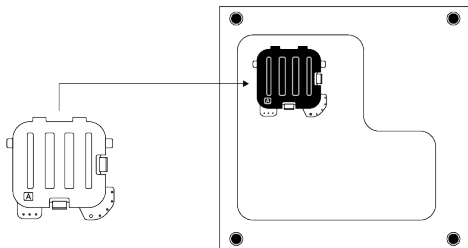

Tilt the machine back slightly. Rest the tabs of Cover A against the lower panel. Complete the assembly by rotating the cover.


- Cover B and the Cap are optional. If available, attach cover B and the Cap.

Cover B

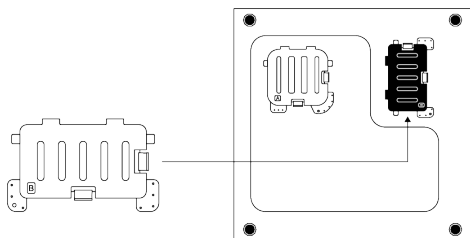

Rest the tabs of Cover B against the lower panel. Complete the assembly by rotating the cover.


Cap

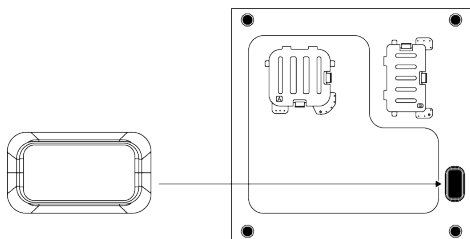

Insert the cap by pushing it with your finger.

4.3 Removing Transportation Safety Bolts

1. Loosen all transportation safety bolts with an appropriate wrench until they turn freely.
2. Bend the inner part by pressing it at the grip areas and pull the part out.
3. Attach the plastic covers supplied in the User Manual bag into the holes on the rear panel.

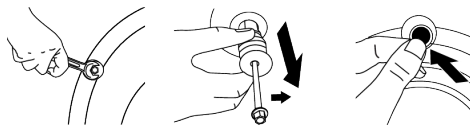

NOTICE

Remove the transportation safety bolts before operating the product. Otherwise, the product will get damaged.



NOTICE

Keep the transportation safety bolts in a safe place to reuse when the product needs to be moved again in the future. Install the transportation safety bolts in reverse order of the disassembly procedure. Never move the product without the transportation safety bolts properly fixed in place.



4.4 Connecting to Water Supply



NOTICE

Models with a single water inlet shall not be connected to the hot water tap. In such a case the laundry will get damaged or the product will switch to protection mode and will not operate. Do not use old or used water inlet hoses on a new product. It may cause water leakage from your machine and stain your laundry.

1. Tighten all hose nuts by hand. Never use a tool when tightening the nuts.
2. Open the taps completely after making the hose connection to check for water leaks at the connection points. If any leak occurs, turn off the tap and remove the nut. Check the gasket and tighten the nut carefully again. In order to prevent the water leaks and resultant damages, keep the taps closed when you do not use the product.

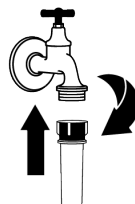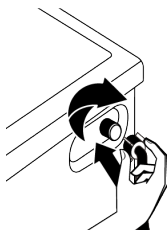


4.5 Connecting the Drain Hose to the Drain

1. Attach the end of the drain hose directly to waste water drain, washbasin or bathtub.



Your house will be flooded if the water draining hose is dislocated during water draining. There is also a risk of burning due to the high washing temperatures. In order to prevent such situations and make sure that the product performs water intake and drain processes without any problem, fix the drain hose securely.

2. Connect the drain hose to a minimum height of 40 cm and a maximum height of 100 cm.
3. Installing the water draining hose at ground level or close to the floor (40 cm below) and then raising it makes water discharge difficult and the laundry may come out extremely wet. Thus, follow the heights provided in the figure.

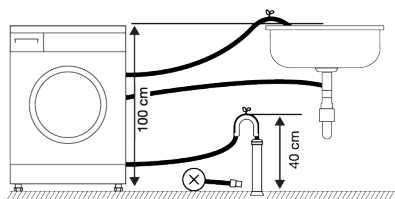

4. To prevent the waste water to go back into the product again and to ensure easy drainage, do not immerse the end of the hose into the waste water or do not insert it into the drain for more than 15 cm. If it is too long, cut it short.
5. The end of the hose should not be bent, it should not be stepped on and the hose must not be pinched between the drain and the product. Otherwise, water discharge issues may emerge.
6. If the length of the hose is too short, use it by adding an original extension hose. The overall length of the hose shall not be longer than 3.2 m. To prevent water

leaks, always secure the connection between the extension hose and the draining hose of the product with a suitable clamp so that it does not come off and cause leaks.

4.6 Adjusting the Stands




NOTICE

In order to ensure that the product operates more silently and vibration-free, it must stand level and balanced on its feet. Ensure that the product is balanced by adjusting the feet. Otherwise, the product may move from its place and cause crushing, noise and vibration problems.

To avoid damaging the lock nuts, do not use any tools to loosen the nuts.

1. Loosen the lock nuts on the feet by hand.
2. Adjust the feet until the product stands level and balanced.
3. Tighten all lock nuts again by hand.



4.7 Electrical Connection

Connect the product to a grounded outlet protected by a 16 A fuse. Our company shall not be responsible for the damages that shall be incurred due to using the product without grounding according to local regulations.

- Connection must comply with national regulations.
- The electrical connection cable infrastructure of the product must be adequate and suitable for product requirements. It is recommended to use a residual current device.
- Power cable plug must be within easy reach after installation.

- If the current supply to the fuse or breaker in the house is less than 16 Amps, have a qualified electrician install a 16 amp supply.
- The voltage specified in the "Technical specifications" section must be equal to your mains voltage.
- Do not make connections via extension cables or multi-plugs. Overheating and burning may occur due to the connecting cable.




Damaged power cables should be replaced by the authorised service in order to prevent possible danger.

4.8 Start Up

Before starting to use the product make sure that the preparations described in section "Environmental instructions" and "In-

stallation". To prepare the product for washing laundry, perform first operation in Drum Cleaning programme. If this programme is not available in your product, apply the method which is described in section "Cleaning the loading door and the drum".

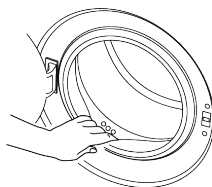

Some water has remained in the product due to the quality control processes in the production. It is not harmful for the product.

5 Preparation



Please read the "Safety Instructions" section first

5.1 Sorting the Laundry

- Sort laundry according to type of fabric, colour, and degree of soiling and allowable water temperature.
- Always observe the instructions given on the garment care labels.

5.2 Preparing Laundry for Washing

- Laundry items with metal attachments such as, underwiring, belt buckles or metal buttons will damage the product. Remove the metal pieces or wash such clothes by putting them in a laundry bag or pillow case.
- Take out all substances in the pockets such as coins, pens and paper clips, and turn pockets inside out and brush. Such objects may damage the product or cause noise problem.
- Put small size clothes such as infant's socks and nylon stockings in a laundry bag or pillow case.
- Place curtains in without compressing them. Remove curtain attachment items. Curtain attachment items may cause pulling and tearing on the curtain.
- Fasten zippers, sew loose buttons and mend rips and tears.
- Wash "Machine washable" or "Hand washable" labelled products only with an appropriate programme.
- Do not wash colours and whites together. New, dark coloured cottons release a lot of dye. Wash them separately.
- Tough stains must be treated properly before washing.
- Wash trousers and delicate laundry turned inside out.
- Laundry that are subjected to materials such as flour, lime dust, milk powder, etc. intensely must be shaken off before placing into the product. Such dusts and

powders on the laundry may build up on the inner parts of the product in time and can cause damage.

5.3 Tips for Energy and Water Saving

Following information will help you use the product in an ecological and energy/water-efficient manner.

- Operate the product in the highest load capacity allowed for the programme you have selected, but do not overload. See "Programme and consumption table"
- Observe the temperature instructions on the detergent packaging.
- Wash slightly soiled laundry at low temperatures.
- Use faster programmes for small quantities of lightly soiled laundry.
- Do not use prewash and high temperatures for laundry that is not heavily soiled or stained.
- If you plan to dry your laundry in a dryer, select the highest spin speed recommended during washing process.
- Do not use more detergent than the recommended amount on the detergent packaging.

5.4 Loading the Laundry

1. Open the loading door.
2. Put the laundry items into the product in a loose manner.
3. Push the loading door to close until you hear a locking sound. Ensure that no items are caught in the door. The loading door is locked while a programme is running. The door lock will open once the programme is completed. Then you can open the loading door. If the door does not open, apply the solutions provided for "Loading door cannot be opened" error in the Troubleshooting section.

5.5 Correct Load Capacity

The maximum load capacity depends on the type of laundry, the degree of soiling and the desired washing programme.

The product automatically adjusts the water amount according to the weight of the laundry put inside it.




Follow the instructions in "Programme and consumption table". When the appliances is overloaded product's washing performance will drop. Moreover, noise and vibration problems may occur.

5.6 Using Detergent and Softener



WARNING

Read the manufacturer instructions on the package while using detergents, softeners, starch, bleach and decolourants, anti-limescale and follow the dosage information provided. Use a measuring cup, if any.

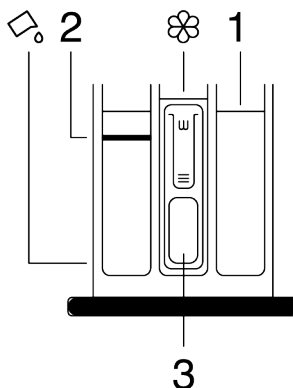

The detergent drawer comprises of three compartments:

- (1) for prewash,
 - (2) for main washing,
 - (3) for softener,
- (⊗) a syphon piece in the softener compartment,
- (☞) there is a liquid detergent apparatus for liquid detergent use in the main washing compartment.

Detergent, Softener and Other Cleaning Agents

- Add detergent and softener before starting the washing programme.
- Do not leave the detergent drawer open when the washing programme is on.
- If you are using a programme without pre-washing, do not put detergent in the pre-wash compartment (compartment no. "1").
- If you are using a program with prewash, start the machine after adding powder detergent to the prewash and main wash compartments (compartments 1 and 2).
- Do not select a programme with pre-washing if you are using a detergent pod or dispensing ball. Place the detergent pod or the dispensing ball directly among the laundry in the product.
- If you are using a liquid detergent, follow the directions under "Liquid detergent use" and do not forget to bring the liquid detergent apparatus to the correct position.

Choosing the Detergent type

Detergent type to be used depends on the washing programme, fabric type and colour.

- Use different detergents for coloured and white laundry.
- Wash your delicate clothes only with special detergents (liquid detergent, wool shampoo, etc.) intended solely for delicate clothes and at suggested programmes.
- When washing dark coloured clothes and quilts, it is recommended to use liquid detergent.
- Wash woollens at suggested programme with special detergent made specifically for woollens.
- Please review the programme descriptions part for suggested programme for different textiles.
- All recommendations about detergents are valid for selectable temperature range of programmes.



Only detergents, softeners and additives suitable for washing machines should be used.
Do not use soap powder.

Adjusting the Detergent Amount

The amount of detergent depends on the amount of laundry, how soiled they are and the water hardness.

- Do not exceed the recommended dosage values on the detergent packaging in order to eliminate excessive foam and poor rinsing problems, to save money and protect the environment.
- Use less amounts of detergent for fewer or less soiled laundry.

Using Softeners

Put the softener in the softener compartment of the detergent drawer.

- Do not exceed the (>max<>) level sign in the softener compartment.
- If the softener is not fluid, dilute with water before placing in the softener compartment.




WARNING

Do not use liquid detergents or other materials with cleaning properties unless they are intended for use in washing machines for softening the laundry.

Using Liquid Detergents

If the Product Has a Liquid Detergent Apparatus

- Press and rotate the apparatus at where it is shown when you want to use liquid detergents. The part falling below will serve as a barrier for liquid detergent.
- Clean with water at its place or by removing from its place when it is necessary. Do not forget to place the apparatus in the main washing compartment (compartment no. "2") after cleaning.
- The apparatus should be up if you will use a powder detergent. The fan that you would see in this position will mix the powder detergent and help it to dissolve.

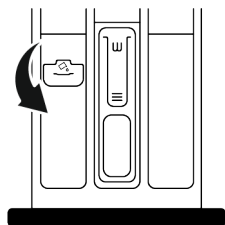

Use of Gel and Tablet Detergents

- If the detergent is fluid and there is no liquid detergent compartment in your product, place the gel detergent in the main washing detergent compartment in first water intake. If your product has a liquid detergent compartment, fill the compartment with detergent before starting the programme.
- If the gel detergent is not fluid or is in a capsule liquid tablet, place directly inside the drum before washing.
- Put the tablet detergent in the main washing compartment (compartment no. "2") or directly inside the drum before washing.

Using Starch

- Put in the liquid starch, powder starch or fabric dye in the softener compartment.
- Do not use softener and starch in the same washing programme simultaneously.
- Wipe the inside of the product with a damp and clean cloth after using starch.

Using Anti-Limescale

- When necessary, only use anti-limescale produced for washing machines.

Using Bleach and Decolourants

- Select a programme with pre-washing and add bleach at the start of pre-washing. Do not put detergent in the pre-wash compartment. As an alternative application, select a programme with additional rinsing and add the bleach while the product is receiving water to the detergent compartment in the first rinsing step.
- Do not mix and use bleach and detergent together.
- As bleach may cause skin irritation use only small amounts (1/2 tea cups - approximately 50 ml and rinse the laundry well.
- Do not pour bleach directly onto the laundry.
- Do not use bleach for coloured clothes.
- Select a programme with low temperature washing while using oxygen-based decolourants.
- Oxygen-based decolourants can be used together with detergents. However, if it does not have the same viscosity as the detergent, first place the detergent in compartment no. "2" in the detergent drawer and wait for the product to rinse away the detergent during water intake. Add the decolourant to the same compartment while the machine continues taking in water.

5.7 Tips for Efficient Washing

	Clothes			
	Light Colours and Whites	Colours	Black/Dark Colours	Delicates/Woolens/Silks
	(Recommended temperature range based on soil level: 40-90 °C)	(Recommended temperature range based on soil level: cool -40 °C)	(Recommended temperature range based on soil level: cool -40 °C)	(Recommended temperature range based on soil level: cool -30 °C)

Soiling Level	Heavily Soiled (difficult stains such as grass, coffee, fruits and blood.)	It may be necessary to pre-treat the stains or perform prewash. Powder and liquid detergents recommended for whites can be used at dosages recommended for heavily soiled clothes. It is recommended to use powder detergents to clean clay and soil stains and the stains that are sensitive to bleaches.	Powder and liquid detergents recommended for colours can be used at dosages recommended for heavily soiled clothes. It is recommended to use powder detergents to clean clay and soil stains and the stains that are sensitive to bleaches. Detergents which do not contain decolourant should be used.	Liquid detergents suitable for colours and black/dark colours can be used at doses recommended for heavily soiled clothes.	Prefer liquid detergents produced for delicate clothes. Woollen and silk clothes must be washed with special woollen detergents.
	Normally Soiled (For example, stains caused by body on collars and cuffs)	Powder and liquid detergents recommended for whites can be used at dosages recommended for normally soiled clothes.	Powder and liquid detergents recommended for colours can be used at dosages recommended for normally soiled clothes. Detergents which do not contain decolourant should be used.	Liquid detergents suitable for colours and black/dark colours can be used at doses recommended for moderately soiled clothes.	Prefer liquid detergents produced for delicate clothes. Woollen and silk clothes must be washed with special woollen detergents.
	Lightly Soiled (No visible stains exist.)	Powder and liquid detergents recommended for whites can be used at dosages recommended for lightly soiled clothes.	Powder and liquid detergents recommended for colours can be used at dosages recommended for lightly soiled clothes. Detergents which do not contain decolourant should be used.	Liquid detergents suitable for colours and black/dark colours can be used at doses recommended for lightly soiled clothes.	Prefer liquid detergents produced for delicate clothes. Woollen and silk clothes must be washed with special woollen detergents.

5.8 Displayed Programme Duration

You can view the programme duration on the display of your machine while selecting a programme. Depending on the amount of laundry you have loaded into your machine, foaming, unbalanced load conditions, fluctuations in power supply, water pressure and programme settings, the programme duration is automatically adjusted while the programme is running.


SPECIAL CASE: At programme start of Cottons and Cotton Eco programmes, display shows the duration of half load. It is the most common use case. After programme starts, in 20-25 minutes actual load is detected by the machine. And if the detected load is higher than half load; washing programme will be adjusted accordingly and programme duration increased automatically. You can follow this change on the display.

6 Operating the Product




Please read the "Safety Instructions" section first!

6.1 Control Panel

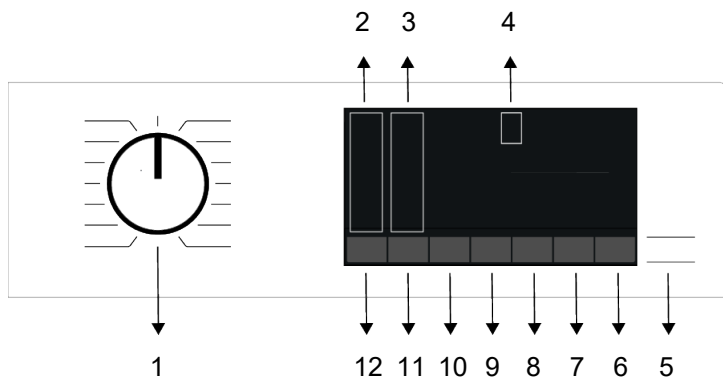

- | | |
|---------------------------------|--------------------------------|
| 1 Programme Selection Button | 2 Temperature Level Lights |
| 3 Spin Level Indicator Lights | 4 Display |
| 5 Start/Pause Button | 6 Remote Control Button |
| 7 End Time Setting Button | 8 Auxiliary Function Button 3 |
| 9 Auxiliary Function Button 2 | 10 Auxiliary Function Button 1 |
| 11 Spin Speed Adjustment Button | 12 Temperature Setting Button |

6.2 Symbols on the Display

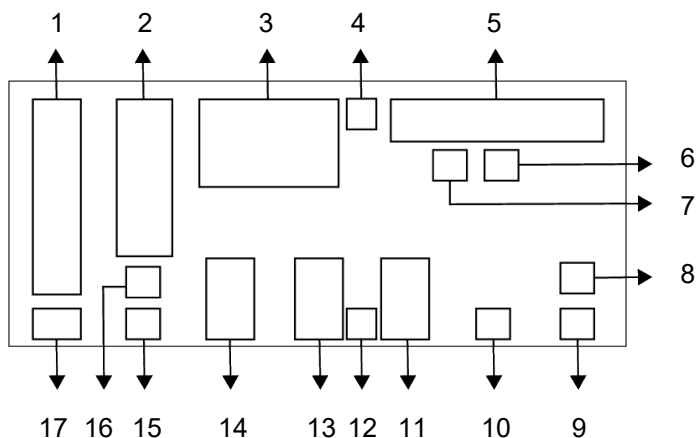

- | | |
|------------------------------------|------------------------------------|
| 1 Temperature Indicator | 2 Spin Speed Indicator |
| 3 Duration information | 4 Door lock is engaged symbol |
| 5 Programme follow-up indicator | 6 No Water indicator |
| 7 Add Garment Indicator | 8 Bluetooth Connection Indicator |
| 9 Remote Control Indicator | 10 Delayed Start Enabled Indicator |
| 11 Auxiliary Function Indicators 3 | 12 Child Lock Enabled symbol |
| 13 Auxiliary Function Indicators 2 | 14 Auxiliary Function Indicators 1 |
| 15 No spin indicator | 16 Rinse Hold Indicator |
| 17 Cold Water indicator | |



The visuals used for machine description in this section are schematic and may not match exactly with the features of your machine.

6.3 Programme and Consumption Table

Programme						Auxiliary Functions					Temperature °C
	Temperature °C	Max. Load (kg)	Water Consumption (l)	Energy Consumption (kWh)	Max. Speed	Extra Rinsing	Quick Wash	Steam	Anti-Crease+	Pre-wash	
Cottons	90	8	96	2,40	1200	•	•	•	•	•	Cold - 90
	60	8	96	1,80	1200	•	•	•	•	•	Cold - 90
	40	8	95	0,97	1200	•	•	•	•	•	Cold - 90
Eco 40-60	40***	8	63	0,715	1200						40-60
	40***	4	39	0,435	1200						40-60
	40***	2	29	0,225	1200						40-60
Synthetics	60	3	70	1,35	1200	•	•	•	•	•	Cold - 60
	40	3	68	0,85	1200	•	•	•	•	•	Cold - 60
Xpress / Super Xpress	90	8	66	2,20	1200	•	•	•	•		Cold - 90
	60	8	66	1,20	1200	•	•	•	•		Cold - 90
	30	8	66	0,20	1200	•	•	•	•		Cold - 90
Xpress / Super Xpress + Quick Wash	30	2	40	0,15	1200	•	•	•	•		Cold - 90
Woollens / Hand Wash	40	1,5	55	0,50	1200	•					Cold - 40
Outdoor / Sports	40	3,5	55	0,50	1200					•	Cold - 40
Dark Care / Jeans	40	3,5	83	0,85	1200	*	•	•	•	•	Cold - 40
StainExpert	60	4	85	1,55	1200		•			•	30-60
Down Wear	60	2	89	1,31	1000	•		•			Cold - 60
Shirts	60	3	70	1,40	800	•	•	*	•	•	Cold - 60
Hygiene+	90	8	125	2,90	1200	*		*			20-90
SteamTherapy		1	1,1	0,11	-			*			-
Drum Cleaning	90	-	76	2,33	600			*			90
Downloaded Program *****											
Mix	40	3,5	85	0,90	800		•	•	•	•	Cold - 40
Delicate	40	3,5	55	0,72	800	•					Cold - 40
Lingerie	30	1	64	0,29	600	*					Cold - 30
Soft Toys	40	2	53	0,60	600	*					Cold - 40
Towel	60	3	109	1,45	1000	*		•			Cold - 60

• : Selectable.

* : Automatically selected, cannot be cancelled.

*** : Eco 40-60 programme is a test programme according to 40 ° C temperature selection, EU regulation EU / 2019/2014 and EN 60456: 2016 / A11: 2020 standard.

***** : These programmes can be used with the HomeWhiz application. Power consumption may increase due to the connection.

- : See the programme description for maximum load.



Please read Installation section of the manual before first use. The auxiliary functions in the table may vary according to the model of your machine.

Water and energy consumption may vary subject to the changes in water pressure, water hardness and temperature, ambient temperature, type and amount of laundry, selection of auxiliary functions and spin speed, and changes in electric voltage.

Selection patterns for auxiliary functions can be changed by the manufacturer company. New selection patterns can be added or removed.

The spin speed of your machine may vary according to the programme; this spin speed cannot exceed the max. spin speed of your machine.

The amount of noise and humidity varies according to the spin speed; when the higher spin speed is selected during the spinning phase, the laundry contains less moisture but higher noise occurs at the end of the programme.



You can see the washing duration on the display of your machine while selecting a programme. Depending on the amount of laundry you have loaded into your machine, there may be a difference of 1-1.5 hours between the duration shown on the display and the actual duration of the wash cycle. Duration will be automatically updated soon after the washing starts.

Always select the lowest appropriate temperature. The most efficient programmes in terms of energy consumption are generally those that wash at low temperatures for a long time.

Consumption Values (EN)

	Temperature Selection °C	Spin Speed (cycle/min)	Capacity (kg)	Programme Duration (h:min)	Energy Consumption (kWh/cycle)	Water Consumption (liter/cycle)	Laundry Temperature (°C)	Residual Moisture Percent (%)
Eco 40-60	40	1200	8,0	03:38	0,715	63,0	33	52,0
	40	1200	4	02:47	0,435	39,0	30	52,5
	40	1200	2	02:47	0,225	29,0	23	57,0
Cottons	20	1200	8	03:30	0,600	95,0	20	53,9
Cottons	60	1200	8	03:30	1,800	96,0	60	53,9
Synthetics	40	1200	3	02:15	0,850	68,0	40	40
Xpress / Super Xpress	30	1200	8	00:28	0,200	66,0	23	62

The consumption values given for programmes other than the Eco 40-60 programme are only indicative.


6.4 Programme Selection

1. Determine the programme suitable for the type, quantity and soiling level of the laundry in accordance with "Programme and consumption table".



Programmes are limited with the highest spin speed appropriate for that particular type of fabric. When selecting a programme, always consider the type of fabric, colour, degree of soiling and permissible water temperature.

2. Select the desired programme with the Programme Selection knob.

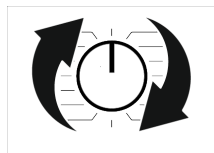

6.5 Programmes

• Eco 40-60

In the Eco 40-60 programme, you may wash normally soiled cotton laundry that are specified to be washed together at 40°C or 60°C. This programme is the standard test programme according to the EU environmentally friendly design and energy labelling regulations.

Although this programme washes longer than other washing programmes, it is more efficient in terms of energy and water consumption. Actual water temperature may be different from the stated wash temperature. When you load the machine with less laundry (e.g. ½ capacity or less), periods in programme stages may automatically get shorter. In this way, energy and water consumption would be much less.

• Cottons

You can wash your durable cotton laundry (sheets, bedlinen, towels, bathrobes, underwear etc.) in this programme. When the quick wash function button is pressed, programme duration becomes notably shorter but effective washing performance is en-

sured with intense washing movements. If the quick wash function is not selected, effective washing and rinsing performance is ensured for your heavily soiled laundry.

• Synthetics

You can wash your laundry (such as shirts, blouses, synthetic/cotton blended fabrics etc.) in this programme. When the quick wash function button is pressed, the programme duration will be shortened significantly and effective washing performance is provided for your laundry that is not very dirty. If the quick wash function is not selected, effective washing and rinsing performance is ensured for your heavily soiled laundry.

• Woollens / Hand Wash

Use to wash your woollen/delicate laundry. Select the appropriate temperature complying with the tag of your clothes. Your laundry will be washed with a very gentle washing action in order not to damage the clothes.

• Hygiene+

Applying a steam step at the beginning of the programme allows to soften the dirt easily.

Use this programme for your laundry (baby clothes, bed sheets, bedlinen, underwear, etc. cotton items) that requires an anti-allergic and hygienic washing at high temperature with intensive and long washing cycle. The high level of hygiene is ensured thanks to the steam application before the programme, long heating duration and additional rinsing step.

- Programme was tested by „The British Allergy Foundation,“ (Allergy UK) with the 60°C temperature option selected and it was certified in terms of its efficacy in eliminating allergens in addition to bacteria and mould.



Allergy UK is the brand of the British Allergy Association. Seal of Approval is created to guide people that require recommendation about a product that the related product restricts / reduces / eliminates the allergens or reduces the allergen content significantly in the ambient where allergy patients exist. It aims to provide assurance that the products are tested scientifically or examined in a way to provide measurable results.

• **Down Wear**

Use this programme to wash your coats, vest, jackets etc. containing feathers with a "machine-washable" label on them. Thanks to special spinning profiles, it is ensured that the water reaches the air gaps amongst the feathers.

• **Spin+Drain**

You can use this program to remove the water on the garment/inside the machine.

• **Rinse**

Use when you want to rinse or starch separately.

• **SteamTherapy**

Use this programme to reduce the creases and ironing times of a small amount of unspotted cotton, synthetic or mixed laundry.

• **Shirts**

This programme is used to wash the shirts made from cotton, synthetic and synthetic blended fabrics altogether. It reduces wrinkles. Steam is applied at the end of the programme to help the wrinkle reducing function. The special spin profile and steam applied at the end of the programme reduce the wrinkles on your shirts. When the quick wash function is selected, the Pre-treatment algorithm is executed.

- Apply the pre-treatment chemical on your garments directly or add it together with the detergent in the powder detergent compartment. Thus, you can obtain the same performance as you obtain with

normal washing in a much shorter period of time. Usage life of your shirts increases. Do not use pre-wash detergent if you are planning to use delay function of your machine. Prewash detergent may pour out on your clothes and cause stains.

****** It is recommended to operate the cycle with no more than 6 shirts to minimize wrinkles in your shirts using this cycle. When washing more than 6 shirts, there may be differences on the wrinkle levels and humidity on shirts at the end of cycle.

• **Xpress / Super Xpress**

Use this programme to wash your lightly soiled or unspotted cotton clothes in a short time but not for towels or heavy cottons. The programme duration can be reduced down to 14 minutes when the quick wash function is selected. When the quick wash function is selected, maximum 2 (two) kg of laundry must be washed.

• **Dark Care / Jeans**

Use this programme to protect the colour of your dark-coloured garments or jeans. It performs high performance washing with special drum movement even if the temperature is low. It is recommended to use liquid detergent or woollen shampoo for dark coloured laundry. Do not wash your delicate clothes containing wool or etc.

• **Mix**

Use to wash your cotton and synthetic clothes together without sorting them.

• **Delicate**

You can wash your delicate clothes such as cotton/synthetic blended knitwear or hosiery in this programme. It washes with more delicate washing action. Wash your clothes whose colour you want to preserve either at 20 degrees or by selecting the cold wash option.

• **Lingerie**

You can use this programme to wash delicate garments that are suitable for hand wash and delicate women's underwear.

Small amount of garments must be washed in a washing net. Hooks, buttons etc. must be done up and zips must be zipped up.

• Outdoor / Sports

You can use this programme to wash sports and outdoors garments that contain cotton/synthetics mix and water repellent covers such as gore-tex etc. It makes sure your garments are washed gently thanks to special rotating movements.

• StainExpert

The machine has a special stain programme which enables the removal of different types of stains in the most effective way. Use this programme only for durable colourfast cotton laundry. Do not wash delicate and pigmenting clothes and laundry in this programme. Before washing, make sure to check garment tags (recommended for cotton shirts, trousers, shorts, t-shirts, baby clothes, pyjamas, aprons, table clothes, bed sheets, duvet covers, pillow-cases, bath-beach towels, towels, socks, cotton underwear that are suitable for washing at high temperature and for a long time). In the automatic stain programme, you can wash 24 types of stains divided into three different groups according to "Quick wash" function selection. You can see stain groups that can be selected with the "Quick Wash" button. Depending on the selected stain group, a special washing programme for which duration of rinse hold, washing action, washing and rinsing duration are modified.

Below you can find the soil groups that can be selected with the "Quick Wash" setting button:

When "Quick Wash" is not selected;

Sweat, collar dirt, food, mayonnaise, salad dressing, make-up, machine oil, baby food.

When the "Quick Wash" button is pressed once;

Blood, chocolate, pudding, grass, mud, eggs, butter, curry.

When the "Quick Wash" button is pressed twice;

Tea, coffee, juice, ketchup, red wine, cola, jam, coal

1. Select the stain programme.
2. Select the stain you want to clean by locating it in the groups above and selecting the related group with the quick auxiliary function button.
3. Read the garment tag carefully and ensure that correct temperature and spin speed are selected.

• Downloaded Program

This is a special programme that allows you to download different programmes when you want to. At the start, there is a programme you can see with the HomeWhiz application as default. However, you can use the HomeWhiz application to select a programme from the predetermined programme set, and then change and use it.



If you want to use HomeWhiz feature and Remote Control function, you must select Downloaded Programme. Detailed information can be found in HomeWhiz Feature and Remote Control Function.

• Soft Toys

Soft toys must be washed in a delicate programme due to their delicate fabrics, and the fibre and accessories they contain. Thanks to its delicate washing movements and spinning profile, the soft toys programme protects the toys during washing. It is recommended to use liquid detergent.




Fragile toys with hard surfaces must not be washed under any circumstances. Toys must not be washed together with your garments since they may harm laundry.

• Towel

Use this programme to wash durable cotton laundry such as towels. Load the towels into the machine paying attention to place them in a way that they will not contact the door gasket or the glass.

6.6 Temperature Selection

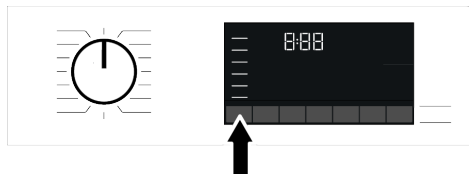

Whenever a new programme is selected, the recommended temperature for the programme appears on the temperature indicator. It is possible that the recommended temperature value is not the maximum temperature that can be selected for the current programme.

Press the Temperature Adjustment button to change the temperature. Temperature decreases gradually.




No change can be made in programmes where temperature adjustment is not allowed.

You can also change the temperature after the washing starts. This change can only be made if the washing steps allow it.



If you scroll to cold wash option and press Temperature Adjustment button again, the recommended maximum temperature for the selected programme appears on the display. Press the Temperature Adjustment button again to decrease the temperature.

6.7 Spin Speed Selection

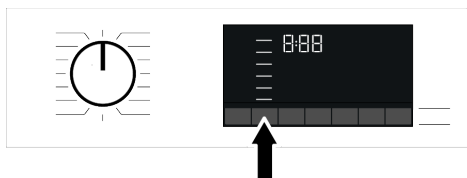

Whenever a new programme is selected, the recommended spin speed of the selected programme is displayed on the Spin Speed indicator. It is possible that the recommended spin speed value is not the maximum spin speed that can be selected for the current programme.

Press the Spin Speed Adjustment button to change the spin speed. Spin speed decreases gradually.

Then, depending on the model of the product, "Rinse Hold"  and "No Spin"  options appear on the display.

If you are not going to unload your laundry immediately after the programme completes, you can use Rinse Hold function in order to prevent them from getting wrinkled when there is no water in the machine.

This function holds the laundry in the final rinsing water. If you want to spin your laundry after the Rinse Hold function:

1. Adjust the Spin Speed.
2. Press Start / Pause. The programme will resume. Machine drains the water and spins the laundry.

If you want to drain the water at the end of the programme without spinning, use No Spin function.



No change can be made in programmes where spin speed adjustment is not allowed.


You can change the spin speed after the washing starts if the washing steps allow it. Changes cannot be made if the steps do not allow it.

Soaking

If you are not going to unload your clothes immediately after the programme completes, you can use rinse hold function to keep your laundry in the final rinsing water in order to prevent them from getting wrinkled when there is no water in the machine. Press Start/Pause button after this process if you want to drain the water without spinning your laundry. Programme will resume and complete after draining the water.

If you want to spin the laundry held in water, adjust the Spin Speed and press Start/Pause button. The programme will resume. Water is drained, laundry is spun and the programme is completed.

6.8 Auxiliary Function Selection

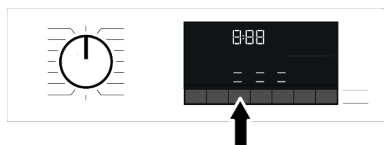

Select the desired auxiliary functions before starting the programme. Whenever a programme is selected, icons of the auxiliary function symbol that is selected together with it lights.



When an auxiliary function button that cannot be selected with the current programme is pressed, the washing machine will make a warning sound.

Some functions cannot be selected together. If a second auxiliary function conflicting with the first one is selected before starting the machine, the function selected first will be cancelled and the second auxiliary function selection will remain active. For example, if you want to select Quick Wash after you have selected the Additional Water, Additional Water will be cancelled and Quick Wash will remain active.

An auxiliary function that is not compatible with the programme cannot be selected. (See "Programme and consumption table") Some programmes have auxiliary functions that must be operated simultaneously. Those functions cannot be cancelled. The frame of the auxiliary function will not be lit, only inner area will be lit.

6.8.1 Auxiliary Functions

• Pre-wash

A Prewash is only worthwhile for heavily soiled laundry. Not using the Prewash will save energy, water, detergent and time.

• Quick Wash

After selecting a programme, you can press the Quick Wash setting button to shorten the programme duration. For some programmes, the duration can shorten by over 50%. Despite this, a good washing performance is achieved thanks to the changed algorithm.

While it differs with each programme, when you press the Quick Wash button once, the programme duration will drop to a certain level. If you press the same button for the second time, it will drop to the minimum duration.

Do not use Quick Wash adjustment button when washing heavily soiled laundry for a better washing performance.

Use the Quick Wash button for Mildly and Lightly soiled laundry and shorten the programme duration.

- **Steam**

This function helps to reduce the creases of your cotton, synthetic and mixed clothes, shorten the ironing time and remove the dirt by softening.

* Under conditions where the steam function is applied at the end of the programme, your laundry may be warmer at the end of the washing. This is expected within the programme working conditions.



When you activate the steam function, do not use liquid detergent if there is no liquid container or liquid detergent dosing feature. There is the risk of staining of the clothes.

- **Remote Control**

You can use this auxiliary function button to connect your product to smart devices. For detailed information, see HomeWhiz Feature and Remote Control Function.

- **Customized Programme**

This auxiliary function can only be used for Cotton and Synthetic programmes together with the HomeWhiz application. When this auxiliary function is activated, you can add up to 5 auxiliary rinsing steps to the programme. You can select and use some auxiliary functions even though they are not found on your product. You can increase and decrease the time of the Cotton and Synthetic programmes within a safe range.



When the Specialised Programme auxiliary function is selected, the washing performance and energy consumption will be different than the declared value.

6.8.2 Functions/Programmes Selected by Pressing the Function Keys for 3 Seconds

- **Drum Cleaning** 3"

Press and hold the related auxiliary function button for 3 seconds to select the programme. Regularly clean (once every 1 to 2 months) the drum for ensuring the required hygiene. Steam is applied before the programme to soften the residues in the drum. Turn on the programme when the machine is completely empty. For more effective results, place powder anti-limescale (drum cleaning materials) suitable for washing machines inside the detergent compartment no. "2". Leave the loading door half closed after the programme ends for the inside of the machine to dry.



This is not a washing programme. This is a maintenance programme. Do not turn this programme on when there is something inside the machine. When you attempt to operate, the machine automatically senses that there is load inside, and may quit or resume the programme as per the model of your machine. An effective cleaning is not achieved if the programme is resumed.

- **Anti-Crease+** 3"

This function is selected when the relevant Auxiliary function button is pressed and held for 3 seconds and the programme follow-up light for the relevant step turns on. When the function is selected, the drum rotates for up to 8 hours for preventing the laundry from creasing at the end of the programme. You can cancel the programme and take your laundry out at any time during the 8-hour duration. Press the function selection key or the machine on/off key to cancel the function. The programme follow-up light will remain on until the function is

cancelled or the step is complete. If the function is not cancelled, it will be active in the subsequent washing cycles as well.

• **Extra Rinsing**

This function can be selected by pressing and holding the related auxiliary function button for 3 seconds.

This function enables the product to make additional rinsing in addition to the one already made after the main wash. Thus, the risk for sensitive skins (babies, allergic skins, etc.) to be effected by the minimal detergent remnants on the laundry can be reduced.

• **Child Lock**

Use Child Lock function to prevent children from tampering with the machine. Thus you can avoid any changes in a running programme.



You can switch on and off the machine with On / Off button when the Child Lock is active. When you switch on the machine again, programme will resume from where it has stopped.

When the Child Lock is enabled, an audio warning will be given if the buttons are pressed. Audio warning will be cancelled if the buttons are pressed five times consecutively.

To activate the child lock:

Press and hold the related auxiliary function button for 3 seconds. After the countdown as "3-2-1" on the display is over, Child Lock symbol appears on the display. When this warning is displayed, you can release the Auxiliary Function button 3.

To deactivate the child lock:

Press and hold the related auxiliary function button for 3 seconds. After the countdown as "3-2-1" on the display is over, Child Lock symbol disappears.

• **Bluetooth**

You can use the bluetooth connection function to pair your machine with your smart device. This way, you can use your smart device to get information about your machine and control it.

To activate bluetooth connection:

Press and hold Remote Control function button for 3 seconds. Countdown "3-2-1" will be displayed, and then Bluetooth icon will appear on the display. Release Remote Control function button. The bluetooth icon will flash while the product is pairing with smart device. If connection is successful, icon will remain on.

To deactivate bluetooth connection:

Press and hold Remote Control function button for 3 seconds. Countdown "3-2-1" will be displayed, and then Bluetooth icon will disappears on the display.



First setup of the HomeWhiz application must be complete for the bluetooth connection to be activated. After setup, pressing the remote control function button while the knob is at Download Programme/Remote Control position will automatically activate the bluetooth connection.

6.9 End Time


Time display

When the end time function is selected, the remaining time until the programme starts is shown in hours such as 1h, 2h, and the remaining time to complete the programme after your programme starts is shown in hours and minutes as in the 01:30 example.




Programme duration may differ from the values in section "Programme and consumption table" depending on the water pressure, water hardness and temperature, ambient temperature, amount and the type of laundry, auxiliary functions selected and the changes at the mains voltage.

With the End Time function, the end time of the programme may be set up to 24 hours. After pressing End Time button, the programme's estimated ending time is displayed. If the End Time is set, End Time indicator is illuminated.

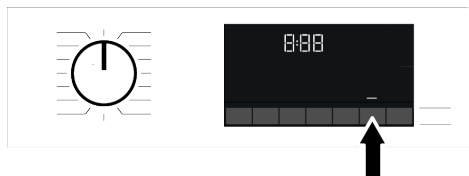

In order for the End Time function is activated and the programme is completed at the end of the specified time, you must press Start/Pause button after adjusting the time.

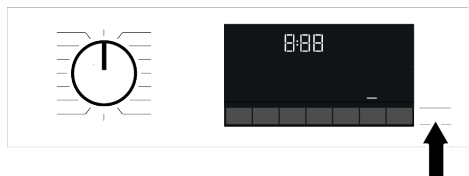

If you want to cancel End Time function, press On/Off button to turn off and on the machine.



When you have activated the End Time function, do not add liquid detergent in the powder detergent compartment no 2. There is the risk of staining of the clothes

1. Open the loading door, place the laundry and put detergent, etc.
2. Select the washing programme, temperature, spin speed and, if required, the auxiliary functions.


3. Set the End Time of your choice by pressing the End Time button. End Time indicator lights.
4. Press Start / Pause. Time countdown starts.




Additional laundry can be added into the machine during the End Time countdown. At the end of the countdown, End Time indicator turns off, washing cycle starts and the time of the selected programme appears on the display.

6.10 Starting the Programme

1. Press Start / Pause button to start the programme.
2. The Start / Pause button's light which was off before starts to illuminate steadily now, indicating that the programme has started.

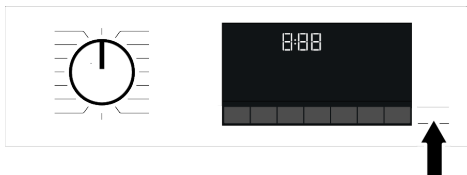

3. Loading door is locked. The door lock symbol appears on the display after the loading door is locked.

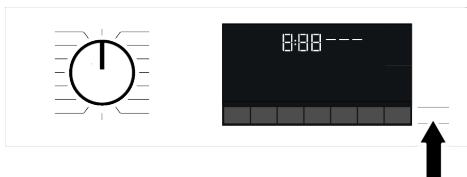

4. Programme follow-up indicator lights on the display will show the current programme step.

6.11 Loading Door Lock

There is a locking system on the loading door of the machine that prevents opening of the loading door in cases when the water level is unsuitable.

"Door Locked" symbol appears on the display when the loading door is locked.



If the Remote Control Function is selected, the door will be locked. In order to open the door you must deactivate Remote Start Function by either pressing the Remote Start button or changing the programme position.

Opening the loading door in case of power failure:




In case of power failure, you can use the loading door emergency handle under the pump filter cap to open the loading door manually.




To avoid any water overflow before opening the loading door, make sure there is no water left inside the machine.

1. Turn off and unplug the appliance.
2. Open the pump filter lid.

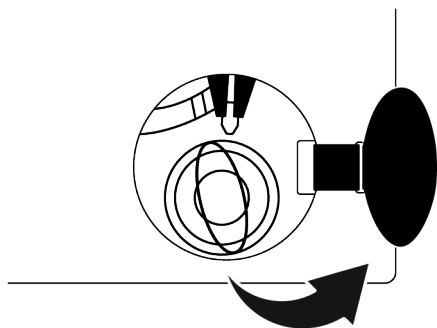


3. Pull down the loading door emergency handle with a tool and release. Then open the loading door.
4. If the loading door does not open then repeat the previous step.

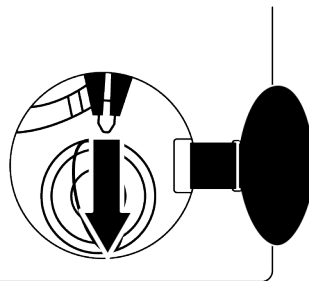


6.12 Changing the Selections After Programme has Started

Adding laundry after the programme has started :

If the water level in the machine is suitable when you press Start/Pause button, the door lock will be deactivated and the door will open, allowing you to add garments. The door lock symbol on the display goes off when the door lock is deactivated. After adding garments, close the door and press Start/Pause button once again to resume the washing cycle.




If the water level in the machine is not suitable when you press Start/Pause button, the door lock cannot be deactivated and the door lock symbol on the display remains on.



If the temperature of the water inside the machine is above 50°C, you cannot deactivate the door lock for safety reasons, even if the water level is suitable.

Switching the machine to pause mode:

Press the Start/Pause button to switch the machine to pause mode. Pause symbol will flash on the display.

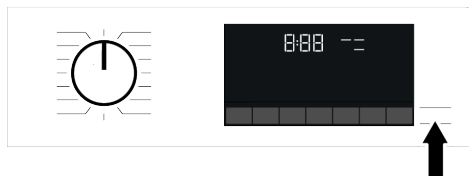

Changing the programme selection after programme has started:

The programme change is not allowed when the current programme is running. You can select the new programme after switching the current programme to pause mode.



The selected programme starts anew.

Changing the auxiliary function, speed and temperature:

Depending on the step the programme has reached, you can cancel or activate the auxiliary functions. See "Auxiliary function selection"

You can also change the speed and temperature settings. See "Spin speed selection" and "Temperature selection".



The loading door will not open if the water temperature in the machine is high or the water level is above the loading door baseline.

6.13 Cancelling the Programme

The programme is cancelled when programme selection knob is turned to a different programme or machine is turned off and on again using the programme selection knob.



If you turn the programme selection knob when the Child Lock is enabled, the programme will not be cancelled. You should cancel the Child Lock first.

If you want to open the loading door after you have cancelled the programme but if it is not possible to open the loading door since the water level in the machine is above the loading door baseline, then turn the Programme Selection knob to Pump+Spin programme and drain the water in the machine.

6.14 End of Programme

End symbol appears on the display when the programme is completed.

If you do not press any button for 10 minutes, the machine will switch to OFF mode. Display and all indicators are turned off.

Completed programme steps will be displayed if you press On/Off button.

6.15 HomeWhiz Feature and Remote Control Function

HomeWhiz enables you to control your washing machine by using your smart appliance and get information about the status of the machine. With HomeWhiz application, you can use your smart appliance to perform various operations on the machine. Furthermore, you can use some features only with HomeWhiz function.

In order to use the Bluetooth feature of your machine, you must download HomeWhiz application from the application store of your smart appliance.

Make sure your smart appliance is connected to the internet to install the application. If you are using the application for the first time, please follow the instructions on the screen to complete your user account registration. Once the registration procedure

is complete, you can use all products with the HomeWhiz feature in your house on this account.

You can touch the "Appliances" tab in the HomeWhiz application to view appliances paired with your account. Following the installation of the application, HomeWhiz function enables the washing machine to send you instant notifications via your smart appliance.



In order to use the HomeWhiz function, the application must be installed on your smart appliance, and your washing machine must be paired with your smart appliance via Bluetooth. If your washing machine is not paired to your smart device it works as an appliance which does not have a HomeWhiz feature.

Your product will operate as paired to your smart device via bluetooth. The controls made by means of the application will be enabled through this pairing. Therefore the bluetooth signal strength between the appliance and the smart device must be adequate.

Please visit www.homewhiz.com to see the Android and iOS versions supported by the HomeWhiz application.




All the safety measures described in "**GENERAL SAFETY INSTRUCTIONS**" section of your user manual apply to the remote operation through HomeWhiz function as well

6.15.1 HomeWhiz Setup

In order run the application, a connection must be established between your appliance and HomeWhiz application. In order to establish this connection, you must follow the steps given below for the setup process on both your appliance and the HomeWhiz Application.

1. If you are adding a device for the first time, touch "Appliances" tab on the HomeWhiz Application. Select "ADD APPLIANCE" (touch here for setting up a new appliance) button in the upper right corner. Perform the setup by following both the steps below and the steps in the HomeWhiz Application.
2. To start the setup, make sure that your machine is turned off. Press and hold the Temperature button and the Remote Control Function button simultaneously for 3 seconds to switch your machine to HomeWhiz setup mode.

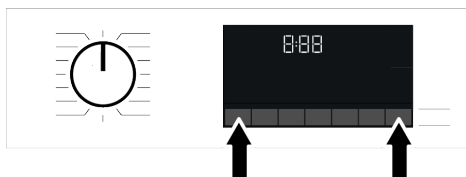

3. When the appliance is in HomeWhiz setup mode, you will see an animation on the display and the bluetooth icon will flash until your machine gets paired with smart device. Only programme knob will be active in this mode. Other buttons will be inactive.



4. Follow the instructions in display of HomeWhiz application.
5. Wait until the installation is complete. Once the setup is completed, give your washing machine a name. Now, you can tap and see the product you have added in the HomeWhiz Application.




If you cannot successfully perform the setup within 5 minutes, your washing machine will turn off automatically. In this case, you will have to start over the setup procedure. If the problem persists contact the Authorised Service Agent.

You can use your washing machine with more than one smart appliance. In order to do this, download the HomeWhiz application to the other smart appliance. When you launch the application, you must log into the account you previously created and paired with your washing machine. Otherwise, please read "Setting up a washing machine that is connected to someone else's account".



You need internet connection on your smart device to proceed with HomeWhiz setup. Otherwise, the HomeWhiz application will not let you finish the setup procedure successfully. Please contact your internet service provider if you are having problems with your internet connection.

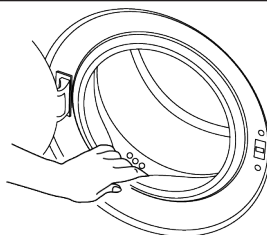

HomeWhiz Application may require you to type the product number shown on the product label. You can find the product label inside of the appliance door. The product number is located on this label.



6.15.2 Setting up a Washing Machine Connected to Someone Else's Account

If the washing machine that you want to use has been previously registered to the system with someone else's account, you need to establish a new connection between your HomeWhiz App and the appliance.

1. Download HomeWhiz Application on the new smart device you want to use.
2. Create a new account and log in to this account on the HomeWhiz app.
3. Follow the steps described in HomeWhiz Setup (HomeWhiz Setup) and proceed with the setup procedure.



Since the HomeWhiz Feature and Remote Control function on your appliance is operated via pairing using Bluetooth technology only one Homewhiz application can operate it at a time.

6.15.3 Remote Control Function and Using It

Bluetooth is automatically turned on after setting up HomeWhiz. To activate or deactivate the Bluetooth connection, please see Bluetooth 3”.

If you turn off and on your machine while bluetooth is active, it will automatically reconnect. In cases such as paired device going off the range, bluetooth will automatically turn off. For this reason, you will need to turn on the bluetooth again if you want to use the Remote Control function.

You can check the bluetooth symbol on the display to track your connection status. If the symbol is continuously on, you have bluetooth connection. If the symbol is flashing, the product is trying to connect. If the symbol is off, it means you are not connected.



If the Bluetooth connection is turned on in your product, then the Remote Control function can be selected.

If the Remote Control function cannot be selected, check the connection status. If the connection cannot be established, repeat the initial setup settings on the appliance.

NOTICE: For safety reasons, the product's door will remain locked while the Remote Control function is enabled, independently of the operating mode. If you want to open the door of the product, you will need to turn the programme selection knob or press the remote control key to deactivate the remote control function.

If you want to control your washing machine remotely, you need to activate the Remote Control function by pressing the Remote Control button while the programme knob is in the Download Programme/Remote Control position button on the control panel of your washing machine after closing

the front door. Once access is established to the product, you will see a screen similar to the one below.



When the Remote Control is on, you can only manage, turn-off and status follow-up operations through your washing machine. And all functions except child lock can be managed through the application.

You can monitor from the function indicator on the button whether the Remote Control function is on or off.

If the Remote Control function is off, all operations are performed over the machine, only the performance of status follow-up is allowed over the application.

If the Remote Start function cannot be turned on, you will hear a warning sound when you press the button. This may be experienced if the appliance is turned on and there is no appliance paired with Bluetooth. As an example for these cases; the Bluetooth setting is turned off or the product cover is open.

When you activate this function in the washing machine, this function remains active except under certain circumstances and allows you to control your washing machine remotely via Bluetooth.

Under certain conditions, it is automatically disabled for safety reasons:

- When your machine's power is cut.
- When the program button is turned and a different program is selected or the appliance is turned off.

6.15.4 Troubleshooting

If you are having trouble on controlling or connecting, apply the following steps. Observe whether the problem persists or not after the action you have performed.

1. Check whether your smart device is connected to the relevant home network.
2. Restart the product application.

3. Turn bluetooth off and then on via user control panel.

4. If the connection cannot be established with the above processes, repeat the initial set-up settings on the washing machine.

If the problem persists, consult an Authorised Service Agent.

7 Maintenance and Cleaning




Please read the "Safety Instructions" section first!

Service life of your product extends and frequently experienced problems will be reduced if it is cleaned at regular intervals.

7.1 Cleaning the Detergent Drawer

Clean the detergent drawer at regular intervals (once every 4 to 5 wash) as mentioned below to prevent accumulation of powder detergent.

Clean the syphon if excess amounts of water and fabric softener mixture remains in the softener compartment.

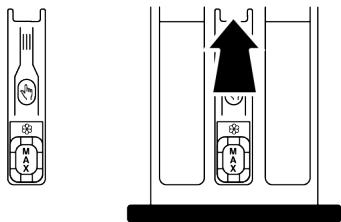


1. Press the marked part of the syphon within the softener compartment and then pull the drawer towards yourself to take it out.
2. Lift and remove the syphon from behind as shown.
3. Rinse drawer and syphon in the sink with plenty of warm water. Use gloves or suitable brush to prevent contact of residues in the drawer with your skin.
4. Firmly fit the syphon and the drawer back after cleaning.

7.2 Cleaning the Loading Door and the Drum



Repeat Drum Cleaning process in every 2 months.

NOTICE: Use an anti-limescale suitable for the washing machines.

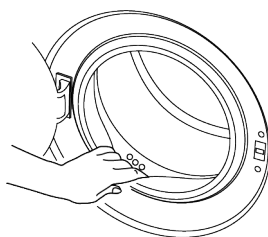

After every washing make sure that no foreign substance is left in the product.

If the holes on the door gasket shown in the figure is blocked, open the holes using a toothpick.

Foreign metal substances will cause rust stains in the drum. Clean the stains on the drum surface by using cleaning agents for stainless steel.

Never use steel wool or wire wool. These will damage the painted, chrome coated and plastic surfaces.


We recommend you to wipe the door gasket with a dry and clean cloth at the end of the programme. This will remove residues on the door gasket in your machine and prevent formation of malodours.

7.3 Cleaning the Body and Control Panel

Wipe the body of the product with soapy water or non-corrosive mild gel detergents as necessary, and dry with a soft cloth. Use only a soft and damp cloth to clean the control panel. Do not use cleaning products that contain bleach

7.4 Cleaning the Water Intake Filters

There is a filter at the end of each water intake valve at the rear of the product and also at the end of each water intake hose where they are connected to the tap. These filters prevent foreign substances and dirt in the water to enter the product. Filters should be cleaned if they are dirty.

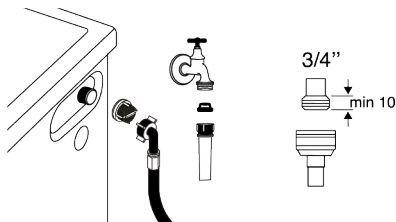

1. Close the taps.
2. Remove the nuts of the water intake hoses to access the filters on the water intake valves and clean them with an appropriate brush. If the filters are too dirty, remove them from their places with a pliers and clean in this way.
3. Take out the filters on the flat ends of the water intake hoses together with the gaskets and clean thoroughly under running water.
4. Replace the gaskets and filters carefully and tighten their nuts by hand.

7.5 Draining Remaining Water and Cleaning the Pump Filter

The filter system in your product prevents solid items such as buttons, coins and fabric fibres clogging the pump impeller during

draining of washing water. Thus, the water will be drained without any problem and the service life of the pump will extend.

If the product fails to drain water inside it, the pump filter is clogged. Filter must be cleaned whenever it is clogged or in every 3 months. Water must be drained off first to clean the pump filter.

In addition, prior to transporting the product (e.g., when moving to another house) water should be drained completely.



NOTICE:

Foreign substances left in the pump filter may damage your product or may cause noise problem.

In regions where freezing is possible, the tap must be closed, system hose must be removed and the water inside the product must be drained when the product is not in use.

After each use, turn off the tap to which the mains hose is connected.


In order to clean the dirty filter and drain the water:

1. Unplug the product to cut off the supply power.




Temperature of the water inside the product may rise up to 90 °C. To avoid the risk of scalding, clean the filter after the water inside the product is cooled down.

2. Open the filter cover.

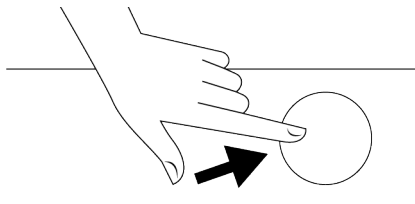

3. Follow the below procedures in order to drain water.

If the product does not have an emergency water draining hose, in order to drain the water:

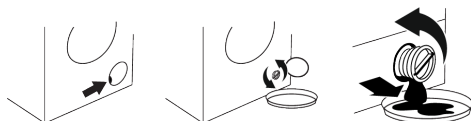

- Place a large container at the end of the hose to collect the water from the filter.
- When the pump filter starts leaking water loosen it by turning (opposite clockwise). Fill the running water to the container you placed in front of the filter. Keep a cloth ready to clean the water that may spill.

- Completely turn and remove the pump filter when the water in the product leaks out.

1. Clean any residues inside the filter as well as fibres, if any, around the pump impeller region.
2. Replace the filter.
3. If the filter cap is composed of two pieces, close the filter cap by pressing on the tab. If it is one piece, seat the tabs in the lower part into their places first, and then press the upper part to close.

8 Troubleshooting



Please read the "Safety Instructions" section first!

Programmes do not start after the loading door is closed.

- Start / Pause / Cancel button is not pressed. >>> Press Start / Pause / Cancel button.
- It may be difficult to close the loading door in case of excessive loading. >>> Reduce the amount of laundry and make sure that the loading door is closed properly.

Programme cannot be started or selected.

- The product has switched to self-protection mode due to a supply problem (line voltage, water pressure, etc.). >>> Depending on the product model, select another program by turning the Program Selection button or pressing and holding the On/Off button for 3 seconds to cancel the program. Previous programme will be cancelled. See Cancelling the Programme ► 32]

Water inside the product.

- Some water has remained in the product due to the quality control processes in the production. >>> This is not a failure; water is not harmful to the product.

The product does not take water in.

- Tap is turned off. >>> Turn on the taps.
- Water inlet hose is bent. >>> Flatten the hose.
- Water inlet filter is clogged. >>> Clean the filter.
- Loading door is not closed. >>> Close the door.

The product does not drain water.

- Water drain hose is clogged or twisted. >>> Clean or flatten the hose.
- Pump filter is clogged. >>> Clean the pump filter.

Product vibrates or makes noise.

- Product is standing unbalanced. >>> Adjust the stands to balance the product.
- A hard substance has entered into the pump filter. >>> Clean the pump filter.
- Transportation safety bolts are not removed. >>> Remove the transportation safety bolts.
- Laundry quantity in the product is too little. >>> Add more laundry to the product.
- Excessive laundry is loaded in the product. >>> Take out some of the laundry from the product or distribute the load by hand to balance it homogeneously in the product.

- Product is leaning on a rigid item. >>> Make sure that the product is not leaning on anything.

There is water leaking from the bottom of the product.

- Water drain hose is clogged or twisted. >>> Clean or flatten the hose.
- Pump filter is clogged. >>> Clean the pump filter.

Product stopped shortly after the programme started.

- Machine has stopped temporarily due to low voltage. >>> Product will resume running when the voltage restores to the normal level.

Product directly drains the water it takes in.

- Draining hose is not at adequate height. >>> Connect the water draining hose as described in the user manual.

No water can be seen in the product during washing.

- Water is inside the invisible part of the product. >>> This is not a failure.

Loading door cannot be opened.

- Loading door lock is activated because of the water level in the product. >>> Drain the water by running the Pump or Spin programme.
- Product is heating up the water or it is at the spinning cycle. >>> Wait until the programme completes.
- Loading door may be stuck because of the pressure it is subjected to. >>> Grab the handle and push and pull the loading door to release and open it.
- If there is no power, loading door of the product will not open. >>> To open the loading door, open the pump filter cap and pull down the emergency handle positioned at the rear side of the said cap. See Loading Door Lock ► 30]

Washing takes longer than specified in the user manual. (*)

- Water pressure is low. >>> Product waits until taking in adequate amount of water to prevent poor washing quality due to the decreased amount of water. Therefore, the washing time extends.
- Voltage is low. >>> Washing time is prolonged to avoid poor washing results when the supply voltage is low.
- Input temperature of water is low. >>> Required time to heat up the water extends in cold seasons. Also, washing time can be lengthened to avoid poor washing results.
- Number of rinses and/or amount of rinsing water have increased. >>> Product increases the amount of rinsing water when good rinsing is needed and adds an extra rinsing step if necessary.
- Excessive foam has occurred and automatic foam absorption system has been activated due to too much detergent usage. >>> Use recommended amount of detergent.

Programme duration does not count-down. (On models with display) (*)

- Timer may stop during water intake. >>> Timer indicator will not countdown until the product takes in adequate amount of water. The product will wait until there is sufficient amount of water to avoid poor washing results due to lack of water. Timer indicator will resume countdown after this.
- Timer may stop during heating step. >>> Timer indicator will not countdown until the product reaches the selected temperature.
- Timer may stop during spinning step. >>> Automatic unbalanced load detection system is activated due to the unbalanced distribution of the laundry in the product.

Programme duration does not count-down. (*)

- There is unbalanced load in the product.
>>> Automatic unbalanced load detection system is activated due to the unbalanced distribution of the laundry in the product.

Product does not switch to spinning step. (*)

- There is unbalanced load in the product.
>>> Automatic unbalanced load detection system is activated due to the unbalanced distribution of the laundry in the product.
- The product will not spin if water is not drained completely. >>> Check the filter and the draining hose.
- Excessive foam has occurred and automatic foam absorption system has been activated due to too much detergent usage. >>> Use recommended amount of detergent.

Washing performance is poor: Laundry turns gray. ()**

- Insufficient amount of detergent has been used over a long period of time. >>> Use the recommended amount of detergent appropriate for water hardness and the laundry.
- Washing has been made at low temperatures for a long time. >>> Select the proper temperature for the laundry to be washed.
- Insufficient amount of detergent is used with hard water. >>> Using insufficient amount of detergent with hard water causes the soil to stick on the cloth and this turns the cloth into gray in time. It is difficult to eliminate graying once it happens. Use the recommended amount of detergent appropriate for water hardness and the laundry.
- Excessive amount of detergent is used. >>> Use the recommended amount of detergent appropriate for water hardness and the laundry.

Washing performance is poor: Stains persist or the laundry is not whitened. ()**

- Insufficient amount of detergent is used.
>>> Use the recommended amount of detergent appropriate for water hardness and the laundry.
- Excessive laundry is loaded in. >>> Do not load the product in excess. Load with amounts recommended in the "Programme and consumption table".
- Wrong programme and temperature were selected. >>> Select the proper programme and temperature for the laundry to be washed.
- Wrong type of detergent is used. >>> Use original detergent appropriate for the product.
- Excessive amount of detergent is used.
>>> Put the detergent in the correct compartment. Do not mix the bleaching agent and the detergent with each other.

Washing performance is poor: Oily stains appeared on the laundry. ()**

- Regular drum cleaning is not applied. >>> Clean the drum regularly. For this procedure, see Cleaning the Loading Door and the Drum ► 36]

Washing performance is poor: Clothes smell unpleasantly. ()**

- Odours and bacteria layers are formed on the drum as a result of continuous washing at lower temperatures and/or in short programmes. >>> Leave the detergent drawer as well as the loading door of the product ajar after each washing. Thus, a humid environment favourable for bacteria cannot occur in the machine

Colour of the clothes faded. ()**

- Excessive laundry was loaded in. >>> Do not load the product in excess.
- Detergent in use is damp. >>> Keep detergents closed in an environment free of humidity and do not expose them to excessive temperatures.

- A higher temperature was selected. >>> Select the proper programme and temperature according to the type and soiling degree of the laundry.

Washing machine does not rinse well.

- The amount, brand and storage conditions of the detergent used are inappropriate. >>> Use a detergent appropriate for the washing machine and your laundry. Keep detergents closed in an environment free of humidity and do not expose them to excessive temperatures.
- Detergent was put in the wrong compartment. >>> If detergent is put in the pre-wash compartment although prewash cycle is not selected, the product can take this detergent during rinsing or softener step. Put the detergent in the correct compartment.
- Pump filter is clogged. >>> Check the filter.
- Draining hose is folded. >>> Check the drain hose.

Laundry became stiff after washing. ()**

- Insufficient amount of detergent is used. >>> Using insufficient amount of detergent for the water hardness can cause the laundry to become stiff in time. Use appropriate amount of detergent according to the water hardness.
- Detergent was put in the wrong compartment. >>> If detergent is put in the pre-wash compartment although prewash cycle is not selected, the product can take this detergent during rinsing or softener step. Put the detergent in the correct compartment.
- Detergent was mixed with the softener. >>> Do not mix the softener with detergent. Wash and clean the drawer with hot water.

Laundry does not smell like the softener. ()**

- Detergent was put in the wrong compartment. >>> If detergent is put in the pre-wash compartment although prewash cycle is not selected product, the can take this detergent during rinsing or

softener step. Wash and clean the drawer with hot water. Put the detergent in the correct compartment.

- Detergent was mixed with the softener. >>> Do not mix the softener with detergent. Wash and clean the drawer with hot water.

Detergent residue in the detergent drawer. ()**

- Detergent was put in wet drawer. >>> Dry the detergent drawer before putting in detergent.
- Detergent has gotten damp. >>> Keep detergents closed in an environment free of humidity and do not expose them to excessive temperatures.
- Water pressure is low. >>> Check the water pressure.
- The detergent in the main wash compartment got wet while taking in the prewash water. Holes of the detergent compartment are blocked. >>> Check the holes and clean if they are clogged.
- There is a problem with the detergent drawer valves. >>> Call the Authorised Service Agent.
- Detergent was mixed with the softener. >>> Do not mix the softener with detergent. Wash and clean the drawer with hot water.
- Regular drum cleaning is not applied. >>> Clean the drum regularly. For this procedure, see Cleaning the Loading Door and the Drum [► 36]

Too much foam forms inside the product. ()**

- Improper detergents for the washing machine is used. >>> Use detergents appropriate for the washing machine.
- Excessive amount of detergent is used. >>> Use only sufficient amount of detergent.
- Detergent was stored under improper conditions. >>> Store detergent in a closed and dry location. Do not store in excessively hot places.

- Some meshed laundry such as tulle may foam too much because of their texture. >>> Use smaller amounts of detergent for this type of item.
- Detergent was put in the wrong compartment. >>> Make sure you place the detergent in the appropriate compartment.
- Softener is being taken early by the product. >>> There may be problem in the valves or in the detergent drawer. Call the Authorised Service Agent.

Foam is overflowing from the detergent drawer.

- Too much detergent is used. >>> Mix 1 tablespoonful softener and ½ l water and pour into the main wash compartment of the detergent drawer. >>> Put detergent into the product suitable for the programmes and maximum loads indicated in the "Programme and consumption table". When you use additional chemicals (stain removers, bleaches and etc.), reduce the amount of detergent.

Laundry remains wet at the end of the programme. (*)

- Excessive foam has occurred and automatic foam absorption system has been activated due to too much detergent usage. >>> Use recommended amount of detergent.

(*) The product does not switch to spinning step when the laundry is not evenly distributed in the drum to prevent any damage to the product and to its surrounding environment. Laundry should be rearranged and respun.

(**) Regular drum cleaning is not applied. Clean the drum regularly. See Cleaning the Loading Door and the Drum [► 36]



If you cannot eliminate the problem although you follow the instructions in this section, consult your dealer or the Authorised Service Agent. Never try to repair a nonfunctional product yourself.



Check the HomeWhiz section for the relevant troubleshooting information.

9 DISCLAIMER / WARNING

Some (simple) failures can be adequately handled by the end-user without any safety issue or unsafe use arising, provided that they are carried out within the limits and in accordance with the following instructions (see the "Self-Repair" section).

Therefore, unless otherwise authorized in the "Self-Repair" section below, repairs shall be addressed to registered professional repairers in order to avoid safety issues. A registered professional repairer is a professional repairer that has been granted access to the instructions and spare parts list of this product by the manufacturer according to the methods described in legislative acts pursuant to Directive 2009/125/EC.

However, only the service agent (i.e. authorized professional repairers) that you can reach through the phone number given in the user manual/warranty card or through your authorized dealer may provide service under the guarantee terms. Therefore, please be advised that repairs by professional repairers (who are not authorized by Beko) shall void the guarantee.

Self-Repair

Self-repair can be done by the end-user with regard to the following spare parts: door, door hinge and seals, other seals, door locking assembly and plastic peripheral.

als such as detergent dispensers (an updated list is also available in support.beko.com as of 1st of March 2021)

Moreover, to ensure product safety and to prevent risk of serious injury, the mentioned self-repair shall be done following the instructions in the user manual for self-repair or which are available in support.beko.com. For your safety, unplug the product before attempting any self-repair.

Repair and repair attempts by end-users for parts not included in such list and/or not following the instructions in the user manuals for self-repair or which are available in support.beko.com, might give rise to safety issues not attributable to support.beko.com, and will void the warranty of the product.

Therefore, it is highly recommended that end-users refrain from the attempt to carry out repairs falling outside the mentioned list of spare parts, contacting in such cases authorized professional repairers or registered professional repairers. On the contrary, such attempts by end-users may cause safety issues and damage the product and subsequently cause fire, flood, electrocution and serious personal injury to occur.

By way of example, but not limited to, the following repairs must be addressed to authorized professional repairers or registered professional repairers: motor, pump assembly, main board, motor board, display board, heaters etc.

The manufacturer/seller cannot be held liable in any case where end-users do not comply with the above

The spare part availability of the washing machine or washer-dryer that you purchased is 10 years. During this period, original spare parts will be available to operate the washing machine or washer-dryer properly.

When the appliance is turned off, pressing 1 and 2 auxiliary function buttons are pressed for a long time, a 3-2-1 countdown, and the total washing cycles completed on the appliance is displayed.

After the total washing cycle is displayed, the failure codes, if any, are displayed. Check the information on the screen through the table below.

On-screen Information	Cause	Solution
Err	Safety algorithm is run on the appliance.	Wait for the writing to pass. After pressing the auxiliary function buttons 1 and 2, check the on-screen information.
SC	Your complaint is not solved during the check.	Call the authorised service agent.
E5	Pump filter may be clogged.	Clean the pump filter. See "Draining remaining water and cleaning the pump filter" section. Try in spin cycle. If the issue is not resolved, call the service.
E8	The machine may not be taking in water.	• Turn on the taps. • Make sure there is no water outage. • Check the water inlet hose connection, if there is any folding on the hose, straighten it. • Clean the pump filter. See "Draining remaining water and cleaning the pump filter" section. • Close the front cover of the machine. Make sure that the cover is locked. Run the machine one more time. If the issue is not resolved, call the service.
E29	The product has switched to self protection mode due to a supply problem (line voltage, water pressure, etc.).	To cancel the programme, turn the Programme Selection knob to select another programme. Previous programme will be cancelled. See "Cancelling the programme" section. If the issue persists, call the service.
E17	Excess foam is present in the machine after the completed cycle.	• Store detergent in a closed and dry location. Do not store in excessively hot places. • Use smaller amounts of detergent for porous laundry like tulle. • Use amount of detergent appropriate to the amount of laundry and the level of stain. • Use only sufficient amount of detergent. • Make sure you place the detergent in the appropriate compartment. • Run the Drum Cleaning programme with the machine empty. See "Drum Cleaning" programme If your machine does not include Drum Cleaning programme, you can use Cotton 90C. • After running a short programme without detergent, check the machine. If the issue persists, call the service.
E18	Spin cycle is not initiated due to an imbalance of the machine.	Check the laundry inside the machine. The amount of laundry may not be sufficient. Try by increasing the amount of laundry. The laundry may be causing an imbalance; sort out the laundry by hand and distribute evenly inside the appliance. Retry in spin cycle.
E12	There may be water inside the machine.	Unplug the machine. There may be water under the machine. Clean the water under the machine. Plug the machine again. Try running a short cycle. If the issue persists or you see water leaking from one of the hoses, close the valves and call the service.
E27	Check the water drain of the machine.	See "Connecting the drain hose to the drain" section.
E84	BLE connection cannot be established.	Check it, try connecting it. See "HomeWhiz Feature and Remote Control Function" section. If the issue persists, call the service.



Pesumasin

Kasutusjuhend



B3WFU 78225 WB

ET



Sisukord

1 Ohutusjuhised	4
1.1 Kasutusotstarve	4
1.2 Laste, haavatavate isikute ja lemmikloomade ohutus	4
1.3 Elektriõhusus	5
1.4 Käitlemise õhusus	6
1.5 Paigaldamise õhusus	6
1.6 Kasutusõhusus	7
1.7 Hooldus- ja puhastusõhusus	9
2 Olulised keskkonnajuhised	9
2.1 Vastavus elektroonikaromude direktiivile	9
2.2 Pakendi teave	9
3 Tehnilised spetsifikatsioonid	10
4 Paigaldamine	11
4.1 Sobiv paigalduskoht	11
4.2 Alumise paneeli katete paigaldamine	11
4.3 Transpordipoltide eemaldamine ..	12
4.4 Seadme ühendamine veetorustikuga	12
4.5 Tühjendusvooliku ühendamine äravoolutoruga	13
4.6 Aluste reguleerimine	13
4.7 Seadme ühendamine vooluvõrku ..	13
4.8 Käivitamine	14
5 Ettevalmistused	14
5.1 Pesu sorteerimine	14
5.2 Pesu ettevalmistamine pesemiseks	14
5.3 Nõuandeid elektri ja vee kokkuhoiuks	15
5.4 Pesu asetamine masinasse	15
5.5 Õiged pesukogused	15
5.6 Pesuvahendi ja pesupehmendaja kasutamine	15
5.7 Näpunäiteid pesu pesemiseks	17
5.8 Kuvatud programmi tööaeg	18
6 Toote kasutamine	18
6.1 Juhtpaneel	19
6.2 Ekraanil olevad sümbolid	20
6.3 Programmide ja kulu tabel	21
6.4 Programmi valimine	22
6.5 Programmid	23

6.6 Temperatuuri valimine	25
6.7 Tsentrifuugimiskiiruse valimine	26
6.8 Lisafunktsioonide valimine	27
6.8.1 Lisafunktsioonid	27
6.8.2 3-sekundilise funktsiooninupu vajutusega valitud funktsioonid/programmid	28
6.9 Lõpukella aeg	29
6.10 Programmi käivitamine	30
6.11 Pesumasina ukse lukustus	30
6.12 Valikute muutmine pärast programmi käivitumist	31
6.13 Programmi tühistamine	31
6.14 Programmi lõpp	32
6.15 Funktsioonid HomeWhiz ja kaugjuhtimine	32
6.15.1 HomeWhizi seadistamine	32
6.15.2 Pesumasina seadistamine, mis on ühendatud kellegi teise kontoga	34
6.15.3 Kaugjuhtimisfunktsioon ja selle kasutamine	34
6.15.4 Probleemide lahendamine	35
7 Hooldus- ja puhastus	35
7.1 Pesuvahendi sahtli puhastamine ..	35
7.2 Ukse ja trumli puhastamine	35
7.3 Korpuse ja juhtpaneeli puhastamine	36
7.4 Vee sissevoolu filtrite puhastamine	36
7.5 Masina tühjendamine ülejäänud veest ja pumba filtri puhastamine ..	36
8 Probleemide lahendamine	37
9 LAHTIÜHTLUS / HOIATUS	41

Lugege kõigepealt seda kasutusjuhendit!

Lugupeetud klient,

Täname, et valisite toote. Soovime, et meie kvaliteetne ja tipp tehnoloogiat sisaldav toode oleks teile võimalikult kasulik. Seega palume, et loeksite läbi enne toote kasutamist läbi kogu kasutusjuhendi ja kõik kaasasolevad dokumendid.

Järgige kõiki kasutusjuhendis toodud hoiatusi ja teavet. Sedasi kaitsete ennast ja toodet võimalike ohtude eest.

Hoidke kasutusjuhend alles. Kui annate toote edasi kellelegi teisele, andke koos sellega edasi ka kasutusjuhend. Teie toote garantiitingimused, kasutus- ja tõrkeotsingu meetodid on toodud kasutusjuhendis.

Sümbolid ja selgitused.

Kasutusjuhendis kasutatakse järgmisi sümboleid:

	Oht, mille tagajärjeks võib olla surm või vigastus.
	Oluline teave või soovitused kasutamise kohta.
	Lugege kasutusjuhendit.
	Ringlussevõetavad materjalid.
 	Hoiatus kuumade pindade kohta.
HOIATUS	Oht, mille tagajärjeks võib olla toote või selle keskkonna kahju.



1 Ohutusjuhised

See jaotis sisaldab ohutusjuhiseid, mis on vajalikud kehavigastuste või materiaalsete kahjude ohu vältimiseks.

Meie ettevõtte ei vastuta kahjude eest, mis võivad tekkida nende juhiste eiramisel.

- Paigaldus- ja remonditoimingud peab alati tegema volitatud teenindus.
- Kasutage ainult originaalvaruosi ja -tarvikuid.
- Ärge parandage ega asendage ühtegi toote komponenti, välja arvatud juhul, kui see on kasutusjuhendis selgelt sätestatud.
- Ärge muutke toodet.



1.1 Kasutusotstarve

- Toote pingi eluiga on 10 aastat. Selle aja jooksul on saadaval originaalvaruosad, mis tagavad seadme nõuetekohase töö.
- Seade on mõeldud kasutamiseks ainult koduses majapidamises. See ei sobi kommertskasutuseks ja seda ei tohi kasutada muuks kui ettenähtud otstarbeks.

- Seadet võib kasutada ainult vastava märgistusega pesu pesemiseks ja loputamiseks.
- Antud seade on ette nähtud kasutamiseks majapidamises ja muudes sarnastes kohtades. Näiteks:
 - töötajate köögid kauplustes, kontorites ja muude töökeskkondades;
 - rantšod;
 - hotellide, motellide ja teiste majutusasutuste klientide poolt;
 - kodumajutusasutused, hostelid;
 - korter- või pesumajade ühisalad.

1.2 Laste, haavatavate isikute ja lemmikloomade ohutus



- Seda toodet võivad kasutada 8-aastased ja vanemad lapsed ning vähearenenud füüsiliste, sensoorsete või vaimsete võimetega või puuduvate kogemuste ja teadmistega inimesed, kui neile on tagatud järelevalve või neid on seadme toote ohutu kasutamise ja ohutude osas juhendatud.

- Alla 3 aasta vanused lapsed tohivad seadme läheduses viibida ainult pideva järelevalve all.
- Elektrilised tooted on lastele ja lemmikloomadele ohtlikud. Lapsed või lemmikloomad ei tohiks tootega mängida ega selle sisse või peale ronida. Enne kasutamist kontrollige masinat seest.
- Kasutage lapselukku, et lapsed ei saaks seadet juhuslikult kasutada.
- Kui lahkute seadme juurest, pange selle uks kindlasti kinni. Lapsed ja lemmikloomad võivad jääda trumlistesse luku taha ja uppuda.
- Lapsed ei tohiks toodet puhastada ja teha kasutajale lubatud hooldustöid täiskasvanu järelevalveta.
- Hoidke pakkematerjale lastele kättesaamatus kohas. Vigastus- ja lämbumisoht.
- Hoidke kõiki tootega kasutatavaid pesuvahendeid ja lisaaineid lastele kättesaamatus kohas.
- Enne toote kasutusest kõrvaldamist lõigake laste ohutuse tagamiseks läbi selle toitejuhe ja desaktiveerige ukse lukustusmehhanism.



1.3 Elektriohutus

- Paigaldamise, hoolduse, puhastamise ja remondi ajaks tuleb seade lahutada vooluvõrgust.
- Kahjustatud toitejuhtmed tuleb võimalike ohtude vältimiseks volitatud teeninduses välja vahetada.
- Ärge jätke toitejuhet toote alla või selle taha. Ärge pange toitejuhtmele raskeid esemeid. Ärge painutage toitejuhet liiga palju, muljuge seda või laske sel puutuda kokku kuumade esemetega.
- Ärge kasutage toote kasutamiseks pikendusjuhet, mitmikpistikut ega adapterit.
- Pistik peab olema hõlpsasti ligipääsetav. Kui see ei ole võimalik, peab elektripaigaldises olema elektrialaste õigusaktidele vastav mehhanism, mis ühendab vooluvõrgust lahti kõik klemmid (kaitse, lüliti, pealüliti jne).
- Ärge puudutage pistikut märgade kätega.
- Seadme vooluvõrgust lahti ühendades ärge hoidke kinni toitejuhtmest, vaid pistikust.
- Veenduge, et pistik poleks märg, määrdunud või tolmune.

1.4 Käitlemise ohutus

- Enne toote liigutamist ühendage see vooluvõrgust lahti ning ühendage lahti kõik veeühendused. Laske tootes olev vesi välja.
- Toode on raske, ärge liigutage seda üksinda. Ärge hoidke toote liigutamisel kinni selle väljaulatuvatest osadest, nagu uks. Ülemine kate peaks liigutamise ajaks olema korralikult fikseeritud.
- Toode on raske; kui seda peab mööda treppi transportima, peaks seda tegema kahekesi ja ettevaatlikult. Toote kukkumine võib põhjustada vigastusi. Ärge tabage tootega selle kandmise ajal objekte ega pillake toodet maha.
- Kandke toodet püstises asendis.
- Pärast paigaldamist või puhastamist veenduge, et voolikud ja toitejuhe poleks kokku pitsitatud või muljutud.

1.5 Paigaldamise ohutus

- Toote paigaldamiseks ettevalmistamiseks lugege juhendit ja paigaldusjuhiseid ning veenduge, et elektrivõrk, puhtaveeühendus ja vee äravool sobivad seadmele.

Vastasel juhul võtke ühendust kvalifitseeritud elektriku ja torumehega ning laske neil vajalikud seadistused teha. Need toimingud on kliendi vastutus.

- Enne toote paigaldamist kontrollige, kas tootel pole kahjustusi. Ärge laske toodet paigaldada, kui see on kahjustatud.
- Käte panemisel katmata avadesse võivad tagajärjeks olla vigastused. Sulgege transportimiseks paigaldatud turvapoltide augud plastkorkidega.
- Ärge paigaldage või jätke toodet kohta, kus see võib puutuda kokku väliskeskkonnaga.
- Ärge paigaldage toodet kohtadesse, kus temperatuur võib langeda alla 0 °C.
- Ärge paigaldage toodet vaibaga kaetud põrandale. See tekitab tulekahjuohtu, kuna toode ei saa alt õhku.
- Paigaldage toode ühtlasele ja kõvale pinnale ning seadke see reguleeritavate jalgade abil tasakaalu.
- Ühendage toode maanduspistikuga, millel on andmesildil märgitud näitajatele vastav kaitse.

Veenduge, et maanduse teeb eksperdist elektrik. Ärge kasutage toodet kohalikele/riiklikele nõuetele vastava maanduseta.

- Ühendage toode pistikusse, mille pinge ja vool vastavad andmesildil märgitud väärtustele.
- Ärge ühendage toodet lahtiste, katkiste, määrdunud, rasvaste pistikupesadega või pistikupesadega, mis on pesadest välja tulnud või pistikupesadesse, mis võivad kokku puutuda veega.
- Kasutage tootega kaasasolevaid uusi voolikuid. Ärge kasutage vanu voolikuid. Ärge pikendage voolikuid.
- Ühendage vee sissevooluvoolik otse veekraaniga. Veesurve peaks olema vähemalt 0,1 MPa (1 baari) ja maksimaalselt 1MPa (10 baari). Selleks, et toote töötaks normaalselt, peaks kraanist voolama minutis 10 kuni 80 liitrit vett. Kui veesurve on üle 1 MPa (10 baari), peaks paigaldama rõhuvähendusklapi. Maksimaalne lubatav temperatuur on 25 °C.
- Ühendage vee äravooluvoolik vee äravoolu või valamu või vanniga.

- Seadke toitejuhe ja voolikud sedasi, et need ei tekitaks komistusriski.
- Ärge paigaldage toodet ukse või liugukse taha või muusse kohta, mis takistab ukse täielikku sulgemist.
- Kui tootele paigaldatakse kuivati, kinnitage see volitatud teenindusest hangitud sobiva ühendusega.
- Ülemise katte eemaldamisel tekib oht puutuda kokku elektriliste osadega. Ärge eemaldage toote ülemist katet.
- Seadke toode mööbliservadest vähemalt 1 cm kaugusele.



1.6 Kasutusohutus

- Kui kasutate seadmeid, kasutage ainult pesumasinadele sobivaid pesuaineid, pehmendajaid ja lisaaineid.
- Ärge kasutage tootel keemilisi lahusteid. Nende materjalidega kaasneb plahvatusoht.
- Ärge kasutage defektseid või kahjustatud tooteid. Ühendage toode vooluvõrgust lahti (või ühendage lahti selle kaitse), keerake veekraan kinni ja võtke ühendust volitatud teenindusega.
- Ärge pange tootele või selle lähedale tuleallikaid (põlev küünal, sigaretid jne) või

- kuumaallikaid (triikraud, ahjud jne). Ärge pange toote lähedusse kergsüttivaid/ plahvatusohtlikke materjale.
- Ärge astuge tootele.
 - Ühendage toode vooluvõrgust lahti ja keerake kraan kinni, kui te ei kavatse toodet pikka aega kasutada.
 - Pesuaine/hooldusmaterjalid võivad pesuainesahtlist välja pritsida, kui see avatakse masina töötamise ajal. Pesuaine kokkupuude naha ja silmadega on ohtlik.
 - Veenduge, et lemmikloomad ei saaks tootesse ronida. Enne kasutamist kontrollige masinat seest.
 - Ärge suruge masina lukustatud ust jõuga lahti. Uks avaneb pärast pesuprogrammi lõppemist. Kui uks ei avane, kasutage jaotises „Probleemi lahendamine“ pakutud lahendusi tõrkele „Pesumasina uks ei avane“.
 - Ärge peske riideid, mis on koos bensiini, petrooleumi, benseeni, lahusti, alkoholi või teiste kergsüttivate või plahvatusohtlike ainete või tööstuskemikaalidega.
 - Ärge kasutage vahetult kuiva pesuvahendit ja ärge peske, loputage või tsentrifuugige pesu, mis on koos kuiva pesuvahendiga.
 - Ärge pange käsi pöörlevasse trumlisse. Oodake selle peatumiseni.
 - Ärge pange käsi või metallobjekte pesumasina alla.
 - Kui pesete pesu kõrgel temperatuuril, kõrvetab väljavoolav pesuvesi nahaga kokkupuutel, nt kui tühjendusvoolik on kraaniga ühendatud. Ärge puudutage äravoolavat vett.
 - Biokile ja ebameeldiva lõhna tekke vältimiseks rakendage järgmiseid ettevaatusabinõusid:
 - Veenduge, et pesumasina paigalduskoht on hea ventilatsiooniga.
 - Pühkige uksetihendit ja -klaasi pärast programmi lõppemist kuiva ja puhta riidelapiga.
 - Pesumasina ukseklaas on pesu kõrgematel temperatuuridel pestes väga kuum. Seetõttu ärge lubage eriti lastel seadme töötamise ajal ukseklaasi puudutada.



1.7 Hooldus- ja puhastusohutus

- Ärge peske toodet survepesuriga või sellele auru/ vett pihustades või vett valades.
- Ärge kasutage toote puhastamisel teravaid ja abrasiivseid tööriistu. Ärge kasutage puhastamiseks kodumajapidamises kasutatavaid puhastusvahendeid, seepi, pesuvahendit, bensiini, lahustit, alkoholi, lakki jne.
- Lahusteid sisaldavad puhastusvahendid võivad eritada mürgiseid aure (nt puhastuslahusti). Ärge kasutage lahustit sisaldavaid puhastustooteid.
- Pesuvahendi sahtlis võib olla pesuvahendi jääke.
- Ärge võtke tühjenduspumba filtrit lahti samal ajal, kui toode töötab.
- Temperatuur võib masinas tõusta kuni 90 °C-ni. Puhastage filtrit siis, kui vesi on jahtunud, sedasi vältite enda kõrvetamise ohtu.

2 Olulised keskkonnajuhised

2.1 Vastavus elektroonikaromude direktiivile



See toode vastab EL-i elektroonikaromude direktiivile (2012/19/EL). Sellel tootel on elektroonikaromude klassifikatsioonisümbol.

See toode on valmistatud

kvaliteetsetest osadest ja materjalidest, mida saab taaskasutada ning mis sobivad taaskasutamiseks. Ärge visake toodet kasutusea lõppedes tavaliste olme- ja muude jäätmete sekka. Viige see elektri- ja elektroonikaseadmete kogumiskeskusesse. Nende kogumiskeskuste kohta lisateabe saamiseks konsulteerige oma kohaliku omavalitsusega.

Vastavus RoHS-i direktiivile:

Teie ostetud toode vastab EL-i RoHS-i direktiivile (2011/65/EL). See ei sisalda direktiivis määratletud kahjulikke ja keelatud materjale.

2.2 Pakendi teave

Toote pakkematerjalid on valmistatud taaskasutatavatest materjalidest, mis vastavad meie riiklikele keskkonnaeeskirjadele. Ärge visake pakkematerjale olme- või muude jäätmete sekka. Viige need kohaliku omavalitsuse poolt määratud pakendimaterjalide kogumispunktidest.

3 Tehnilised spetsifikatsioonid

Tarnija nimi või kaubamärk	Beko
Mudeli nimetus	B3WFW 78225 WB
	7002440007
Nimimahutavus (kg)	8
Maksimaalne pöörlemiskiirus (tsükleid minutis)	1200
Sisseehitatud	No
Kõrgus (cm)	84
Laius (cm)	60
Sügavus (cm)	55
Ühekordne vee sisselaskeava / kahekordne vee sisselaskeava	+ / -
Seadme ühendamine vooluvõrku (V/Hz)	230 V / 50 Hz
Koguvool (A)	10
Koguvõimsus (W)	2200
Peamine mudeli kood	1320

	Toote andmebaasis talletatud mudeliteabele pääsete juurde, kui sisenete järgmisele veebisaidile ja otsite energiamärgisel oleva mudeli identifikaatorit (*). https://eprel.ec.europa.eu/
SUPPLIER'S NAME	MODEL IDENTIFIER → (*)
A	A

 Tarbimisväärtused kehtivad siis, kui juhtmeta võrguühendus on välja lülitatud.

Sümbolite tabel

															
Eelsope	Kirjogramm	Eriti kire programm	Lisakütus	Rohkem vett	Korruhooldamise funktsioon	Lemmikloomade vade eemaldamine	Aur	Onnitsim	Leotamine	Loputamine jätmine masinasse	Suupuhustus	Automaatne doseerimine	Vedajepuhusti valimine	Pesepuhendi valimine	
															
Loputamine	Taeristruugimine + vee väljavoolamine masinast	Taeristruugimine	Temperatuur	Taeristruugimine	Et Taeristruugimine	Kraanvee (külm)	Ima veele	Vitabim	Uluu lukk	Lapeli lukk	Sees-väljas	Käivitamine / Kätkestamine	Märdumisele	Rõhveste laadimine	Analüütiline programm
															
Pesemine	Ok (õpp)	Tuhtelamine	Eriti kortuudevastane funktsioon	Kuiveldamine	Eriti kuiv	Kapikuv	Trikimiskuv	Kirjalikkukselatud ajava kuiveldamine							

4 Paigaldamine



Lugege kõigepealt jaotist „Ohutusjuhised“!



Teie pesumasin tuvastab pesu koguse automaatselt programmi valimisel. Toote paigalduse käigus tuleks enne esimest kasutuskorda viia läbi kalibreerimine, et pesu kogus tuvastataks kõige täpsemal viisil. Selleks valige programm Trumli puhastus* ja tühistage tsentrifuugimise funktsioon. Käivitage programm ilma pesuta. Oodake kuni programmi lõpuni. Selleks kulub umbes 15 minutit. *Programmi nimi võib olenevalt mudelist erineda. Õige programmi leidmiseks vaadake jaotist Programmide kirjeldused.

- Seadme paigaldamiseks võtke ühendust lähima volitatud teenindusega.
- Veenduge, et toote paigaldab ja ühendab elektrisüsteemiga volitatud hooldustehnik. Tootja ei vastuta kahjude eest, mille põhjuseks on volitamata isikute tehtud toimingud.
- Paigalduskoha ning elektri-, vee- ja kanalisatsioonisüsteemi ettevalmistamine on kliendi ülesanne.
- Toote kohaleasetamisel pärast paigaldamist või puhastamist vältige vee sisse- ja väljalaskevoolikute ning toitejuhtme kokkusurumist, muljumist ja väänamist.
- Enne paigaldamist vaadake, et tootel ei oleks defekte. Ärge laske toodet paigaldada, kui see on kahjustatud. Kahjustatud toode võib kujutada ohtu.

4.1 Sobiv paigalduskoht

- Paigaldage seade kõvale ja tasasele põrandale. Ärge paigaldage seda pikkade narmastega vaibale vms pinnale.


Paigaldus ebasobivale põrandale võib põhjustada müra- ja vibratsiooniprobleeme.

- Kui kuivati ja pesumasin on üksteise peal, siis nende kogukaal (täiskoormusel) ulatub u 180 kilogrammini. Asetage toode piisava kandevõimega kindlale ja ühetasasele põrandale.
- Ärge jätke toitejuhet seadme alla.
- Ärge paigaldage toodet kohtadesse, kus temperatuur võib langeda alla 0 °C. Külmutamine võib toodet kahjustada.
- Jätke toote ja mööbli vahele vähemalt 1 cm vaba ruumi.
- Kui paigaldate toote sammudega pinnale, ärge kunagi asetage seda serva lähedale.
- Ärge paigaldage toodet platvormile.
- Ärge asetage pesumasinale ega kasutage pesumasina peal soojusallikaid nagu nagu pliit, triikraud, ahjud, küttekehad jne

4.2 Alumise paneeli katete paigaldamine

- Toote helimugavuse suurendamiseks kinnitage pärast pakendi vahtplasti eemaldamist kate A.


Kate A

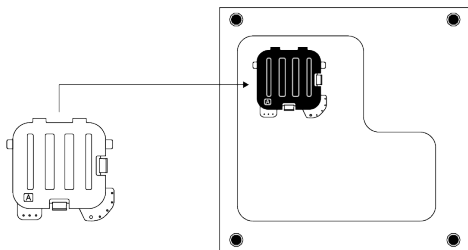

Kallutage masinat veidi tahapoole. Seadke kate A sakid vastu alumist paneeli. Pöörake katet lõplikuks paigaldamiseks.


- Kate B ja kork on valikulised. Võimalusel kinnitage kate B ja kork.

Kate B

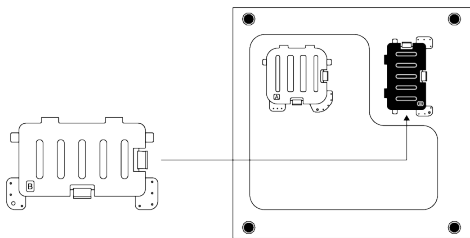

Seadke kate B sakid vastu alumist paneeli. Pöörake katet lõplikuks paigaldamiseks.


Kork

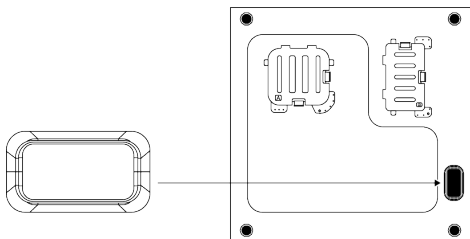

Sisestage kork ja suruge see sõrme abil kinni.

4.3 Transpordipoltide eemaldamine

1. Keerake kõik turvapoldid asjakohase võtmega lahti, kuni neid saab lõdvalt keerata.
2. Painutage sisemist osa, vajutades seda haardepiirkondadesse, ja tõmmake osa välja.
3. Sisestage kasutusjuhendi kotis olevad plastkaaned tagapaneeli aukudesse.

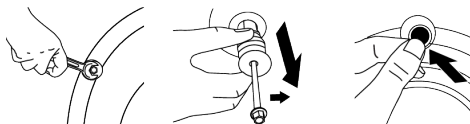

MÄRKUS

Eemaldage transpordipoldid enne toote kasutamist. Muidu saab toode kahjustada.



MÄRKUS

Hoidke transpordipolte kindlas kohas – teil võib neid tulevikus toote transportimisel vaja minna. Paigaldage transpordipoldid nende eemaldamisele vastupidises järjekorras. Ärge kunagi transportige toodet ilma korralikult kinnitatud transpordipoltideta.


4.4 Seadme ühendamine veetorustikuga



MÄRKUS

Ühe sisselaskeavaga mudeleid ei tohi kuuma vee kraaniga ühendada. Vastasel juhul saab pesu kahjustada või toode lülitub kaitsereeži ega hakka toimima. Ärge kasutage uue toote puhul vanu või kasutatud vee sissevooluvoolikuid. See võib põhjustada vee lekkimist masinast ja pesu määrida.

1. Pingutage käsitsi kõik voolikumutrid. Ärge kunagi kasutage mutrite kinnikeeramiseks mutrivõtit.
2. Pärast voolikuühenduse loomist avage kraanid täielikult, et kontrollida, kas ühendused lekivad. Lekete korral keerake kraan kinni ja eemaldage mutter. Kontrollige tihendit ja keerake mutter uuesti hoolikalt kinni. Veelekete ja nendest põhjustatud kahjustuste vältimiseks veenduge, et seadme mittekasutamisel on kraanid kinni keeratud.

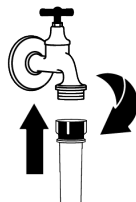


4.5 Tühjendusvooliku ühendamine äravoolutoruga

1. Ühendage tühjendusvoolik otse äravoolutoru, valamü või vanniga.



Vee tühjendusvooliku lahtitulek tühjendamise ajal põhjustab teie kodus üleujutuse. Kõrge pesutemperatuuri tõttu on ka põletuste risk. Et vältida selliseid olukordi ja veenduda, et toote vee sissevõtmine ja väljalaskmine toimub probleemideta, kinnitage tühjendusvoolik korralikult.

2. Ühendage tühjendusvoolik vähemalt 40 cm ja kuni 100 cm kõrgusele.
3. Vee tühjendusvooliku paigaldamine maapinnale või põranda lähedale (40 cm allapoole) ja seejärel tõstmine muudab vee väljajuhtimise keeruliseks ja pesu võib jääda väga märjaks. Seega järgige joonisel näidatud kõrgusi.

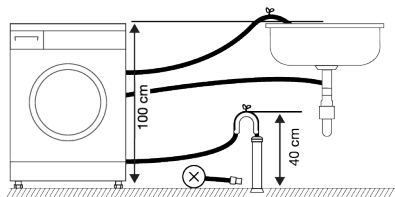

4. Et vältida musta vee voolamist tagasi masinasse ja hõlbustada vee äravoolu, ärge pange vooliku otsa väljavoolanud vee sisse ega suruge seda kanalisatsiooniasas rohkem kui 15 cm sügavusele. Kui see on liiga pikk, lõigake see lühikeseks.
5. Vooliku peal ei tohi tallata ja vooliku otsa ei tohi painutada ega muljuda äravoolutoru ja toote vahele. Vastasel juhul võivad tekkida probleemid vee äravooluga.
6. Kui voolik on liiga lühike, kasutage selle pikendamiseks pikendusvoolikut (originaal). Vooliku kogupikkus ei tohi olla pikem kui 3,2 m. Veelekke vältimiseks kinnitage pikendusvooliku ja

toote tühjendusvooliku vaheline ühendus alati sobiva klambriga, et see ei tuleks lahti ega põhjustaks lekkeid.


4.6 Aluste reguleerimine



MÄRKUS

Et toote töömüra ja vibratsioon oleksid minimaalsed, peab see olema loodis ja toetuma kindlalt jalgadele. Masina loodimiseks reguleerige selle jalgade pikkust. Muidu võib toode kohalt nihkuda ning ümberkaudseid objekte muljuda, müra tekitada või vibreerima hakata. Lukustusmutrite kahjustamise vältimiseks ärge kasutage mutrite lahti keeramiseks tööriistu.

1. Keerake pesumasina jalgade lukustusmutrid käega lahti.
2. Reguleerige jalgu nii, et seade seisaks tasaselt ja ei kõiguks.
3. Pingutage uuesti käsitsi kõik lukustusmutrid.



4.7 Seadme ühendamine vooluvõrku

Ühendage toode maandatud seinakontakti, mida kaitseb 16 A kaitse Meie ettevõtte ei vastuta kahjude eest, mis tekivad toote kasutamisest ilma maanduseta, mis vastab kohalikele eeskirjadele.

- Ühendamisel tuleb järgida riigis kehtivaid eeskirju.
- Toote elektriühenduskaabli infrastruktuur peab olema piisav ja sobiv toote nõuetele. Soovitav on kasutada jääkvoolukaitset.
- Toitejuhtme pistik peab olema pärast seadme paigaldamist kergesti ligipääsetav.

- Kui kohaliku elektrisüsteemi kaitsme või rikkevoolu kaitselüliti vool on alla 16 ampri, siis laske kvalifitseeritud elektrikul paigaldada 16-amprine kaitse.
- Võrgupinge peab vastama lõigus "Tehnilised näitajad" toodud pingele.
- Ärge kasutage seadme ühendamiseks pikendusjuhtmeid ega harupesasid. Ühendusjuhe võib põhjustada ülekuumenemist ja tulekahju.




Kahjustatud toitejuhtmed tuleb võimalike ohtude vältimiseks volitatud teeninduses välja vahetada.

4.8 Käivitamine

Enne toote kasutamist veenduge, et tehtud on kõik ettevalmistustööd, mida on kirjeldatud jaotistes „Keskonna-alased

juhised” ja „Paigaldamine”. Et valmistada toode ette pesupesemiseks, tehke esimene pesu trumli puhastamise programmiga. Kui see programm pole teie masinal saadaval, kasutage jaotises „Ukse ja trumli puhastamine” meetodit.

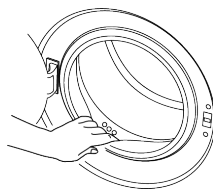

Seoses tootmise käigus tehtud kvaliteedikontrolliga on masinasse jäänud veidi vett. See ei kahjusta toodet.

5 Ettevalmistused



Lugege kõigepealt jaotist „Ohutusjuhised”

5.1 Pesu sorteerimine

- Sortige pesu kangatüübi, värvi, määrdumisastme ja lubatud veetemperatuuri järgi.
- Järgige alati riiete etikettidel olevaid juhiseid.

5.2 Pesu ettevalmistamine pesemiseks

- Metalldetailidega (nt tugikaared, rihmapandlad, metallnööbid) esemed võivad toodet kahjustada. Eemaldage metalldetailid või asetage metalldetailidega esemed pesukoti, padjapüüri vms sisse
- Eemaldage taskutest kõik esemed (nt mündid, pastakad ja kirjaklambrid), keerake taskud pahupidi ja pühkige harjaga üle. Taskutesse jäänud esemed võivad tekitada müra või masinat kahjustada.

- Pisiesemed (nt laste sokid, nailonsukad jms) asetage pesukoti, padjapüüri vms sisse.
- Kardinaid masinasse asetades ärge suruge neid kokku. Eemaldage kardinat riputusklambrid. Kardinat riputusklambrid võivad põhjustada kardina sikutamist ja rebenemist.
- Tõmmake lukud kinni, õmmelge lahtised nööbid kindlalt ette ja parandage lõhkikärisenud kohad.
- Peske pesu etikettidega „Masinpesu” või „Käsipesu” ainult spetsiaalseid programme kasutades.
- Ärge peske koos värvilisi ja valgeid esemeid. Uued tumedat värvi puuvillased esemed võivad väga tugevalt värvi anda. Peske neid eraldi.
- Tugevaid plekke tuleb enne pesemist töödelda.
- Peske pükse ja õrnu esemeid pahempidi keeratuna.
- Jahu, lubjatolm, piimapulber jms tuleb enne pestava eseme seadmesse panemist põhjalikult maha raputada. Aja

jooksul võivad pesule ladestunud tolm ja pulberjad ained koguneda masina sisedetailidele ja masinat kahjustada.

5.3 Nõuandeid elektri ja vee kokkuhoiuks

Alljärgnev teave aitab teil toodet kasutades keskkonda ja elektrienergiat säästa.

- Kasutage toodet valitud programmi jaoks suurimal lubatud võimsusel, kuid vältige ülekoormust. Vt "Programmide ja kulu tabel"
- Järgige alati pesuvahendi pakendil olevaid temperatuurivaliku juhiseid.
- Vähemäärdundu pesu peske madalal temperatuuril.
- Kui pesu on vähe ja see ei ole tugevalt määrdundu, kasutage lühemaid programme.
- Kui riided ei ole tugevalt määrdundu ja neil ei ole plekke, ärge kasutage eelpesu ja kõrget temperatuuri.
- Kui kavatsete kuivatada pesu kuivatis, valige pesemise käigus suurim soovitatud tsentrifuugimiskiirus.
- Ärge kasutage pakendil ettenähtud kogusest rohkem pesuvahendit.

5.4 Pesu asetamine masinasse

1. Avage pesumasina uks.
2. Asetage pesu lõdvalt masinasse.
3. Lükake seadme uks kinni, kuni kuulete klõpsu. Veenduge, et ükski ese pole ukse vahele jäänud. Programmi töötamise ajal on pesumasina uks lukustatud. Ukselukk avaneb pärast programmi lõppemist. Seejärel saate ukse avada. Kui uks ei avane, kasutage jaotises „Probleemi lahendamine“ pakutud lahendusi tõrkele „Pesumasina ust ei saa avada“.

5.5 Õiged pesukogused

Maksimaalne pesukogus sõltub pesu tüübist, määrdumisastmest ja soovitud pesuprogrammist.

Toote reguleerib veekogust automaatselt sellesse asetatud pesu kaalu järgi.




Järgige jaotises „Programmide ja kulu tabel“ antud juhiseid. Kui seadmetes on liiga palju pesu, ei pruugi tulemus jääda hea. Samuti võib tekkida müra ja vibratsioon.

5.6 Pesuvahendi ja pesupehmdajaja kasutamine



HOIATUS

Kui kasutate pesuaineid, pehmdajaid, tärklis, pesuvalgendit ja värviemaldajaid, katlakivi eemaldavaid aineid, lugege pakendil olevaid tootja juhiseid ning järgige ettenähtud koguseid. Kasutage mõõtetopsi, kui see on olemas.

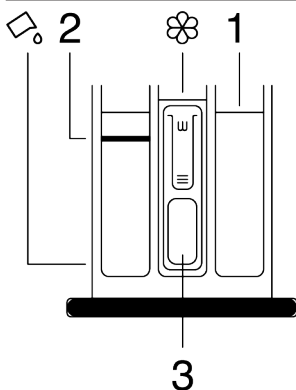

Pesuvahendi sahtel on jagatud kolmeks:
(1) eelpesu pesuvahend
(2) põhipesuvahend;
(3) pesupehmdaja;
(☼) sifoonitükk pesupehmdaja lahtris;
(☞) põhipesuvahendi lahtris on lisaks vahend vedela pesuvahendi kasutamiseks.

Pesuvahend, -pehmdaja ja muud puhastusvahendid

- Lisage pesuvahend ja pesupehmdaja enne programmi käivitamist.
- Ärge jätke pesuprogrammi ajal pesuvahendi sahtlit lahti.
- Kui kasutate eelpesuta programmi ärge pange eelpesuvahendi lahtrisse (lahter nr „1“) pesuvahendit.

- Kui kasutate eelpesuga programmi, käivitage masin pärast pulbrilise pesuaine lisamist eelpesu ja põhipesu lahtrisse (lahtrid 1 ja 2).
- Pesutableti või jaotuspalli kasutamisel ärge valige eelpesuga programmi. Asetage pesutablett või jaotuspall koos pestavate esemetega trumliisse.
- Kui kasutate vedelat pesuainet, järgige jaotises „Vedela pesuaine kasutamine“ toodud juhiseid ja ärge unustage seada vedela pesuvahendi tarvikut õigesse asendisse.

Pesuvahendi tüübi valimine

Pesuvahendi tüüp oleneb pestavate esemete tüübist ja värvusest.

- Värvilist ja valget pesu peske erinevate pesuvahenditega.
- Õrnast materjalist riideid peske ainult õrnale pesule sobiva spetsiaalse pesuvahendiga (vedel pesuvahend, villašampoon vms).
- Tumedat värvi riiete ja vatitekkide pesemiseks on soovitatav kasutada vedelat pesuvahendit.
- Peske villaseid riideid soovitatud programmi abil spetsiaalselt villaste riiete jaoks valmistatud pesuvahendit kasutades.
- Vastavate kangaste jaoks soovitatud programmi leidmiseks vaadake jaotist programmide kirjeldustega.
- Kõik soovitusel pesuvahendite kohta kehtivad ainult valitavate temperatuuridega programmide puhul.



Kasutage ainult pesumasinatele sobivaid pesuaineid, pehmeid ja lisaineid.
Ärge kasutage seebipulbrit.

Pesuvahendi koguse reguleerimine

Kasutatava pesuvahendi hulk oleneb pestavate esemete kogusest, määrdumisastmest ja veekaredusest.

- Ärge ületage pesuvahendi pakendil olevaid soovituslikke koguseid, et vältida liigse vahu tekkimist ja loputamisprobleeme ning säästa raha ja keskkonda.
- Kasutage vähem määrdunud pesu jaoks väiksemas koguses pesuainet.

Pesupehmedaja kasutamine

Valage pesupehmedaja pesuvahendi sahtli pesupehmedaja lahtrisse.

- Ärge kasutage pesupehmedajat lubatud rohkem (tähis >max<).
- Kui pehmedaja ei ole vedel, lahjendage seda veega enne pehmedaja lahtrisse valamist.




HOIATUS

Ärge kasutage vedelaid pesuaineid ega muid puhastavate omadustega materjale, välja arvatud juhul, kui need on mõeldud kasutamiseks pesumasinate pesu pehmedamiseks.

Vedelate pesuvahendite kasutamine

Kui tootega on kaasas vedela pesuvahendi tarvik

- Kui soovite kasutada vedelat pesuvahendit, vajutage tarvikule ja pöörake see õigesse asendisse. Alla langev osa toimib vedela pesuvahendi tõkkena.
- Puhastage veega tarvikut eemaldamata või eemaldage vajadusel tarvik. Ärge unustage tarvikut pärast puhastamist põhipesuvahendi lahtrisse (lahter nr „2“).
- Pesupulbri kasutamisel peaks tarvik olema üles tõstetud. Ventilator, mida selles asendis näete, segab pesupulbrit ja aitab sellel lahustuda.

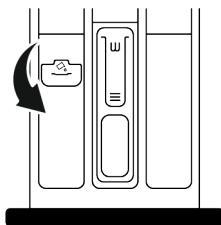

Pesugeeli või -tablettide kasutamine

- Kui pesuvahend on vedel ja tootel pole vedela pesuvahendi lahtrit, valage pesugeel põhipesuvahendi sahtlisse siis, kui masin tõmbab esimest korda vett sisse. Kui tootel on vedela pesuvahendi sahtel, täitke see enne pesuprogrammi käivitamist pesuvahendiga.
- Kui pesugeel on tiheda konsistentsiga või kapslis, pange see enne pesuprogrammi käivitamist otse trumlisse.
- Asetage pesutablett põhipesu lahtrisse (lahter nr 2) või enne pesuprogrammi käivitamist otse trumlisse.

Tärgeldusvahendi kasutamine

- Nii vedel kui ka pulbriline tärgeldusaine ja riidevärv pannakse pesupehmendaja lahtrisse.
- Ärge kasutage ühe ja sama pesutsükli ajal korraga nii pesupehmendajat kui ka tärgeldusvahendit.
- Pärast tärgeldusvahendi kasutamist pühkige toote sisepindu puhta niiske lapiga.

Katlakivi eemaldaja kasutamine

- Kasutage ainult pesumasinatele mõeldud katlakivi eemaldajat.

Pesuvalgendi ja värvieemaldajate kasutamine

- Valige eelpesuga programm ja lisage pesuvalgendi eelpesu alguses. Ärge pange pesuvahendit eelpesuvahendi

lahtrisse. Teine võimalus on valida lisaloputusega programm ja lisada pesuvalgendi põhipesuvahendi sahtli kaudu sel ajal, kui toode võtab sisse esimest loputusvett.

- Ärge segage pesuvalgendit ja pesuvahendit ning ärge kasutage neid koos.
- Kuna pesuvalgendi võib põhjustada ärritust, kasutage seda ainult väikestes kogustes (1/2 tassitäit – umbes 50 ml) ja loputage pesu korralikult.
- Ärge valage valgendit pestavatele esemetele.
- Ärge kasutage pesuvalgendit värviliste riidetega.
- Hapnikupõhiste värvieemaldite kasutamisel valige madala temperatuuriga pesuprogramm.
- Hapnikupõhist värvieemaldit saab kasutada koos pesuvahendiga. Kui aga selle viskoossus ei ole sama mis pesuvahendil, asetage pesuvahend esmalt lahtrisse nr „2” pesuvahendi sahtlisse ja oodake, kuni toode vee sissevõtmise ajal pesuvahendi maha loputab. Lisage värvieemaldi samasse lahtrisse samal ajal, kui masin võtab vett sisse.

5.7 Näpunäiteid pesu pesemiseks

	Rõivad			
	Heledates toonides ja valge pesu	Värviline pesu	Musta värvi või tumedates toonides pesu	Õrn materjal, villane, siid
	(Soovitav temperatuurivahemik vastavalt määrdumisastmele: 40–90 °C)	(Soovitav temperatuurivahemik vastavalt määrdumisastmele: jahe -40 °C)	(Soovitav temperatuurivahemik vastavalt määrdumisastmele : jahe -40 °C)	(Soovitav temperatuurivahemik vastavalt määrdumisastmel e: jahe -30 °C)

Määrdumisaste	Tugevalt määrdunud (Raskesti eemaldatavad plekid: nt rohu-, kohvi-, puuvillja- ja vereplekid)	Võimalik, et plekke tuleb enne pesu töödelda või kasutada eelpesu. Valgele pesule mõeldud pulbrilisi ja vedelaid pesuvahendeid võib kasutada tugevalt määrdunud pesu puhul soovitatavas koguses. Savi- ja mullaplekide ning pleegitusainete suhtes tundlike plekkide eemaldamiseks on soovitatav kasutada pulbrilisi pesuvahendeid.	Värvilisele pesule mõeldud pulbrilisi ja vedelaid pesuvahendeid võib kasutada tugevalt määrdunud pesu puhul soovitatavas koguses. Savi- ja mullaplekide ning pleegitusainete suhtes tundlike plekkide eemaldamiseks on soovitatav kasutada pulbrilisi pesuvahendeid. Kasutada tohib pesuvahendeid, mis ei sisalda värvieemaldit.	Värvilisele ja mustades/ tumedates toonides pesule sobivaid vedelaid pesuvahendeid võib kasutada tugevalt määrdunud pesu puhul soovitatavas koguses.	Eelistage õrna pesu jaoks toodetud vedelaid pesuvahendeid. Villaseid ja siidist riideid tuleb pesta spetsiaalse villapesuvahendiga.
	Mõõdukalt määrdunud (näiteks kraele ja mansettidele jäänud plekid)	Valgele pesule mõeldud pulbrilisi ja vedelaid pesuvahendeid võib kasutada mõõdukalt määrdunud pesu puhul soovitatavas koguses.	Värvilisele pesule mõeldud pulbrilisi ja vedelaid pesuvahendeid võib kasutada mõõdukalt määrdunud pesu puhul soovitatavas koguses. Kasutada tohib pesuvahendeid, mis ei sisalda värvieemaldit.	Värvilisele ja mustades/ tumedates toonides pesule sobivaid vedelaid pesuvahendeid võib kasutada mõõdukalt määrdunud pesu puhul soovitatavas koguses.	Eelistage õrna pesu jaoks toodetud vedelaid pesuvahendeid. Villaseid ja siidist riideid tuleb pesta spetsiaalse villapesuvahendiga.
	Kergelt määrdunud (silmaga nähtavaid plekke pole)	Valgele pesule mõeldud pulbrilisi ja vedelaid pesuvahendeid võib kasutada kergelt määrdunud pesu puhul.	Värvilisele pesule mõeldud pulbrilisi ja vedelaid pesuvahendeid võib kasutada kergelt määrdunud pesu puhul soovitatavas koguses. Kasutada tohib pesuvahendeid, mis ei sisalda värvieemaldit.	Värvilisele ja mustades/ tumedates toonides pesule sobivaid vedelaid pesuvahendeid võib kasutada kergelt määrdunud pesu puhul soovitatavas koguses.	Eelistage õrna pesu jaoks toodetud vedelaid pesuvahendeid. Villaseid ja siidist riideid tuleb pesta spetsiaalse villapesuvahendiga.

5.8 Kuvatud programmi tööaeg

Programmi tööaeg kuvatakse programmi valimisel seadme ekraanil. Programmi tööaega reguleeritakse programmi töötamise ajal automaatselt olenevalt pestavate esemete kogusest, vahu tasemest, pesukoguse tasakaalustatusest, voolukõikumistest, veesurvest ja programmiseadistustest.

ERIJUHTUM. Puuvillaste esemete pesuprogrammi ja puuvillaste esemete säästliku pesuprogrammi alguses


kuvatakse ekraanile poole koguse esemete pesemisaeg. See on kõige tavalisem. Pärast programmi käivitamist kuvatakse 20-25 minuti pärast tegelik programmi tööaeg. Juhul kui tuvastatud pesukogus on rohkem kui pool, reguleeritakse pesuprogrammi automaatselt vastavaks ja programmi tööaega suurendatakse automaatselt. Seda muutust saate jälgida ekraanil.

6 Toote kasutamine




Lugege kõigepealt jaotist „Ohutusjuhised“!

6.1 Juhtpaneel

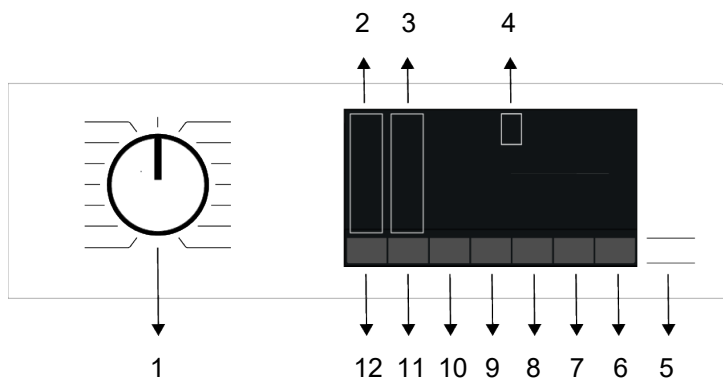

- | | |
|--|-----------------------------------|
| 1 Programmi valimise nupp | 2 Temperatuuritaseme tuled |
| 3 Tsentrifuugimistaseme märgutuled | 4 Ekraan |
| 5 Nupp Start/Paus | 6 Eemalt juhtimise nupp |
| 7 Lõpukellaaja seadistusnupp | 8 Lisafunktsiooni nupp 3 |
| 9 Lisafunktsiooni nupp 2 | 10 Lisafunktsiooni nupp 1 |
| 11 Tsentrifuugimiskiiruse reguleerimise nupp | 12 Temperatuuri seadistamise nupp |

6.2 Ekraanil olevad sümbolid

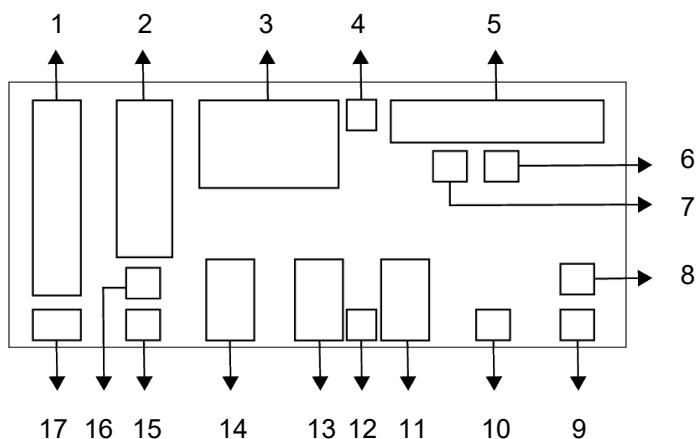

- | | |
|---------------------------------|--|
| 1 Temperatuurinäidik | 2 Tsentrifuugimiskiiruse näidik |
| 3 Kestvuse teave | 4 Ukseluku aktiveerimise sümbol |
| 5 Programmi jälgimise näidik | 6 Vee puudumise näidik |
| 7 Eeme lisamise näidik | 8 Bluetoothi ühenduse näidik |
| 9 Eemalt juhtimise näidik | 10 Viitajaga käivituse lubamise näidik |
| 11 Lisafunktsioonide näidikud 3 | 12 Lapseluku aktiveerimise sümbol |
| 13 Lisafunktsioonide näidikud 2 | 14 Lisafunktsioonide näidikud 1 |
| 15 Mitte tsentrifuugida näidik | 16 Loputusvee paaki jätmise näidik |
| 17 Külma vee näidik | |



Selles jaotises masina kirjeldamiseks kasutatud joonised on skemaatilised ja ei pruugi täpselt vastata teie masina omadustele.

6.3 Programmide ja kulu tabel

						Lisafunktsioonid					
Programm	Temperatuur (°C)	Maksimaalne mahutavus (kg)	Veekulu (l)	Energiakulu (kWh)	Maksimaalne kiirus	Aurutamine	Lisaloputus	Kiirpesu	Eelpesu	kortsumisvastane+	Temperatuur (°C)
Cottons	90	8	96	2,40	1200	•	•	•	•	•	Külm - 90
	60	8	96	1,80	1200	•	•	•	•	•	Külm - 90
	40	8	95	0,97	1200	•	•	•	•	•	Külm - 90
Eco 40-60	40***	8	63	0,715	1200						40-60
	40***	4	39	0,435	1200						40-60
	40***	2	29	0,225	1200						40-60
Synthetics	60	3	70	1,35	1200	•	•	•	•	•	Külm - 60
	40	3	68	0,85	1200	•	•	•	•	•	Külm - 60
Xpress / Super Xpress	90	8	66	2,20	1200	•	•	•		•	Külm - 90
	60	8	66	1,20	1200	•	•	•		•	Külm - 90
	30	8	66	0,20	1200	•	•	•		•	Külm - 90
Xpress / Super Xpress + Fast+	30	2	40	0,15	1200	•	•	•		•	Külm - 90
Woollens / Hand Wash	40	1,5	55	0,50	1200		•				Külm - 40
Dark Care / Jeans	40	3,5	55	0,50	1200	•	*	•	•	•	Külm - 40
Outdoor / Sports	40	3,5	83	0,85	1200				•		Külm - 40
StainExpert	60	4	85	1,55	1200			•	•		30-60
Hygiene+	60	2	89	1,31	1000	*	*				Külm - 60
Duvet / Down Wear	60	3	70	1,40	800	•	•				Külm - 60
Shirts	90	8	125	2,90	1200	*	•	•	•	•	20-90
SteamTherapy		1	1,1	0,11	-	*					-
Trumli puhastus	90	-	76	2,33	600	*					90
Downloaded Program *****											
Segu	40	3,5	85	0,90	800		•	•	•	•	Külm - 40
Delikaatne	40	3,5	55	0,72	800	•					Külm - 40
Naistepesu	30	1	64	0,29	600	*					Külm - 30
Pehmed mänguasjad	40	2	53	0,60	600	*					Külm - 40
Saunalina	60	3	109	1,45	1000	*		•			Külm - 60

• : Valitav.

* : Automaatselt valitav, ei saa tühistada. *** :

Programm Eco 40-60 on katseprogramm vastavalt 40 °C temperatuurivalikule, EL määrusele EU / 2019/2014 ja standardile EN 60456: 2016 /A11: 2020.

***** : Neid programme saab kasutada rakendusega HomeWhiz. Ühenduse tõttu võib elektritarve suureneda.

- : Maksimumkogust vt programmi kirjeldusest.



Enne esimest kasutuskorda lugege läbi juhendi jaotis Palgaldus. Olenevalt pesumasina mudelist võivad tabelis kirjeldatud lisafunktsioonid erineda. Vee- ja energiakulu võib varieeruda olenevalt veesurve, vee karedusest ja temperatuurist, ümbritseva keskkonna temperatuurist, pesu kogusest ja tüübist, lisafunktsioonide kasutamisest, tsentrifuugimiskiirusest ja pingeõikumistest. Tootjaettevõtte võib muuta lisafunktsioonide valikut. Uusi valikuid saab lisada või muuta. Tsentrifuugimiskiirus võib vastavalt programmile varieeruda, kuid see ei ületa kunagi masina maksimaalset tsentrifuugimiskiirust. Mürä ja niiskuse hulk varieerub sõltuvalt tsentrifuugimise kiirusest; kui tsentrifuugimise ajal valitakse suurem tsentrifuugimiskiirus, on pesu niiskus väiksem, kuid programmi lõpus kostab suurem müra.



Valitud programmi pesemiskestust näete pesumasina ekraanil. Sõltuvalt masinasse pandud pestavate esemete kogusest võib ekraanile kuvatud pesutsükli tööaeg tegelikust pesutsükli tööajast 1-1,5 tunni võrra erineda. Pesutsükli kestust värskendatakse pesemise alguses. Valige alati võimalikult madal temperatuur. Energiatarbimise osas on kõige tõhusamad programmid tavaliselt need, mis pesevad madalal temperatuuril pikka aega.

Kuluväärtused (ET)

	Temperatuuri valimine (°C)	Pöörlemiskiirus (tsükleid minutis)	Mahutavus (kg)	Programmi kestus (t.min.)	Energiakulu (kWh tsükli kohta)	Veekulu (liitrit tsükli kohta)	Pesu temperatuur (°C)	Jääkniiskus (%)
Eco 40-60	40	1200	8,0	03:38	0,715	63,0	33	52,0
	40	1200	4	02:47	0,435	39,0	30	52,5
	40	1200	2	02:47	0,225	29,0	23	57,0
Cottons	20	1200	8	03:30	0,600	95,0	20	53,9
Cottons	60	1200	8	03:30	1,800	96,0	60	53,9
Synthetics	40	1200	3	02:15	0,850	68,0	40	40
Xpress / Super Xpress	30	1200	8	00:28	0,200	66,0	23	62

Muude programmide peale säästurežiimi 40-60 kuluväärtused on vaid ligikaudsed.


6.4 Programmi valimine

1. Valige pesu tüüpi, kogust ja määrdumisastet arvestades sobiv programm, juhindudes allpool olevast „Programmide ja kulu tabelist“.



Programmid kasutavad vastavale kangatüübile sobivat suurimat tsentrifuugimiskiirust. Programmi valimisel arvestage alati kangatüüpi, värvust, määrdumisastet ja lubatud veetemperatuuri.

2. Valige programmilüliti abil soovitud programm.

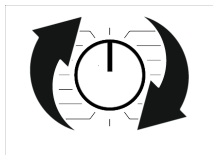

6.5 Programmid

• Programmiga Eco 40-60 saate pesta tavapäraselt määratud puuvillast pesu, mis on määratud koospesuks 40 °C või 60 °C juures. See programm on standardne katseprogramm vastavalt EL-i keskkonnasõbraliku disaini ja energiamärgistuse eeskirjadele. Kuigi see programm peseb kauem kui teised pesuprogrammid, on see energia- ja veekulu seisukohalt tõhusam. Tegelik veetemperatuur võib esitatud pesutemperatuurist erineda. Kui panete seadmesse vähem pesu (näiteks poole kogusest või vähem), võivad programmi etappide tööajad automaatselt lüheneda. Nii oleks energia- ja veekulu tunduvalt väiksem.

• See programm on mõeldud vastupidavate puuvillaste esemete (linad, voodiriided, käterätid, hommikumantlid, aluspesu jms) pesemiseks. Kui vajutate kiirpesufunktsiooni nuppu, on programmi kestus märgatavalt väiksem, aga tõhus pesemistulemus tagatakse intensiivsete pesemisliigutustega. Kui te ei vajuta kiirpesufunktsiooni nuppu, tagatakse tõhus pesemis- ja loputustulemus teie tugevalt määratud pesu jaoks.

• Selle programmiga saate pesta näiteks särke, pluuse, sünteetika ja puuvilla segust kangaid jne. Kui vajutate kiirpesufunktsiooni nuppu, lüheneb programmi kestus oluliselt ja teie mitte nii määratud pesule tagatakse tõhus pesu. Kui te ei vajuta kiirpesufunktsiooni nuppu,

tagatakse tõhus pesemis- ja loputustulemus teie tugevalt määratud pesu jaoks.

• Kasutage villaste/õrnade esemete pesemiseks. Valige vastavalt riideesemete etikettidele sobiv pesutemperatuur. Riideid pestakse väga õrnade liigutustega, et neid mitte kahjustada.

• Auruetapp programmi alguses leotab mustuse riiete küljest lahti. See pika tööajaga programm sobib erinevate esemete (beebiriided, voodilina, aluspesu jms puuvillased esemed) allergiavastaseks ja hügieeniliseks pesemiseks kõrgetel temperatuuridel intensiivse ja pika pesutsükliga. Auruetapp programmi alguses, pikk kuumutus ja lisaloputus tagavad eriti hügieenilise tulemuse.

• Programmi katsetas Ühendkuningriigi organisatsioon The British Allergy Foundation (Allergy UK) temperatuuril 60 °C ning tõendas selle tulemuslikkust bakterite ja hallituse kõrvaldamisel.



Allergy UK on British Allergy Association'i kaubamärk. Seal of Approval on mõeldud suunisena neile, kes vajavad soovist toote kohta, et seonduv toode piirab / vähendab / kõrvaldab allergeene või vähendab nende kogust oluliselt keskkonnas, kus on allergik. Selle eesmärk on tagada kindlustunne, et need tooted on teaduslikult katsetatud või läbi vaadatud, et tagada mõõdetavad tulemused.

• See programm on mõeldud jakkide, vestide, jopede jms sulgi sisaldavate esemete pesemiseks, kui nende etiketil on märges „masinpestav“. Spetsiaalne tsentrifuugimine tagab, et vesi jõuab sulgede vahel olevatesse lõhedesse.

- Saate seda programmi kasutada rõivast/ masinast vee eemaldamiseks.
- Kasutamiseks juhul, kui soovite eraldi loputada või kasutada tärglist.
- Selle programmi abil saate vähendada väikese koguse puuvillase, sünteetilise või segatud pesu kortsusid ja triikimisaegu.
- Selle programmiga saab koos pesta puuvillasest, sünteetilisest ja segamaterjalist särke. Riietesse ei jää nii palju kortse. Kortsude vähendamise funktsiooni tõhustamiseks kasutatakse programmi lõpus auru. Spetsiaalne tsentrifuugimine ja programmi lõpus kasutatav aur vähendab kortse päevasärkidel. Kiirpesufunktsiooni valimisel töödeldakse pestavaid esemeid eelnevalt.
- Kandke eelnevaks töötlemiseks vajalikud kemikaalid otse rõivastele või lisage need koos pesuvahendiga pesupulbrilahtrisse. Nii saavutate sama tulemuse kui tavapesuga, kuid palju lühema aja jooksul. Päevasärkide eluiga pikeneb. Ärge kasutage eelpesuvahendit, kui kavatsete kasutada oma masina viivitusfunktsiooni. Eelpesuaine võib teie riiete valguda ja põhjustada plekke.
- ** Soovitav on kasutada tsükli mitte rohkem kui kuue sargiga, et minimeerida seda tsükli kasutamises särkide kortsumist. Kui pestakse rohkem kui kuut särki, võib tsükli lõpus esineda erinevusi särkide kortsude tasemes ja niiskuses.

• Selle programmiga saate lühikese ajaga pesta vähemäärdund või plekkideta riideid, kuid mitte käterätikuid või raskeid puuvillaseid riideid. Kui valitud on kiirpesu funktsioon, saab programmi kestust

vähendada kuni 14 minutini. Kui valitud on kiirpesu funktsioon, on pestava pesu maksimaalne kaal 2 (kaks) kg.

• Kasutage seda programmi tumedat värvi riiete ja teksaste värvi kaitsmiseks. Spetsiaalsed trumli liigutused ka madalal temperatuuril tagavad soovitud tulemuse. Tumedat värvi esemete pesemiseks on soovitatav kasutada vedelpesuvahendit või villašampooni. Ärge peske õrnu esemeid, mis sisaldavad villa vms.

• Seda programmi saate kasutada sorteerimata puuvillasest ja sünteetilisest materjalist pesu pesemiseks.

• Selle programmiga saate pesta õrna pesu, näiteks puuvillast / sünteetika segust kudumeid või sukkooteid. Esemeid pestakse õrnemate pesemisliigutustega. Peske riideid, mille värvi soovite säilitada, kas temperatuuril 20 °C või valige külma veega pesemine.

• See programm on mõeldud õrnast materjalist esemete pesemiseks, mida pestakse käsitsi, ja naiste õrna aluspesu pesemiseks. Väikseid esemeid tuleb pesta pesukotis. Haagid, nõöbid jms tuleb kinni panna ja tõmbelukud tuleb kinni tõmmata.

• See programm on mõeldud spordi- ja üleriie pesemiseks, mis on valmistatud puuvillase ja sünteetilise materjali segust ja millel on vetthülglavad katte (nagu gore-tex jms). Tänu spetsiaalsetele pöörlevatele liigutustele pestakse rõivaid õrnalt.

• Seadmel on spetsiaalne plekiprogramm, mis võimaldab eemaldada eri tüüpi plekke kõige tulemuslikumal viisil. Kasutage seda programmi ainult vastupidavate puuvillaste esemete pesemiseks, mis ei anna värvi. Ärge peske selle programmiga õrnast materjalist ja värvi andvaid esemeid. Enne

pesemist kontrollige kindlasti rõivasilte (soovitatav puuvilla särkide, pükste, lühikeste pükste, t-särkide, beebiriiete, pidžaamade, põlled, lauanõude, voodilinate, tekikottide, padjapüüride, vannitoa-/rannarätikute, käterätikute, sokkide ja puuvillast aluspesu puhul, kui nad sobivad pesemiseks kõrge temperatuuril ja pika programmiga). Automaatseplekieemaldusprogrammi abil saate pesta 24 tüüpi plekke, mis on jagatud kolme erinevasse rühma vastavalt funktsiooni „Kiirpesu“ valikule. Näete plekigruppe, mida saab valida nupuga „Kiirpesu“ Sõltuvalt valitud plekigrupist valitakse spetsiaalne pesuprogramm, mille jaoks muudetakse vastavalt loputusvee jätmise kestus, pesemistoimingud, pesemise ja loputamise kestus.

Altpoolt leiате plekigrupid, mida saab valida nupu „Kiirpesu“ abil.

Kui kiirpesufunktsioon ei ole valitud

Higi, kraemustus, toit, majonees, salatikaste, meik, masinaõli, imikutoit.

Kui nuppu „Kiirpesu“ vajutatakse üks kord

Veri, šokolaad, puding, rohi, muda, munad, või, karri.

Kui nuppu „Kiirpesu“ vajutatakse kaks korda

Tee, kohv, mahl, ketšup, punane vein, koola, moos, süsi

1. Valige plekieemaldusprogramm.
2. Valige plekk, mille soovite eemaldada vastavalt üaltoodud rühmale ja valige see kiirpesufunktsiooni nupu abil.
3. Lugege hoolikalt riideesemete etiketti ja veenduge, et olete valinud õige temperatuuri ja tsentrifuugimiskiiruse.

See on eriprogramm, mis võimaldab teil soovi korral alla laadida eri programme. Alguses on olemas programm, mida saate vaikimisi rakenduse HomeWhiz abil vaadata. Siiski saate rakenduse HomeWhiz

abil valida programmi eelmääratud programmikogumist ning seejärel seda muuta ja kasutada.



Kui soovite kasutada funktsioone HomeWhiz ja kaugjuhtimine, peate tegema valiku Allalaaditud programm. Üksikasjalikku teavet vt jaotisest Funktsioonid HomeWhiz ja kaugjuhtimine.

•

Pehmeid mänguasju tuleb pesta õrna programmiga, sest need sisaldavad õrnu kangaid ning kiude ja tarvikuid. Tänu õrnadele pesemisliigutustele ja pöörlemisprofiilile kaitseb pehmete mänguasjade programm mänguasju pesemise ajal. Soovitame kasutada vedelat pesuvahendit.



Kõvade pindadega hapraid mänguasju ei tohi mingil juhul pesta. Mänguasju ei tohi pesta koos rõivastega, sest need võivad pesu kahjustada.

•

Kasutage seda programmi tugeva puuvillase pesu, nt käterätikute pesemiseks. Asetage käterätikud masinasse nii, et need ei puutuks vastu ukse tihendit või klaasi.

6.6 Temperatuuri valimine



Iga uue programmi valimisel kuvatakse ekraanile valitud programmi soovituslik temperatuur. Võimalik, et soovitud temperatuuriväärtus ei ole praeguse programmi jaoks maksimaalne valitav temperatuur.

Temperatuuri muutmiseks vajutage temperatuuri reguleerimise nuppu. Temperatuur väheneb järk-järgult.




Muudatusi ei saa teha programmides, kus temperatuuri reguleerimine pole lubatud.

Temperatuuri saate muuta ka pärast pesemise algust. Muutmine on võimalik ainult siis, kui pesuprogrammi etapid seda lubavad.



Kui valite kerides külmpesu ja vajutate uuesti temperatuurinuppu, ilmub ekraanile valitud programmi soovituslik maksimaalne temperatuur. Temperatuuri vähendamiseks vajutage temperatuuri reguleerimise nuppu.

6.7 Tsentrifuugimiskiiruse valimine

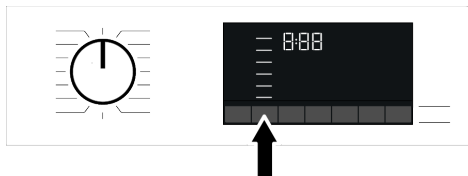

Iga uue programmi valimisel kuvatakse ekraanile valitud programmi soovituslik tsentrifuugimiskiirus. Võimalik, et soovitud tsentrifuugimiskiiruse väärtus ei ole praeguse programmi jaoks maksimaalne valitav tsentrifuugimiskiirus. Tsentrifuugimiskiiruse muutmiseks vajutage tsentrifuugimiskiiruse reguleerimise nuppu. Tsentrifuugimiskiirus väheneb järk-järgult.

Seejärel ilmuvad ekraanile olenevalt toote mudelist valikud Rinse Hold (Loputusvee jätmine paaki)  ja No Spin

(Tsentrifuugimiseta) .

Kui te ei soovi pesu kohe pärast programmi lõpetamist välja võtta, siis võite kasutada funktsiooni Loputusvee jätmine ja vältida pesu kortsumist veest tühjendatud masinas.

See funktsioon hoiab pesu viimases loputusvees. Kui soovite pesu tsentrifuugida pärast loputusvee paaki jätmise funktsiooni:

1. Reguleerige tsentrifuugimiskiirust;
2. Vajutage käivitus-/seiskamisnuppu. Programm jätkub. Masin laseb vee välja ja tsentrifuugib pesu.

Kui soovite programmi lõpus lasta vee välja ilma tsentrifuugimiseta, kasutage funktsiooni No Spin (Tsentrifuugimiseta).



Muudatusi ei saa teha programmides, kus tsentrifuugimiskiiruse reguleerimine pole lubatud.


Tsentrifuugimiskiirust saate pärast pesemise algust muuta, kui pesuprogrammi etapid seda lubavad. Muutmine pole võimalik, kui pesuprogrammi etapid seda ei luba.

Leotamine

Kui te ei soovi pesu kohe pärast programmi lõpetamist välja võtta, siis võite kasutada loputusvee paaki jätmise funktsiooni ja hoida pesu viimases loputusvees, et vältida pesu kortsumist veest tühjendatud masinas. Nii ei lähe need kortsu. Kui soovite vee eemaldada ilma tsentrifuugimiseta, vajutage pärast seda protsessi nuppu Start/Pause (Alusta/Paus). Programm jätkub ja lõpeb pärast vee väljalaskmist.

Kui soovite loputusvette jäänud pesu tsentrifuugida, reguleerige tsentrifuugimiskiirust ja vajutage nuppu Start/Pause (Alusta/Paus). Programm jätkub. Vesi lastakse välja, pesu tsentrifuugitakse ja programm viiakse lõpule.

6.8 Lisafunktsioonide valimine

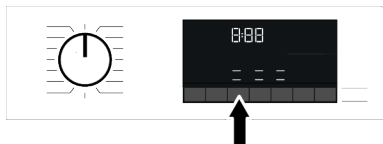

Valige enne programmi käivitamist soovitud lisafunktsioonid. Iga programmi valimisel süttivad lisafunktsiooni tähise ikoonid, mis on koos selle programmiga valitud.



Kui vajutate lisafunktsiooni nupule, mida ei saa hetkel aktiveeritud programmiga valida, kostab pesumasinas hoiatussignaal. Mõningaid funktsioone ei saa korraga valida. Kui enne masina käivitamist valitakse lisafunktsioon, mis ei saa töötada koos varem valitud lisafunktsiooniga, siis varem valitud funktsioon tühistatakse ja aktiivseks jääb ainult viimasena valitud lisafunktsioon. Näiteks kui soovite valida kõigepealt lisavee ja seejärel kiirpesu, siis lisavei tühistatakse ja kiirpesu jääb valituks.

Lisafunktsiooni, mis programmiga ei ühildu, ei saa valida. (Vt "Programmide ja kulu tabel") Mõnedel programmidel on lisafunktsioonid, mida tuleb kasutada samaaegselt. Neid funktsioone ei saa tühistada. Abifunktsiooni raami ei valgustata, valgustatakse ainult sisemine ala.

6.8.1 Lisafunktsioonid

- Eelpesu tasub kasutada ainult tugevalt määratud pesu puhul. Eelpesufunktsiooni kasutamata jätmisel säästate energiat, vett, pesuvahendit ja aega.

- Pärast programmi valimist võite vajutada kiirpesufunktsiooni nuppu, et programmi tööaega lühendada. Mõne programmi

puhul saab programmi tööaega lühendada rohkem kui poole võrra. Vaatamata sellele on saavutatud pesemistulemused tänu muudetud algoritmile head.

Kuigi see on iga programmi puhul erinev, lüheneb programmi kestus teatud tasemeni, kui vajutate kiirpesu nuppu üks kord. Kui vajutate sama nuppu teist korda, väheneb see miinimumkestuseni.

Parema pesutulemuse tagamiseks ärge kasutage kiirpesu reguleerimisnuppu tugevalt määratud pesu pesemisel.

Kasutage kiirpesu nuppu kergelt ja õrnalt määratud pesu jaoks ning lühendage programmi kestust.

-

See funktsioon aitab vähendada teie puuvillaste, sünteetiliste ja segarõivaste kortse, lühendada triikimisaega ja eemaldada mustuse pehmendamise teel.

* Tingimustes, kus aurufunktsiooni rakendatakse programmi lõpus, võib teie pesu pesemise lõppedes olla soojem. Seda eeldatakse programmi töötingimuste piires.



Kui aktiveerite aurufunktsiooni, ärge kasutage vedelat pesuvahendit, kui pole vedelikumahutit või vedela pesuvahendi doseerimisfunktsiooni. Pesule võivad jääda plekid.



Seda lisafunktsiooninuppu saate kasutada toote ühendamiseks nutiseadmetega. Üksikasjalikku teavet vt jaotisest Funktsioonid HomeWhiz ja kaugjuhtimine.

-

Seda abifunktsiooni saab kasutada ainult puuvillase ja sünteetika programmide puhul koos rakendusega HomeWhiz. Kui see lisafunktsioon on aktiveeritud, saate programmi lisada kuni 5 lisaloputusastet. Saate valida ja kasutada mõnda lisafunktsiooni isegi kui neid teie tootel ei

ole. Võite suurendada ja vähendada puuvillase ning sünteetika programmide aega turvalises vahemikus.



Kui on valitud spetsiaalse programmi lisafunktsioon, on pesemisprotsess ja energiatarbimine märgitud väärtusest erinevad.

6.8.2 3-sekundilise funktsiooninupu vajutusega valitud funktsioonid/programmid



Programmi valimiseks vajutage ja hoidke vastavat lisafunktsiooni nuppu 3 sekundit all. Nõutava hügieeni tagamiseks puhastage trumlit regulaarselt (üks kord 1–2 kuu jooksul). Enne programmi kasutatakse auru, et trumlis olevad jäägid pehmeneda. Lülitage programm sisse, kui masin on täiesti tühi. Tõhusamate tulemuste saamiseks kasutage pesumasinatele sobivaid katlakivivastaseid materjale (trumlipuhastusmaterjale) pesuainelahtrisse nr „2”. Pärast programmi lõppu jätke laadimisuks pooleldi suletuks, et masina sisemus saaks kuivada.



Tegu ei ole pesuprogrammiga. See on hooldusprogramm. Ärge lülitage seda programmi sisse, kui masin pole tühi. Kui proovite seda kasutada, tunneb masin automaatselt, et sees on laadung, ja võib programmi lõpetada või jätkata vastavalt teie masina mudelile. Programmi jätkamisel ei saavutata tõhusat pesemist.



See funktsioon valitakse pärast seda, kui asjakohase lisafunktsiooni nuppu on vajutatud 3 sekundit ja vilkuma hakkab vastava programmietapi märgutuli. Funktsiooni valimisel pöörleb trummel kuni

8 tundi, et vältida pestavate esemete kortsumist programmi lõpus. Saate programmi igal ajal selle 8 tunni jooksul tühistada ja pesu välja võtta. Funktsiooni tühistamiseks vajutage funktsiooni valimise nuppu või masina sisse-välja lülitamise nuppu. Programmi märgutuli põleb kuni funktsiooni tühistamiseni või vastava etapi lõppemiseni. Kui funktsiooni ei tühistata, aktiveeritakse see ka järgmistel pesutsüklitel.



Seda funktsiooni saab valida, vajutades vastavat abifunktsiooni nuppu ja hoides seda 3 sekundit all.

See funktsioon võimaldab tootel teha lisaks põhipesu järel tehtud loputusele veel täiendava loputuse. Tänu sellele väheneb õrna naha korral (beebid, allergiline nahk jne) nahaärrituse oht, sest suurem osa pesemisvahendi jääkidest uhutakse pesust välja.



Kasutage lapseluku funktsiooni, et lapsed ei saaks masinat kasutada. Nii ei saa nad töötavat programmi muuta.



Kui lapselukk on sisse lülitatud, saate masinat sisse-/väljalülitusnupust sisse ja välja lülitada. Kui lülitate masina uuesti sisse, jätkub programm sealt, kus see pooleli jäi. Kui lapselukk on sisse lülitatud, kõlab nuppude vajutamisel hoiatussignaal. Hoiatussignaal tühistatakse, kui nuppe vajutatakse järgemööda viis korda.

Lapseluku sisselülitamine

Vajutage ja hoidke 3 sekundit all vastava lisafunktsiooni nuppu. Pärast ekraanil kuvatava aja pöördarvestuse „3-2-1” lõppu kuvatakse ekraanile lapseluku tähis. Selle hoiatuse kuvamisel võite abifunktsiooni nupu 3 vabastada.

Lapseluku väljalülitamine

Vajutage ja hoidke 3 sekundit all vastava lisafunktsiooni nuppu. Pärast ekraanil kuvatava aja pöördarvestuse „3-2-1“ lõppu kaob lapseluku tähis ekraanilt.



Oma masina paarimiseks nutiseadmega saate kasutada Bluetooth-ühenduse funktsiooni. Nii saate nutiseadme abil teavet oma seadme kohta ja seda juhtida.

Bluetooth-ühenduse aktiveerimine.

Vajutage ja hoidke 3 sekundit all kaugjuhtimisfunktsiooni nuppu. Kuvatakse pöördloendus „3-2-1“ ja seejärel kuvatakse ekraanil Bluetooth'i ikoon. Vabastage kaugjuhtimisfunktsiooni nupp. Bluetoothi ikoon vilgub, kui toodet pairitakse nutiseadmega. Kui ühendus õnnestub, jääb ikoon põlema.

Bluetooth-ühenduse inaktiveerimine.

Vajutage ja hoidke 3 sekundit all kaugjuhtimisfunktsiooni nuppu. Kuvatakse pöördloendus „3-2-1“ ja seejärel kaob Bluetooth's ikoon ekraanilt.



Bluetooth-ühenduse aktiveerimiseks peab rakenduse HomeWhiz esimene seadistus olema lõpule viidud. Pärast seadistamist aktiveerib Bluetooth-ühenduse automaatselt kaugjuhtimisfunktsiooni nupu vajutamine ajal, mil nupp on asendis Laadi alla programm / Kaugjuhtimine.

6.9 Lõpukellaag


Ajanäit

Kui lõpukellaaja funktsioon on valitud, näidatakse programmi käivitumiseni järelejäänud aega tundides (nt 1h, 2h) ja programmi lõpulejäänud aega pärast programmi algust näidatakse tundides ja minutites, näiteks 01:30.




Programmi kestus võib erineda „Programmide ja kulu tabelis“ esitatud väärtustest olenevalt veesurve, vee karedusest ja temperatuurist, ümbritseva keskkonna temperatuurist, pesu kogusest ja tüübist, valitud lisafunktsioonidest ja võrgupinge kõikumistest.

Funktsiooniga Lõppkellaag saab programmi lõpukellaaga määrata kuni 24 tunni kaugusele. Pärast lõpukellaaja nupu vajutamist kuvatakse programmi prognoositav lõpukellaag. Lõpukellaaja määramisel süttib lõppkellaaja näidik.



Lõpukellaaja funktsiooni sisselülitamiseks ja programmi lõpuleviimiseks määratud aja jooksul peate pärast kellaaja reguleerimist vajutama käivitus-/seiskamisnuppu.



Kui soovite lõpukellaaja funktsiooni tühistada, vajutage masina välja- ja sisselülitamiseks sisse-/väljalülitusnuppu.



Kui lõpuaja funktsioon on aktiveeritud lisage pesupulbrilahtrisse nr 2 vedelat pesuvahendit. Pesule võivad jääda plekid

1. Avage pesumasina uks, asetage pesu masinasse ja lisage pesuvahendit vms.
2. Valige pesuprogramm, temperatuur, tsentrifuugimiskiirus ja vajadusel lisafunktsioonid.


3. Lõpukellaaja määramiseks vajutage lõpukellaaja nuppu. Süttivad lõppkellaaja märgutuled.
4. Vajutage käivitus-/seiskamisnuppu. Käivitub aja pöördarvestus.




Lõpukellaaja mahaloendamise ajal võib pesumasinasse pesu juurde panna. Aja pöördarvestuse lõpus lõpukellaaja tähis kaob, käivitub pesutsükkel ja ekraanile ilmub valitud programmi kestus.

6.10 Programmi käivitamine

1. Pesuprogrammi käivitamiseks vajutage käivitus-/seiskamisnuppu.
2. Käivitus-/seiskamisnupu tuli, mis enne ei põlenud, süttib nüüd püsivalt, mis näitab, et programm on käivitatunud.

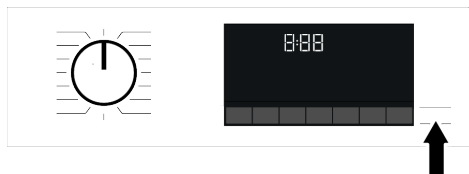

3. Pesumasina uks on lukustatud. Pärast pesumasina ukse lukustumist ilmub ekraanile ukse lukustuse tähis.

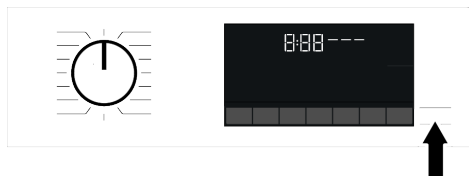

4. Ekraanil kuvatavad programminäidiku märgutuled näitavad praegust programmietappi.

6.11 Pesumasina ukse lukustus

Pesumasina uksele on lukustussüsteem, mis takistab ukse avamist, kui veetase seda ei võimalda.

Pesumasina ukse lukustumisel ilmub ekraanile ukse lukustuse tähis.



Kui valite kaugjuhtimisfunktsiooni, jääb uks lukku. Ukse avamiseks peate kaugkäivituse funktsiooni deaktiveerima, vajutades nuppu Kaugkäivitus või muutes programmi asukohta.

Seadme ukse avamine voolukatkestuse korral:




Elektrikatkestuse korral saate laadimisukse avamiseks kasutada pumba filtri korgi all olevat laadimisukse avariikäepidet.




Vee ülevoolu vältimiseks enne masina ukse avamist veenduge, et masinasse ei jääks vett.

1. Lülitage seade välja ja eemaldage see vooluvõrgust.
2. Avage pumbafiltri kate.

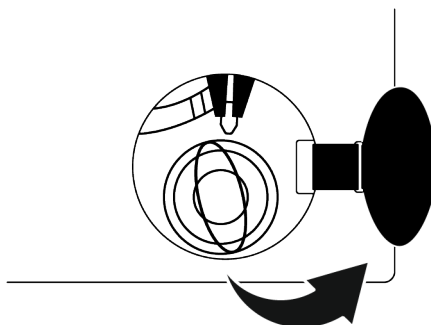


3. Tõmmake laadimisukse hädakäepide tööriistaga alla ja vabastage. Seejärel avage masina uks.
4. Kui masina uks ei avane, korrake eelmist sammu.

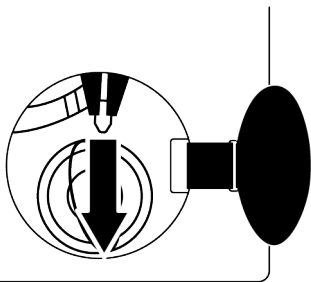


6.12 Valikute muutmine pärast programmi käivitumist

Pesu lisamine pärast programmi käivitumist :

Kui seadme veetase on sobiv, siis nupule Start/Paus vajutamisel ukسلukk inaktiveeritakse ja seadme uks läheb lahti, võimaldades riideid lisada. Ukselukku sümbol ekraanil kustub, kui ukسلukk deaktiveeritakse. Pärast riiete lisamist masinasse pange seadme uks kinni ja vajutage üks kord nuppu Start/ Paus, et pesutsükkel jätkuvalt pooleli jäänud kohast.

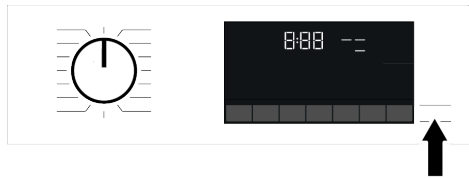


Kui masina veetase ei ole nupu Start/Paus vajutamisel sobiv, ei saa seadme ukسلukk lukku inaktiveerida ja ukسلukku sümbol ekraanil jääb põlema.

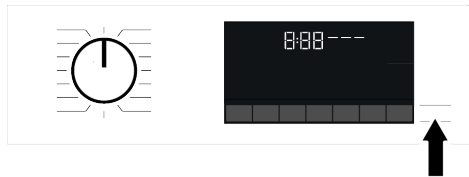

 Kui seadmes oleva vee temperatuur on kõrgem kui 50 °C, ei saa ukسلukku turvalisuse tagamiseks deaktiveerida ka sobiva veetaseme korral.

Pesumasina lülitamine pausirežiimi

Pesumasina lülitamiseks pausirežiimi vajutage käivitus-/seiskamisnuppu. Ekraanil hakkab vilkuma pausirežiimi tähis.

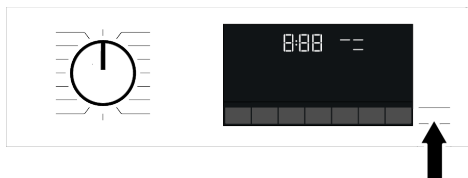

Programmivaliku muutmine pärast programmi käivitumist

Programmi muutmine ei ole praeguse programmi töötamise ajal lubatud. Uue programmi saate valida pärast praeguse programmi lülitamist pausirežiimi.

 Valitud programm käivitub uuesti.

Lisafunktsiooni, kiiruse ja temperatuuri muutmine

Olenevalt programmietapist saate tühistada või sisse lülitada lisafunktsioone. Vt jaotist „Lisafunktsioonide valimine“. Samuti saate muuta kiirust ja temperatuuri. Vt jaotisi „Tsentrifuugimiskiiruse valimine“ ja „Temperatuuri valimine“.

 Pesumasina uks ei avane, kui masinas olev vesi on kuum või veetase ulatub üle ukسلu allääre.

6.13 Programmi tühistamine

Programm tühistatakse, kui programmivalikunupp keeratakse mõnele muule programmile või kui masin programmivalikunupu nupu abil välja ja uuesti sisse lülitatakse.



Kui vajutate programmivalikunupule, kui lapselukk on sisse lülitatud, siis programmi ei tühistata. Esmalt peate tühistama lapseluku. Kui soovite avada pesumasina ust pärast programmi tühistamist, aga see pole võimalik, sest veetase on liiga kõrge, siis keerake programmilüliti vee äravoolu ja tsentrifuugimise programmile ja laske vesi masinast välja.

6.14 Programmi lõpp

Programmi lõpulejõudmisel ilmub ekraanile programmi lõpu tähis.

Kui te ei vajuta 10 minutit ühtki nuppu, siis masin lülitub väljalülitatud režiimi. Ekraan ja kõik näidikud kustuvad.

Kui vajutate sisse-/väljalülitamisnuppu, kuvatakse lõpetatud programmi etapid.

6.15 Funktsioonid HomeWhiz ja kaugjuhtimine

HomeWhiz võimaldab teil oma pesumasinat nutiseadme abil juhtida ja saada teavet masina oleku kohta. HomeWhiz rakendusega saate oma nutiseadet kasutada masinaga erinevate toimingute tegemiseks. Lisaks saate mõnda funktsiooni kasutada ainult HomeWhiz funktsiooniga.

Masina Bluetoothi funktsiooni kasutamiseks peate oma nutiseadme rakenduste poest rakenduse HomeWhiz alla laadima.

Rakenduse installimiseks veenduge, et teie nutiseade oleks Internetiga ühendatud.

Kui kasutate rakendust esimest korda, järgige kasutajakonto registreerimise lõpuleviimiseks ekraanil kuvatavaid juhiseid. Pärast registreerimist saate läbi selle konto kasutada kõiki kodus olevaid HomeWhiz-toega seadmeid.

Teie kontoga seotud seadmete vaatamiseks võite puudutada rakenduse HomeWhiz vahekaarti „Seadmed”. Pärast

rakenduse installimist võimaldab HomeWhiz funktsioon pesumasinal saata teile nutiseadme kaudu koheseid teateid.



Funktsiooni HomeWhiz kasutamiseks peab rakendus olema teie nutiseadmesse installitud ning pesumasin peab olema Bluetoothi kaudu teie nutiseadmega seotud. Kui teie pesumasin ei ole teie nutiseadmega pairitud, töötab see seadmena, millel ei ole funktsiooni HomeWhiz.

Teie seade töötab nutiseadmega pairituna läbi Bluetoothi. Selle sidumise kaudu lubatakse rakenduse abil tehtud juhtnupud. Seetõttu peab seadme ja nutiseadme vaheline Bluetooth-signaali tugevus olema piisav. Külastage veebisaiti

www.homewhiz.com, et näha rakenduse HomeWhiz toetatud Androidi ja iOS-i versioone.




Kõik kasutusjuhendi osas „ÜLDISED OHUTUSNÕUDED“ kirjeldatud ohutusmeetmed kohalduvad ka kaugjuhtimisele läbi

6.15.1 HomeWhizi seadistamine

Rakenduse käivitamiseks tuleb teie seadme ja rakenduse HomeWhiz vahel luua ühendus. Selle ühenduse loomiseks peate järgima alltoodud samme nii oma seadme kui ka rakenduse HomeWhiz seadistamiseks.

1. Kui lisate seadme esmakordselt, puudutage rakenduse HomeWhiz vahekaarti „Seadmed”. Valige paremas ülanurgas nupp „LISA SEADE” (puudutage siin, et seadistada uus seade). Tehke häälestus, järgides nii allolevaid kui ka rakenduse HomeWhiz juhiseid.

2. Seadistamise alustamiseks veenduge, et masin oleks välja lülitatud. Masina lülitamiseks HomeWhizi seadistamise režiimile vajutage ja hoidke 3 sekundit all üheaegselt temperatuurinuppu ja kaugjuhtimisfunktsiooni nuppu.

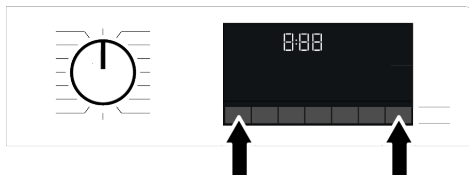

3. Kui seade on HomeWhizi seadistamise režiimil, näete ekraanil animatsiooni ja Bluetoothi ikoon vilgub seni, kuni masin on nutiseadmega paardunud. Selles režiimis on aktiivne ainult programminupp. Teised nupud on inaktiveeritud.




4. Järgige HomeWhiz rakenduse ekraanil kuvatavaid juhiseid.
5. Oodake, kuni installimine on lõppenud. Kui seadistamine on lõpetatud, andke oma pesumasinale nimi. Nüüd saate puudutada toodet, mille olete rakendusse HomeWhiz lisanud ja seda vaadata.



Kui te ei jõua seadistust 5 minuti jooksul edukalt sooritada, lülitub pesumasin automaatselt välja. Sel juhul peate seadistustoimingut uuesti alustama. Probleemi püsimisel pöörduge volitatud hooldustehniku poole. Pesumasinat saab kasutada enam kui ühe nutiseadmega. Selleks laadige teise nutiseadmese alla rakendus HomeWhiz. Rakenduse käivitamisel peate logima sisse kontole, mille olete varem loonud ja oma pesumasinaga sidunud. Muidu lugege jaotist „Pesumasin seadistamine, mis on ühendatud kellegi teise kontoga“.



Rakenduse HomeWhiz kasutamiseks peab teie nutiseade olema internetti ühendatud. Muiduei võimalda rakendus HomeWhiz seadistamist edukalt lõpetada. Probleemide korral internetiühendusega pöörduge oma internetiteenuse pakkuja poole

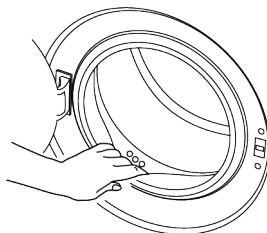

Rakendus HomeWhiz võib nõuda teilt toote andmesildile märgitud tootenumbri sisestamist. Toote andmesildi leiате seadme ukse siseküljelt. Tootenumber asub sellel sildil.

☐	☐	00-000000-00	
product Code: XXXXXXXXXX			

6.15.2 Pesumasina seadistamine, mis on ühendatud kellegi teise kontoga

Kui pesumasin, mida soovite kasutada, on sisestatud süsteemi läbi kellegi teise konto, peate looma uue ühenduse oma rakenduse HomeWhiz ja seadme vahel.

1. Installige rakendus HomeWhiz uude nutiseadmesse, mida soovite kasutada.
2. Tehke uus konto ja logige sellele kontole rakenduses HomeWhiz.
3. Järgige jaotises HomeWhizi seadistamine (HomeWhizi seadistamine) esitatud juhiseid ja lõpetage seadmistamine.



Kuna funktsioon HomeWhiz ja kaugjuhtimine teie seadmel töötavad läbi Bluetooth-tehnoloogia, saab korraga kasutada ainult ühte rakendust HomeWhiz.

6.15.3 Kaugjuhtimisfunktsioon ja selle kasutamine

Bluetooth lülitub pärast HomeWhizi seadistamist automaatselt sisse. Bluetoothi ühenduse aktiveerimiseks või inaktiveerimiseks vt osa „Bluetooth 3“. Masina sisse-/väljalülitamisel, kui Bluetooth on aktiveeritud, toimub uuesti ühendumine automaatselt. Kui paaritud seade peaks töövahemikust väljuma, lülitub Bluetooth automaatselt välja. Sellepärast peate Bluetoothi uuesti sisse lülitama, kui soovite jätkata kaugjuhtimisfunktsiooni kasutamist. Ühenduse oleku jälgimiseks vaadake, kas ekraanil on Bluetoothi sümbol. Kui sümbol põleb pidevalt, on Bluetoothi ühendus olemas. Kui sümbol vilgub, üritab toode ühenduda. Kui sümbol on kustunud, siis ühendus puudub.



Kui Bluetooth on tootel sisse lülitatud, saab valida kaugjuhtimisfunktsiooni. Kui kaugjuhtimisfunktsioon ei ole valitav, kontrollige ühenduse olekut. Kui ühendust ei saa luua, korrake seadme esmase seadistamise juhiseid.

MÄRKUS Ohutuse tagamiseks jääb toote uks lukustatuks seni, kuni kaugjuhtimisfunktsioon on lubatud, seda olenemata töörežiimist. Kui soovite avada toote ukse, peate keerama programmivalikunuppu või vajutama kaugjuhtimisnupule, et kaugjuhtimisfunktsioon inaktiveerida.

Kui soovite pesumasina kaugjuhtimist kasutada, vajutage kaugjuhtimisfunktsiooni aktiveerimiseks kaugjuhtimisfunktsiooni nuppu, samal ajal kui programmi nupp pesumasina juhtpaneelil on peale ukse sulgemist asendis Laadi alla programm / kaugjuhtimine. Kui tootele juurdepääs on loodud, näete allolevale sarnast ekraani.



Kui kaugjuhtimisfunktsioon on sees, saate pesumasina juhtpaneelilt ainult hallata, välja lülitada ja jälgida olekut. Kõiki teisi funktsioone, v.a lapselukk, saate hallata läbi rakenduse.

Nupu funktsiooninäidiku abil saate jälgida, kas kaugjuhtispuldi funktsioon on sisse või välja lülitatud.

Kui kaugjuhtispuldi funktsioon on välja lülitatud, tehakse kõik toimingud masina kaudu, rakenduses on lubatud ainult oleku jälgimine.

Kui kaugkäivituse funktsiooni ei saa sisse lülitada, kuulete nupu vajutamisel hoiatusheli. Seda võib kogeda, kui seade on sisse lülitatud ja Bluetoothiga seotud

seadet pole. Näitena nende juhtumite korral; Bluetoothi säte on välja lülitatud või toote kaas on avatud.

Kui aktiveerite selle funktsiooni pesumasinas, jääb see funktsioon aktiivseks, välja arvatud teatud juhtudel ja võimaldab teil oma pesumasinat Bluetoothi kaudu kaugjuhtida.

Teatud tingimustel lülitatakse see ohutuse huvides automaatselt välja:

- Kui teie masina toide katkeb.
- Kui programminuppu keeratakse ja valitakse mõni muu programm või seade on välja lülitatud.

6.15.4 Probleemide lahendamine

Kui teil on probleeme juhtimise või ühendamisega, järgige järgmisi samme. Vaadake, kas probleem püsib või kaob pärast meetme võtmist.

1. Kontrollige, kas teie nutiseade on ühendatud õige koduvõrguga.
 2. Taaskäivitage toote rakendus.
 3. Lülitage Bluetooth välja ja seejärel uuesti sisse läbi juhtpaneeli.
 4. Kui pärast ülalkirjeldatud toiminguid ei saa ühendust luua, korrake pesumasina esmase seadistamise juhiseid.
- Probleemi püsimisel konsulteerige volitatud hooldustehnikuga.

7 Hooldus- ja puhastus




Lugege kõigepealt jaotist „Ohutusjuhised“!

Regulaarne puhastamine pikendab teie toote kasulikku tööiga ja vähendab probleemide tekkimise võimalust.

7.1 Pesuvahendi sahtli puhastamine

Puhastage pesuvahendi sahtlit pesupulbri jääkide kogunemise vältimiseks regulaarselt (iga 4 kuni 5 pesukorra järel), järgides allpool olevaid juhiseid.

Puhastage sifoon, kui pesupehmendaja lahtrisse jääb liiga palju vee ja pesupehmendaja segu.

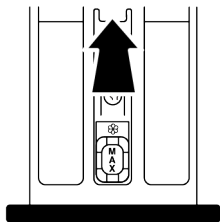

1. Vajutage pesupehmendaja lahtris sifoonil märgitud kohtadele ja tõmmake sahtlit selle välja võtmiseks enda poole.
2. Tõstke sifoon üles ja eemaldage, nagu on näidatud joonisel.

3. Loputage sifoon ja sahtel kraanikausis sooja veega puhtaks. Kasutage kindaid või sobivat harja, et vältida sahtlis olevate jääkide nahale sattumist.
4. Pärast puhastamist seadke sifoon ja sahtel tagasi oma kohale.


7.2 Ukse ja trumli puhastamine

Trumli puhastusprogrammiga varustatud toodete puhul vaadake jaotist „Toote kasutamine“.



Puhastage trumlit iga kahe kuu tagant.

MÄRKUS Kasutage pesumasina jaoks sobivat katlakivieemaldusvahendit.

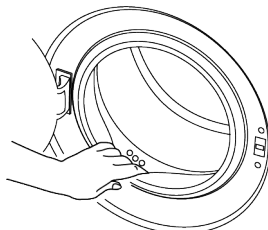

Pärast iga pesukorda veenduge, et tootesse poleks jäänud võõrkehaseid.

Kui joonisel kujutatud uksetihendis olevad avad on ummistunud, kasutage nende avamiseks hambaorki.

Metallist võõrkehade põhjustavad trumli roostetamist. Eemaldage trumli pinnal olevad plekid roostevabast terase jaoks mõeldud vahendiga.

Ärge kunagi kasutage teraskäsna. See kahjustab värvitud, kroomitud ja plastist pindu.

Soovitame pühkida uksetihendit ja -klaasi pärast programmi lõppemist kuiva ja puhta riidelapiga. See eemaldab uksetihendile jäänud jäägid ja aitab vältida ebameeldiva lõhna tekkimist.


7.3 Korpuse ja juhtpaneeli puhastamine

Puhastage korpust vajadusel seebivee või mittesöövitava leebe puhastusgeeliga ja kuivatage pehme riidelapiga.

Juhtpaneeli puhastamiseks kasutage ainult pehmet ja niisket lappi. Ärge kasutage pleegitusaineid sisaldavaid puhastustooteid

7.4 Vee sissevoolu filtrite puhastamine

Filter asub nii toote tagaosas asuva vee sissevooluklapi otsas kui ka iga kraaniga ühendatud vee sissevooluvooliku otsas. Need filtrid takistavad võõrkehade ja vees oleva mustuse pääsemist tootesse. Filtreid peaks puhastama, kui need on määrdunud.

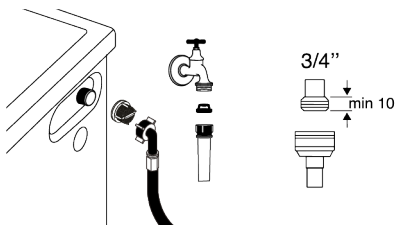

1. Sulgege kraanid.
2. Eemaldage filtrite juurde pääsemiseks vee sissevooluvoolikute mutrid ja puhastage filtrid sobiva harjaga. Kui

filtrid on väga määrdunud, eemaldage need näpitsate abil oma kohalt ja puhastage eraldi.

3. Eemaldage vee sissevooluvoolikute lamedas otsas olevad filtrid koos tihenditega ja puhastage need põhjalikult jooksva vee all.
4. Seadke filtrid ja tihendid ettevaatlikult tagasi oma kohale ja kinnitage nende mutrid käe abil.

7.5 Masina tühjendamine ülejäänud veest ja pumba filtri puhastamine

Toote filtrisüsteem aitab pesuvee äravoolu ajal vältida pumba tiiviku ummistumist võõrkehadega, nagu nõobid, mündid ja riidekiud. Seega voolab vesi ära probleemideta ja pumba tööiga pikeneb. Kui vesi enam tootest ära ei voola, siis on pumba filter umbes. Filtrit peab puhastama, kui see on ummistunud või iga kolme kuu tagant. Enne filtri puhastamist peab toote kõigepealt täielikult veest tühjendama. Lisaks tuleks toode täielikult veest tühjendada enne transportimist (nt teise majja kolimisel).



MÄRKUS

Pumbafiltrisse jäänud võõrkehade võivad toodet kahjustada või põhjustada müraprobleemi. Piirkondades, kus torud võivad külmuda, peab selleks ajaks, mil toodet ei kasutata, kraanid sulgema, vooliku eemaldama ja toote veest tühjendama. Pärast iga kasutamist keerake kinni kraan, millega on ühendatud peavoolik.


Määrdunud filtri puhastamiseks ja veest tühjendamiseks:

1. Ühendage toode vooluvõrgust lahti.




Vee temperatuur tootes võib tõusta kuni 90 °C-ni. Kõrvetamise riski vältimiseks puhastage filtrit pärast tootes oleva vee jahtumist.

2. Avage filtri kate.

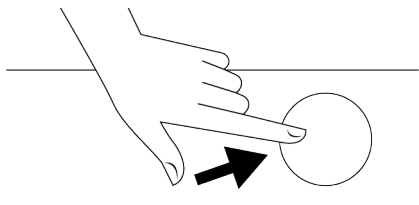

3. Järgige veest tühjendamiseks allpool kirjeldatud protsessi.

Kui tootel ei ole voolikut selle avariolukorras veest tühjendamiseks, siis:

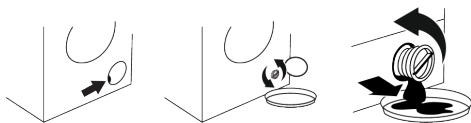

8 Probleemide lahendamine



Lugege kõigepealt jaotist „Ohutusjuhised“!

Programmid ei käivitu pärast pesumasina ukse sulgemist.

- Käivitus-/seiskamis-/tühistusnuppu ei ole vajutatud. >>> Vajutage käivitus-/seiskamis-/tühistusnuppu.
- Liigse pesukoguse korral võib olla ust keeruline sulgeda. >>> Võtke pesu vähemaks ja veenduge, et uks on korralikult suletud.

Programmi ei saa käivitada või valida.

- Masin on lülitunud kaitserežiimi (põhjus võib olla voolukõikumine, veesurve kõikumised jms). >>> Sõltuvalt toote mudelist valige programmi tühistamiseks mõni muu programm, keerates programmivaliku nuppu või vajutades ja hoides 3 sekundit all sisse/välja lülitamise nuppu. Eelmine programm tühistatakse. Vt Programmi tühistamine [▶ 31]

- Pange vooliku ots suurde nõusse filtrist tuleva vee kogumiseks.
- Kui filtrist hakkab vett lekkima, keerake see lahti (vastupäeva). Laske filtris olev vesi kogumisnõusse. Hoidke käepärast riidest lapp, juhuks kui vett läheb maha.
- Keerake pumbafilter välja ja eemaldage, kui tootest lekib vett.

1. Puhastage filtri sisemus jääkidest ning vajadusel, pumba tiivik riidekiududest.
2. Vahetage filter välja.
3. Kui filtrikork koosneb kahest osast, sulgege kork klambrile vajutades. Kui see koosneb ühest tükist, seadke klambrid kõigepealt pesadesse ja seejärel vajutage korgile selle fikseerimiseks.

Masinas on vesi.

- Seoses tootmise käigus tehtud kvaliteedikontrolliga on masinasse jäänud veidi vett. >>> Tegu ei ole rikkega; vesi ei kahjusta masinat.

Masin ei saa vett võtta.

- Kraan on suletud. >>> Avage kraanid.
- Vee sisselaskevoolik on paindes. >>> Seadke sisselaskevoolik sirgeks.
- Vee sisselaskefilter on ummistunud. >>> Puhastage filter.
- Pesumasina uks võib olla avatud. >>> Sulgege pesumasina uks.

Masin ei tühjene veest.

- Vee väljalaskevoolik võib olla ummistunud või keerdu. >>> Puhastage väljalaskevoolik või seadke see sirgeks.
- Pumba filter on ummistunud. >>> Puhastage pumba filter.

Masin vibreerib või müriseb.

- Masin võib olla viltu. >>> Reguleerige aluseid toote tasakaalustamiseks.

- Pumba filtrisse võib olla sattunud tahket ollust. >>> Puhastage pumba filter.
- Transpordipoldid on eemaldamata. >>> Eemaldage transpordipoldid.
- Võimalik, et masinas on liiga vähe pesu. >>> Lisage masinasse rohkem pesu.
- Võimalik, et masinas on liiga palju pesu. >>> Võtke osa pesu masinast välja või jaotage pesu käsitsi ühtlaselt.
- Võimalik, et masin toetub vastu jäika eset. >>> Veenduge, et masin ei toetu millegi vastu.

Masina põhjast lekib vett.

- Vee väljalaskevoolik võib olla ummistunud või keerdus. >>> Puhastage väljalaskevoolik või seadke see sirgeks.
- Pumba filter on ummistunud. >>> Puhastage pumba filter.

Masin seiskub kohe pärast programmi käivitumist.

- Masin võis madala pingetõttu ajutiselt seiskuda. >>> Normaalse tööpinge taastumisel jätkab masin tööd.

Masin laseb sissevõetavat vett otse välja.

- Tühjendusvoolik ei pruugi olla piisaval kõrgusel. >>> Ühendage vee väljalaskevoolik kasutusjuhendis kirjeldatud viisil.

Pesemise ajal pole vett masinas näha.

- Vesi on masina osa sees, mis on nähtamatu. >>> Tegu ei ole rikkega.

Pesumasina ust ei saa avada.

- Uks lukustub masinas oleva vee taseme tõttu. >>> Tühjendage masin pumpamis- või tsentrifuugimisprogrammi abil veest.
- Masin kuumutab vett või tsentrifuugimistsükkel on pooleli. >>> Oodake kuni programmi lõppemiseni.
- Uks võib olla kinni kiilunud liiga tugeva surve tõttu uksele. >>> Ukse vabastamiseks ja selle avamiseks haarake käepidemest ja lükake ja tõmmake ust.

- Toite puudumisel masina uks ei avane. >>> Ukse avamiseks avage pumba filtrikork ja tõmmake alla selle korpuse tagaküljel asuv avariinhoob. Vt Pesumasina ukse lukustus ▶ 30]

Pesemine kestab kauem, kui on juhendis määratud. (*)

- Veesurve on madal. >>> Masin ootab piisava veetaseme saavutamiseni, et pesu ei jääks vee vähesuse tõttu mustaks. Seetõttu pikeneb pesemisaeg.
- Toitepinge võib madal olla. >>> Pesemisaeg pikeneb, et pesu ei jääks madala toitepinge tõttu mustaks.
- Vee sisendtemperatuur võib olla madal. >>> Vesi soojeneb külmal ajal kauem. Lisaks võib pesemisaeg pikeneda, et pesu ei jääks mustaks.
- Loputuste arv ja/või loputusvee hulk on suurenenud. >>> Kui on vaja põhjalikku loputust, suurendab masin loputusvee kogust ja lisab vajadusel täiendava loputusetapi.
- Masinas on tekkinud liiga palju vahtu ja liiga suure hulga pesuvahendi kasutamise tagajärjel on aktiveerunud automaatne vahueemaldussüsteem. >>> Kasutage pesuvahendit soovitatud koguses.

Programmi kestuse pöördarvestus ei alga. (Ekraaniga mudelitel) (*)

- Taimer võib vee sissevõtu ajal peatuda. >>> Aeg ei hakka taimeri näidikul jooksmas enne, kui masinas on piisav kogus vett. Mitterahuldavate pesemistulemuste vältimiseks ootab masin, kuni masinas on piisavalt vett. Seejärel jätkab taimeri näidik pöördarvestust.
- Taimer võib vee kuumutamise ajal peatuda. >>> Aeg ei hakka taimeri näidikul jooksmas enne, kui masin saavutab valitud temperatuuri.
- Taimer võib tsentrifuugimise ajal peatuda. >>> Pesu ebaühtlase jaotuse tõttu masinas rakendub automaatne ebaühtlase jaotuse tuvastussüsteem.

Programmi kestuse pöördarvestus ei alga. (*)

- Pesu võib olla masinas jaotunud ebaühtlaselt. >>> Pesu ebaühtlase jaotuse tõttu masinas rakendub automaatne ebaühtlase jaotuse tuvastussüsteem.

Masin ei lülitu tsentrifuugimisele. (*)

- Pesu võib olla masinas jaotunud ebaühtlaselt. >>> Pesu ebaühtlase jaotuse tõttu masinas rakendub automaatne ebaühtlase jaotuse tuvastussüsteem.
- Kui masin pole täielikult veest täielikult tühjendatud, siis masin ei tsentrifuugi. >>> Kontrollige filtrit ja tühjendusvoolikut.
- Masinas on tekkinud liiga palju vahtu ja liiga suure hulga pesuvahendi kasutamise tagajärjel on aktiveerunud automaatne vahueemaldussüsteem. >>> Kasutage pesuvahendit soovitatud koguses.

Pesemistulemused on halvad: Pesu muutub halliks. ()**

- Pika aja jooksul on kasutatud liiga väheses koguses pesuvahendit. >>> Kasutage vastavalt vee karedusele ja pesule soovitatud koguses pesuvahendit
- Pesu on pika aja jooksul pestud madalal temperatuuril. >>> Valige pesu pesemiseks õige temperatuur.
- Kareda vee korral on kasutatud liiga väheses koguses pesuvahendit. >>> Kui kareda vee korral kasutatakse liiga vähe pesuvahendit, jääb mustus riide külge ja muudab selle aja jooksul halliks. Juba toimunud hallinemist on keeruline kõrvaldada. Kasutage vastavalt vee karedusele ja pesule soovitatud koguses pesuvahendit
- Kasutatud on liiga suures koguses pesuvahendit. >>> Kasutage vastavalt vee karedusele ja pesule soovitatud koguses pesuvahendit

Pesemistulemused on halvad: Plekid ei kao või pesu ei muutu valgeks. ()**

- Kasutatud on liiga väheses koguses pesuvahendit. >>> Kasutage vastavalt vee karedusele ja pesule soovitatud koguses pesuvahendit
- Sisse on laaditud liiga palju pesu. >>> Ärge koormake seadet üle. Pange masinasse „Programmide ja kulu tabelis“ soovitatud kogus.
- Valitud on vale programm ja temperatuur. >>> Valige pesu pesemiseks õige programm ja temperatuur.
- Kasutatud on valet pesuvahendit. >>> Kasutage tootele sobivat originaalpesuvahendit.
- Kasutatud on liiga suures koguses pesuvahendit. >>> Pange pesuvahend õigesse lahtrisse. Ärge segage omavahel pesuvalgendit ja pesuvahendit.

Pesemistulemused on halvad: Pesule on ilmunud õlised plekid. ()**

- Trumlit pole regulaarselt puhastatud. >>> Puhastage trumlit regulaarselt Selle protseduuri kohta vt Ukse ja trumli puhastamine [► 35]

Pesemistulemused on halvad: Riidel on ebameeldiv lõhn. ()**

- Pideva madalal temperatuuril ja/või lühikeste programmidega pesemise tõttu tekivad trumli pinnale lõhnad ja bakterikihid. >>> Jätke pesuvahendi lahter ja pesumasina uks pärast iga pesemist lahti. Nii ei saa masinas tekkida baktereid jaoks soodne keskkond.

Riiete värv on luitunud. ()**

- Sisse oli laaditud liiga palju pesu. >>> Ärge koormake seadet üle.
- Kasutatav pesuvahend on niiske. >>> Säilitage pesuvahendianumaid suletuna kuivas keskkonnas ja vältige nende kokkupuudet liiga kõrge temperatuuriga.
- Valitud on kõrgem temperatuur. >>> Valige vastavalt pesu tüübile ja määrdumisastmele õige programm ja temperatuur.

Pesu ei loputata korralikult.

- Kasutatud pesuvahendi kogus, kaubamärk ja säilitustingimused pole asjakohased. >>> Kasutage pesumasina ja pesu jaoks asjakohast pesuvahendit. Säilitage pesuvahendianumaid suletuna kuivas keskkonnas ja vältige nende kokkupuudet liiga kõrge temperatuuriga.
- Pesuvahend oli pandud valesse lahtrisse. >>> Kui pesuvahend pannakse eelpesu lahtrisse, kuigi eelpesutsükli pole valitud, võib masin kasutada seda pesuvahendit loputus- või pehmen­dustsükli ajal. Pange pesuvahend õigesse lahtrisse.
- Pumba filter on ummistunud. >>> Kontrollige filtrit.
- Tühjendusvoolik on keerdu­. >>> Kontrollige tühjendusvoolikut.

Pesu muutus pärast pesemist jäigaks. ()**

- Kasutatud on liiga väheses koguses pesuvahendit. >>> Kui kasutatakse vee kareduse kohta liiga vähe pesuvahendit, võib pesu muutuda aja jooksul jäigaks. Kasutage vastavalt vee karedusele asjakohases koguses pesuvahendit.
- Pesuvahend oli pandud valesse lahtrisse. >>> Kui pesuvahend pannakse eelpesu lahtrisse, kuigi eelpesutsükli pole valitud, võib masin kasutada seda pesuvahendit loputus- või pehmen­dustsükli ajal. Pange pesuvahend õigesse lahtrisse.
- Pesuvahendit segati pesupehmen­dajaga. >>> Ärge segage pesupehmen­dajat pesuvahendiga. Peske ja puhastage sahtel kuuma veega

Pesul pole pesupehmen­daja lõhna. ()**

- Pesuvahend oli pandud valesse lahtrisse. >>> Kui pesuvahend pannakse eelpesu lahtrisse, kuigi eelpesutsükli pole valitud, võib masin kasutada seda pesuvahendit loputus- või pehmen­dustsükli ajal. Peske ja puhastage sahtel kuuma veega Pange pesuvahend õigesse lahtrisse.

- Pesuvahendit segati pesupehmen­dajaga. >>> Ärge segage pesupehmen­dajat pesuvahendiga. Peske ja puhastage sahtel kuuma veega

Pesuvahendi sahtlis on pesuvahendijääke. ()**

- Pesuvahend pandi märga sahtlisse. >>> Kuivatage pesuvahendi sahtel enne pesuvahendi panekut.
- Kasutatav pesuvahend oli niiske. >>> Säilitage pesuvahendianumaid suletuna kuivas keskkonnas ja vältige nende kokkupuudet liiga kõrge temperatuuriga.
- Veesurve on madal. >>> Kontrollige veesurvet.
- Pealahtris olev pesuvahend muutus eelpesu vee sissevõtmisel märjaks. Pesuvahendi lahtri avad on ummistunud. >>> Kontrollige avasid ja puhastage ummistunud avad.
- Ilmnenud on pesuvahendi lahtri klappidega seotud probleem. >>> Pöörduge volitatud teenindusse.
- Pesuvahendit segati pesupehmen­dajaga. >>> Ärge segage pesupehmen­dajat pesuvahendiga. Peske ja puhastage sahtel kuuma veega
- Trumlit pole regulaarselt puhastatud. >>> Puhastage trumlit regulaarselt Selle protseduuri kohta vt Ukse ja trumli puhastamine [► 35]

Masinas tekib liiga palju vahtu. ()**

- Kasutate pesumasina jaoks ebasobivat pesuvahendit. >>> Kasutage pesumasina jaoks asjakohast pesuvahendit.
- Kasutatud on liiga suures koguses pesuvahendit. >>> Kasutage ainult piisavas koguses pesuvahendit.
- Pesuvahendit on säilitatud valedes tingimustes. >>> Säilitage pesuvahendit suletud pakendis ja kuivas kohas. Ärge säilitage liiga kuumas kohas.
- Osa võrkstruktuuriga pesu (nt tüll) võib oma struktuuri tõttu liigselt vahutada. >>> Kasutage selle eseme puhul väiksemas koguses pesuvahendit.

- Pesuvahend oli pandud valesse lahtrisse.
>>> Tehke kindlas, et panete pesuvahendit õigesse lahtrisse.
- Pesupehmenajast võetakse liiga vara.
>>> Probleem võib olla seotud klappide või pesuvahendi sahtliga. Pöörduge volitatud teenindusse.

Pesuvahendi sahtlist tuleb vahtu.

- Masinasse on pandud liiga palju pesuvahendit. >>> Segage 1 supilusikatäis pesupehmenajat ½ liitri veega ning kallake saadud lahus pesuvahendisahkli põhipesu lahtrisse.
>>> Pange masinasse pesuvahendit vastavalt programmile ja maksimumkogusele, mille leiate, "Programmide ja kulu tabelist". Kui kasutate täiendavaid kemikaale (plekieemaldaja, pesuvalgendi vms), vähendage pesuvahendi kogust.

Pesu on pärast programmi lõppu märg. (*)

- Masinas on tekkinud liiga palju vahtu ja liiga suure hulga pesuvahendi kasutamise tagajärjel on aktiveerunud

automaatne vahueemaldussüsteem. >>> Kasutage pesuvahendit soovitatud koguses.

(*) Et vältida masina ja ümbruse kahjustamist, ei lülitu masin tsentrifuugimisele, kui pesu paikneb trumlis ebaühtlaselt. Pesu tuleb kohendada ja seejärel uuesti tsentrifuugida.

(**) Trumlit pole regulaarselt puhastatud. Puhastage trumlit regulaarselt. Vt Ukse ja trumli puhastamine ► 35]



Kui Teil ei õnnestu probleemi selles lõigus toodud juhiste järgi lahendada, konsulteerige edasimüüja või volitatud teenindusega. Ärge kunagi üritage rikkis seadet ise parandada.



Asjakohast teavet probleemide lahendamise kohta leiate jaotisest HomeWhiz.

9 LAHTIÜHTLUS / HOIATUS

Lõppkasutaja saab mõningaid (lihtsaid) tõrkeid adekvaatselt käsitleda ilma ohutusprobleemide või ohtliku kasutamiseteta, eeldusel, et seda tehakse kindlaksmääratud piirides ja vastavalt järgmistele juhistele (vt jaotist „Ise parandamine“).

Seetõttu, kui allolevas jaotises „Ise parandamine“ pole lubatud teisiti, tuleb ohutusprobleemide vältimiseks pöörduda remonditöödega registreeritud professionaalse remonditöökoja poole. Registreeritud professionaalne remonditöökoda on professionaalne remonditöökoda, kellele tootja on võimaldanud juurdepääsu selle toote juhistele ja varuosade loetelule vastavalt direktiivi 2009/125/EÜ kohastes õigusaktides kirjeldatud meetoditele.

Garantiitingimustel võib teenust osutada ainult teenindusagent (st volitatud professionaalsed remonditöökojad), kellele saate ühendust võtta kasutusjuhendis/garantiikaardil antud telefoninumbri või volitatud edasimüüja kaudu. Seetõttu pidage meeles, et professionaalsete remonditöökodade (kes pole volitatud) tehtud remonditööd tühistavad garantii.

Ise parandamine

Lõppkasutaja parandustöid teha ise järgmiste varuosadega seoses: uks, uksehinged ja -tihendid, muud tihendid, ukse lukustuskomplekt ja plastist välisseadmed, nagu pesuvahendi dosaatorid (uuendatud loend on saadaval ka alates seisuga 1. märts 2021)

Veelgi enam, toote ohutuse tagamiseks ja tõsiste vigastuste ohu vältimiseks tuleb mainitud ise parandamine teha vastavalt kasutusjuhendis toodud juhiste, mis on saadaval ise parandamise juhendis või mis on saadaval jaotises Ohutuse huvides ühendage toode enne ise parandustööde tegemist vooluvõrgust lahti.

Lõppkasutajate tehtud parandustööd ja sellealased üritused varuosadele, mis ei ole selles loendis ja/või ei järgi ise parandamise juhendeid või ei ole saadaval jaotises, võivad tekitada ohutusprobleeme, mille eest ei vastuta, ja tühistada toote garantii.

Seetõttu on lõppkasutajatel tungivalt soovitatav hoiduda püüetest teha remonditöid, mis jäävad väljapoole mainitud varuosade nimekirja, võttes sellistel juhtudel ühendust volitatud professionaalse remonditöökoja või registreeritud professionaalse remonditöökojaga. Vastupidi, sellised lõppkasutajate püüded võivad põhjustada ohutusprobleeme ja kahjustada toodet ning kaasa tuua tulekahju, üleujutuse, elektrilöögi ja tõsiseid kehavigastusi.

Näiteks, kuid mitte ainult, tuleb järgmiste remonditöödega pöörduda volitatud professionaalse remonditöökoja või registreeritud professionaalse remonditöökoja poole: mootor, pumbakomplekt, põhiplaad, mootoritahvel, näidikuplaad, kütteseadmed jne.

Tootja/müüja ei vastuta ühelgi juhul, kui lõppkasutajad eeltoodut ei järgi Ostetud pesumasina või pesumasin-kuivati varuosade saadavus on 10 aastat. Selle perioodi jooksul on saadaval toote nõuetekohaseks kasutamiseks vajalikud pesumasin või pesumasin-kuivati originaalvaruosad.

Kui seade on välja lülitatud, kuvatakse 1. ja 2. abifunktsiooninupu pikal vajutamisel pöördloendus kujul 3-2-1 ja seejärel seadme lõpuleviidud pesutsükli koguvarv.

Pärast pesutsükli koguvarvu kuvamist kuvatakse tõrkekoodid, kui selliseid on. Kontrollige ekraanil olevat teavet alloleva tabeli abil.

Ekraaniteave	Põhjus	Lahendus
Tõrge	Seadme ohutusalgoritmi on pooleli.	Oodake, kuni tekst kaob ekraanilt. Pärast 1. ja 2. abifunktsiooninuppude vajutamist kontrollige ekraaniteavet.
SC	Probleemi ei õnnestunud lahendada kontrolli käigus.	Pöörduge volitatud teenindusse.
E5	Võimalik, et pumbafilter on umbes.	Puhastage pumba filter. Vt jaotist "Masina tühjendamine ülejäänud veest ja pumba filtri puhastamine". Proovige tsentrifuugimist. Kui probleem pole lahendatud, pöörduge teenindusse.
E8	Võimalik, et masin ei võta vett sisse.	• Avage kraanid. • Veenduge, et põhjuseks ei ole veekatkestus. • Kontrollige vee väljalaskevoolikut: kui see on sõlmes, tõmmake see sirgu. • Puhastage pumbafilter. Vt jaotist "Masina tühjendamine ülejäänud veest ja pumba filtri puhastamine". • Sulgege masina esikaas. Veenduge, et kaas on lukus. Käivitage masin veel üks kord. Kui probleem pole lahendatud, pöörduge teenindusse.
E29	Masin on lülitunud kaitsereežiimi (põhjus võib olla voolukõikumine, veesurve kõikumised jms).	Programmi tühistamiseks valige programmilüliti abil mõni teine programm. Eelmine programm tühistatakse. Vt jaotist „Programmi tühistamine”. Kui probleem püsib, pöörduge teenindusse.
E17	Lõpuleviidud programmi järel on masinas liiga palju vahtu.	• Säilitage pesuvahendit suletud pakendis ja kuivas kohas. Ärge säilitage liiga kuumas kohas. • Kasutage võrkttekstuuriga materjalide (nagu tüll) puhul väiksemas koguses pesuvahendit. • Kasutage pesu kogusele ja mustusele vastavat pesuvahendi kogust. • Kasutage ainult piisavas koguses pesuvahendit. • Tehke kindlas, et panete pesuvahendit õigesse lahtrisse. • Käivitage trumli puhastus ilma pesuta. Vt jaotist „Trumli puhastusprogramm” Kui Teie masinal puudub trumli puhastusprogramm, võite kasutada puuvillase pesu 90C tavaprogrammi. • Veidi pärast programmi puhastusvahendita käivitamist kontrollige masinat. Kui probleem püsib, pöörduge teenindusse.
E18	Seade ei lülitu tsentrifuugimisele.	Kontrollige masinas olevat pesu. Võimalik, et pesukogus ei ole piisav. Proovige pesukogust suurendada. Võimalik, et seadmes olev pesukogus ei ole tasakaalus; sorteerige käsitsi seadmes olev pesukogus ja jaotage see ühtlaselt. Proovige jälle tsentrifuugimist.
E12	Masinas on vett.	Eemaldage masin vooluvõrgust. Masina all on vett. Eemaldage vesi masina alt. Ühendage masin uuesti vooluvõrku. Proovige mõnda lühkest programmi. Kui probleem püsib või näete, et mõnest voolikust lekib vett, sulgege ventiilid ja helistage teenindusse.
E27	Kontrollige masina äravoolu.	Vt jaotist „Tühjendusvooliku ühendamine äravoolutoruga”
E84	Bluetooth-ühendust ei õnnestu luua.	Kontrollige ühendust, proovige see uuesti luua. Vt jaotist „Funktsioon HomeWhiz ja kaugjuhtimine” Kui probleem püsib, pöörduge teenindusse.

