


Montaj Talimatları





Installation instructions

Installation instructions

Installation instructions




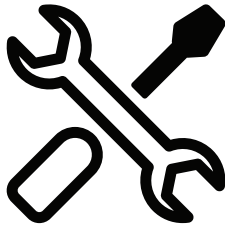



Document Number: 5853470100-AB

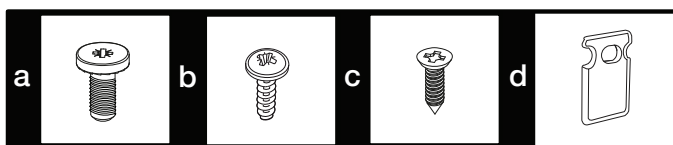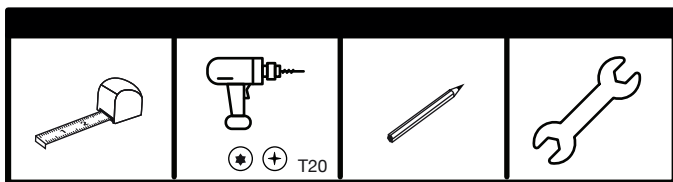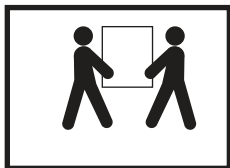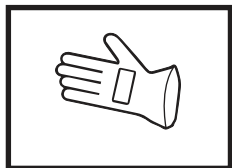


1

No
Wooden
Backwall


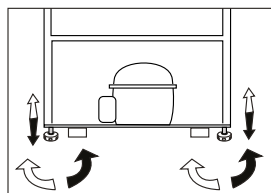
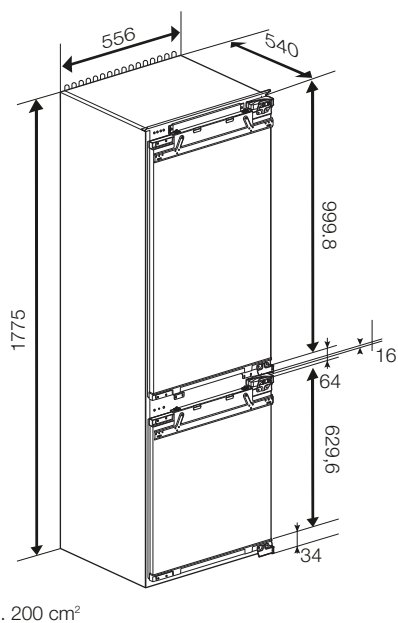
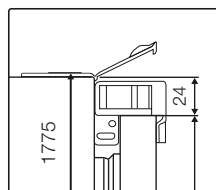
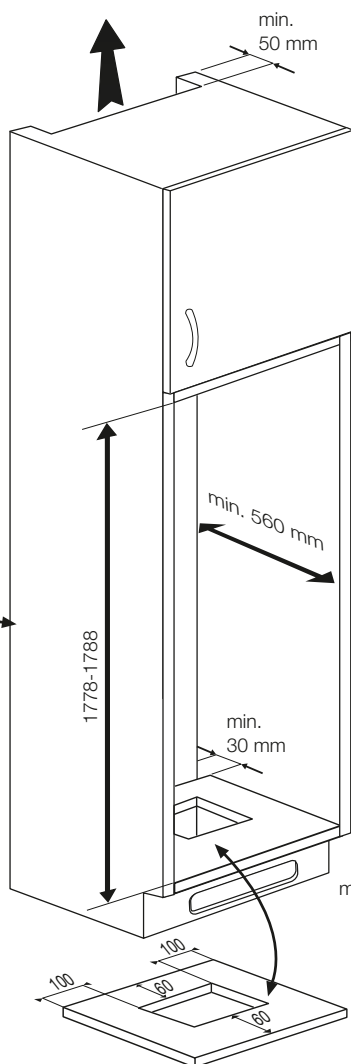


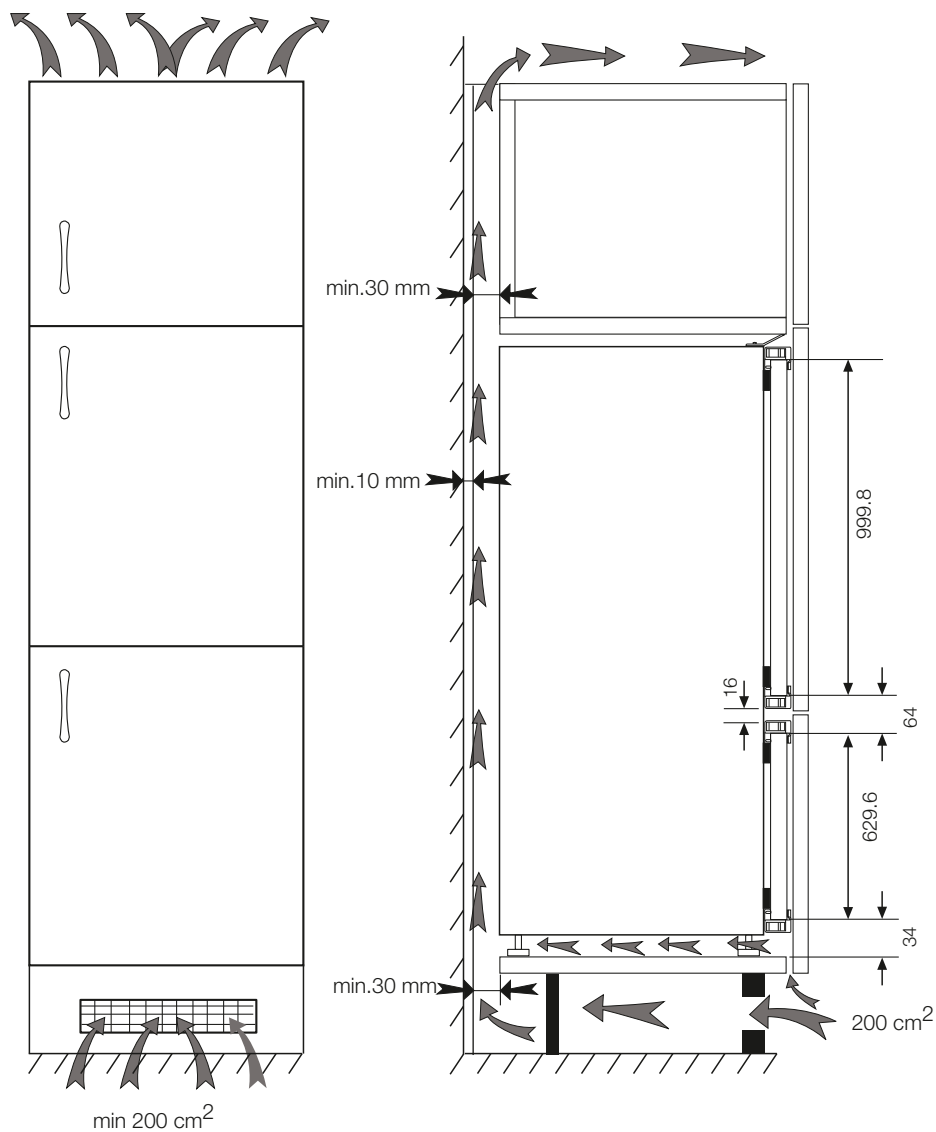

3

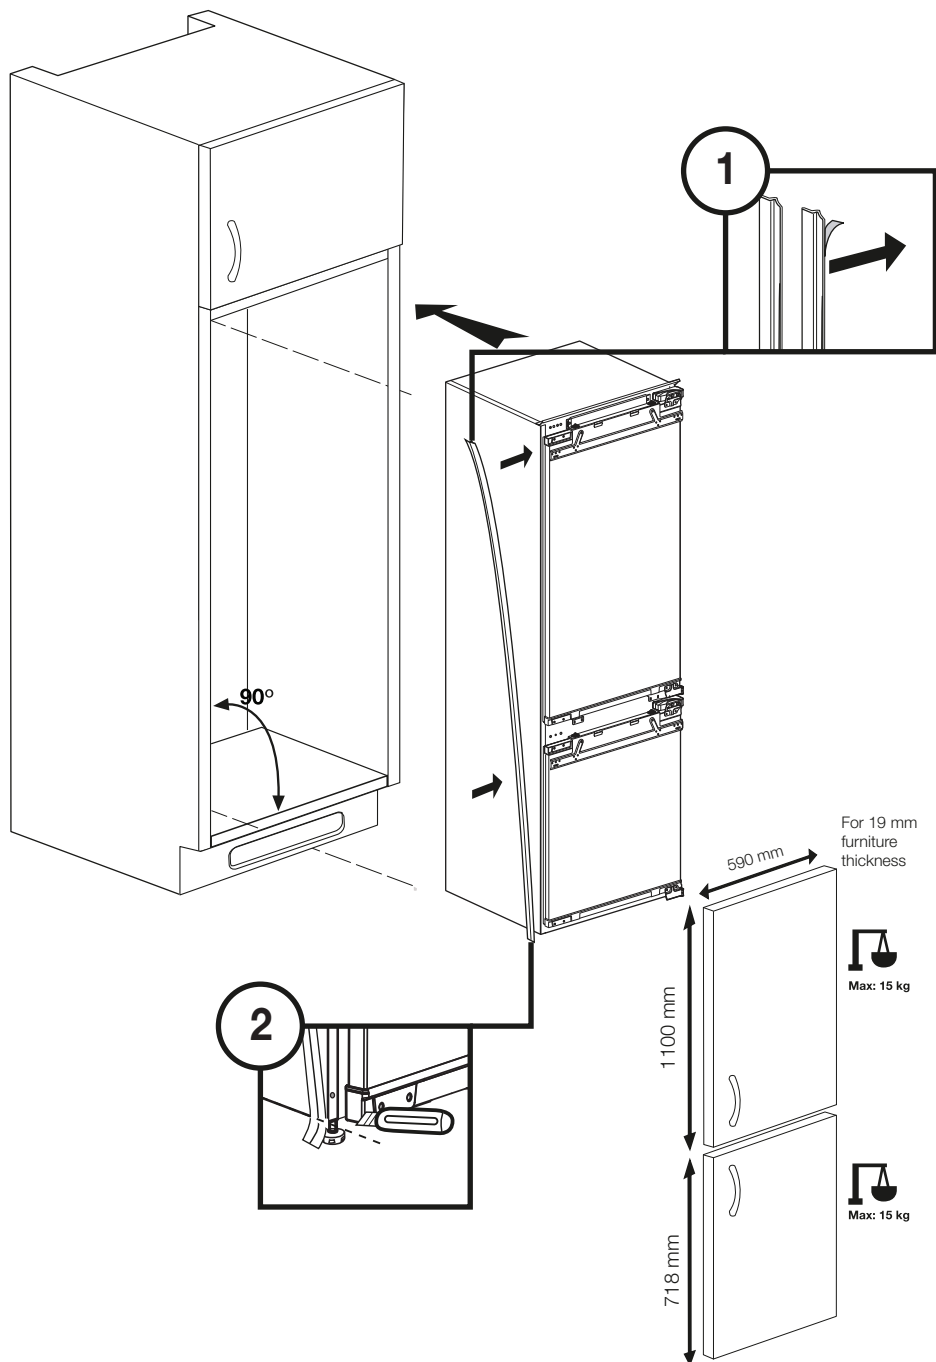


C

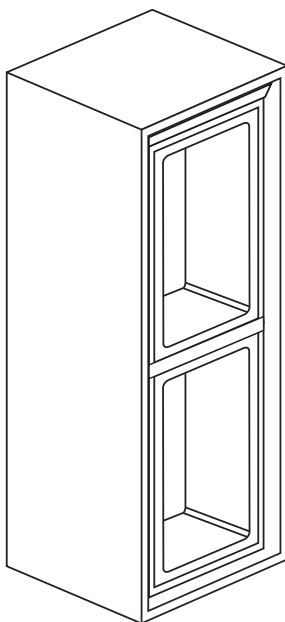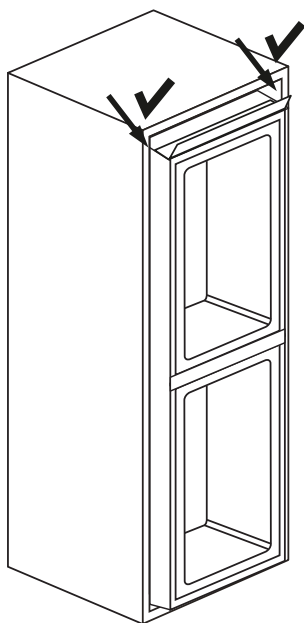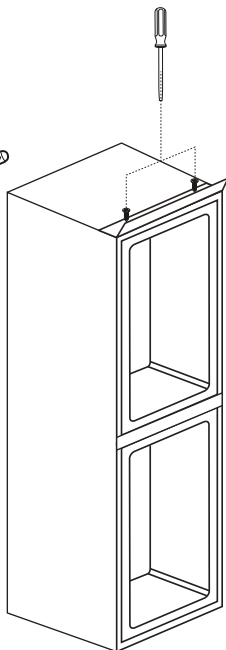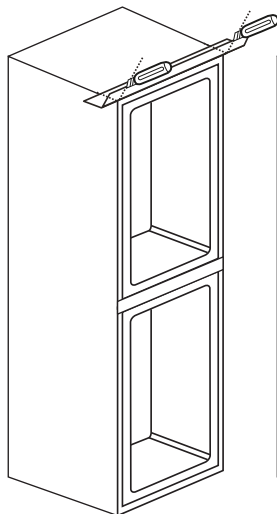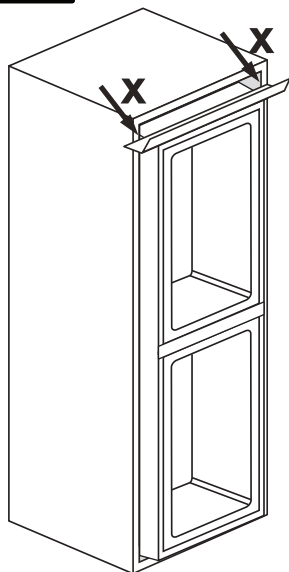

d







$$16 \text{ mm} + \text{🔧 (2mm)} = 18 \text{ mm}$$

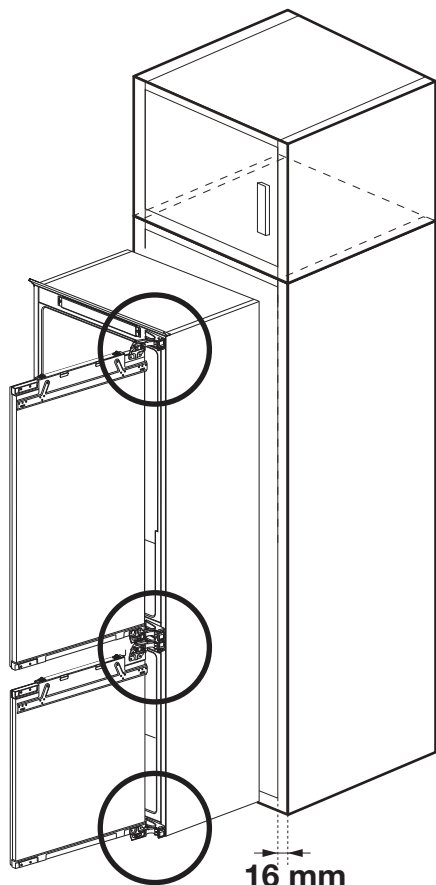







16 mm

✓ 16 mm
X 18 mm

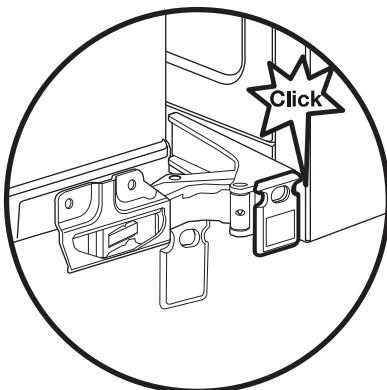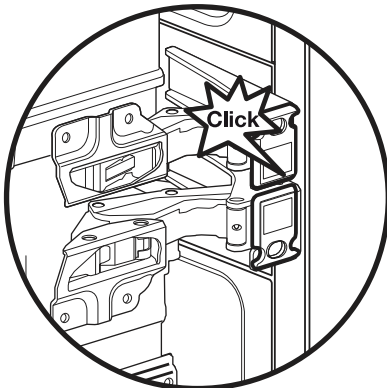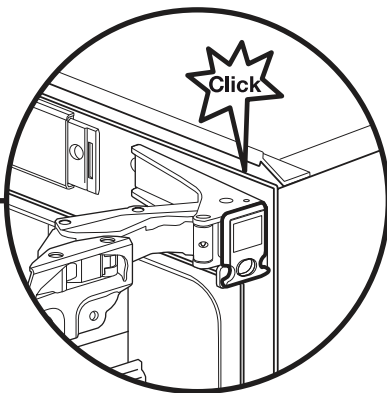

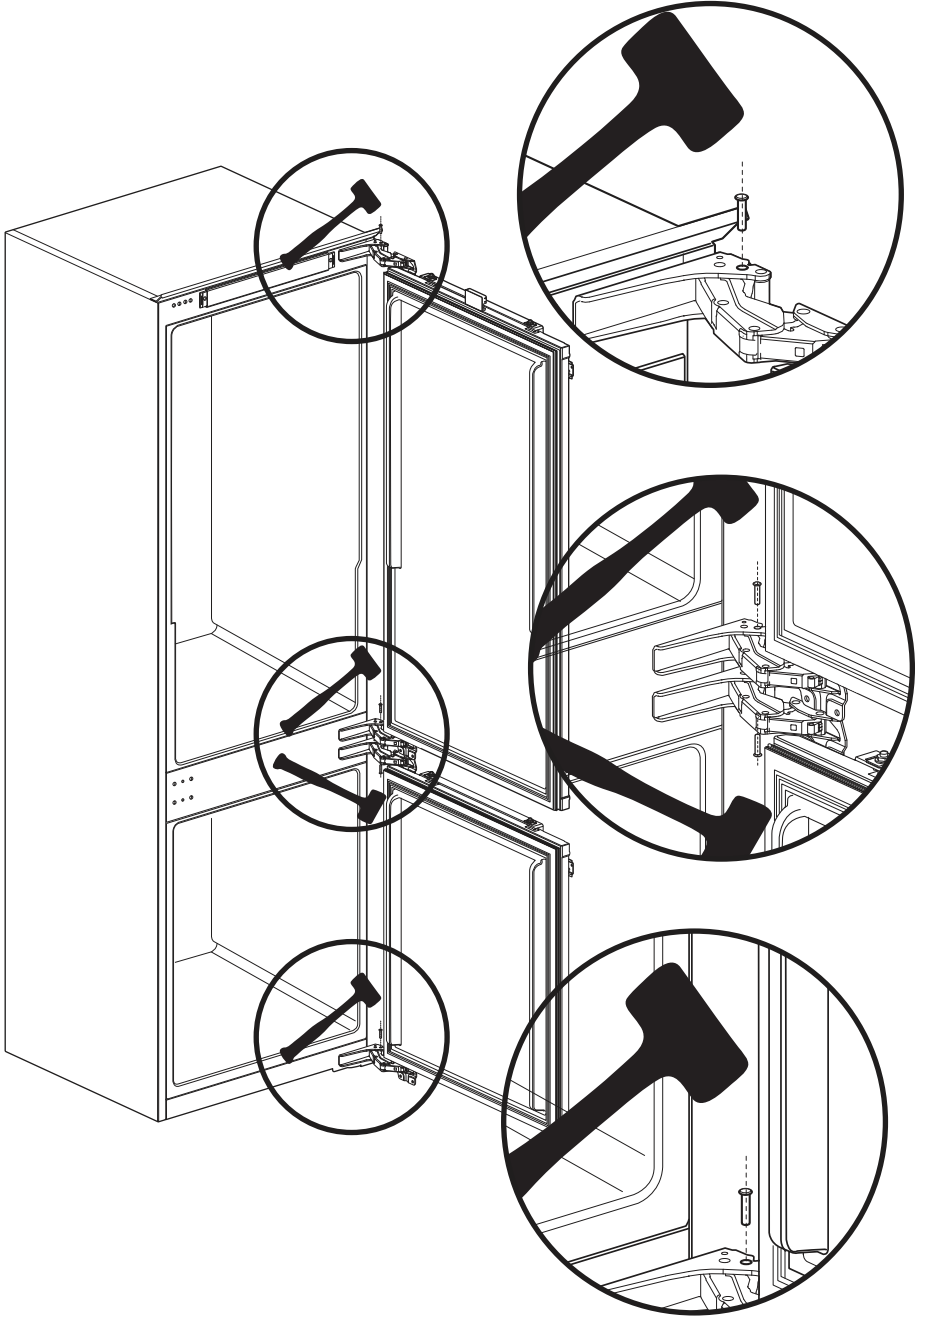

- Eğer buzdolabı kapısının 90 dereceden fazla açılmasını istemiyor iseniz yukarıda gösterilen pimleri kullanın.
-If you do not want to open refrigerator door more than 90 degree, please use the pims.
-Falls die Gerätetüren nach dem Einbau nicht weiter als im 90 Grad Winkel öffnen sollen / dürfen, setzen Sie in jedes Scharnier einen Bolzen ein.

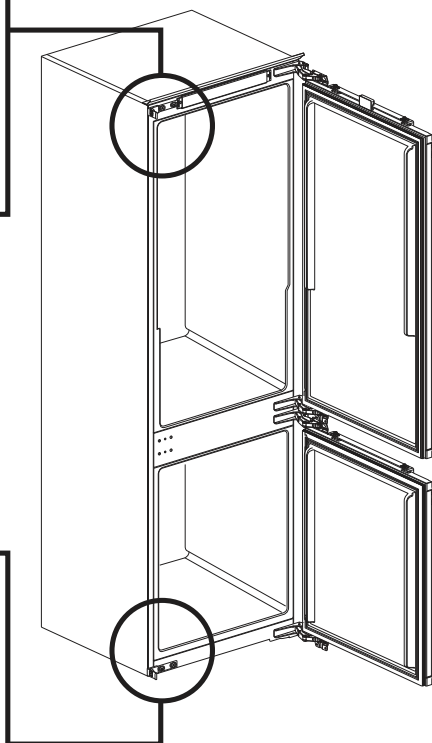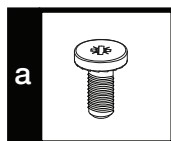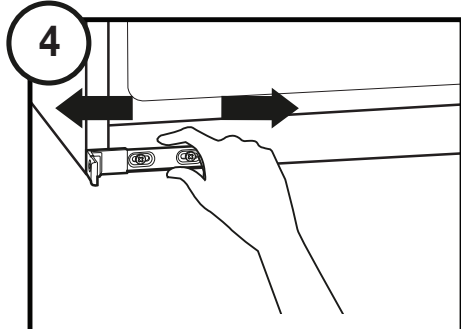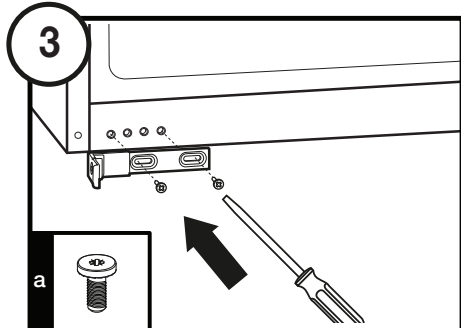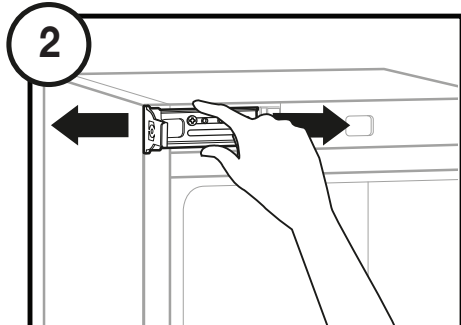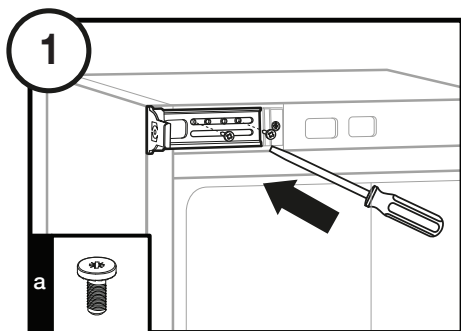

b



41,5 mm

1

41,5 mm

2

3

4

5

b



1

41.5 mm

41.5 mm

2

3






4


5

C




10

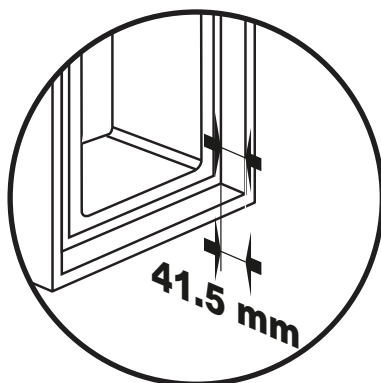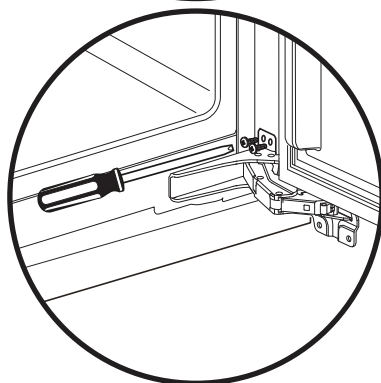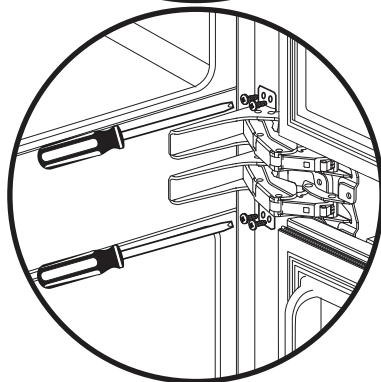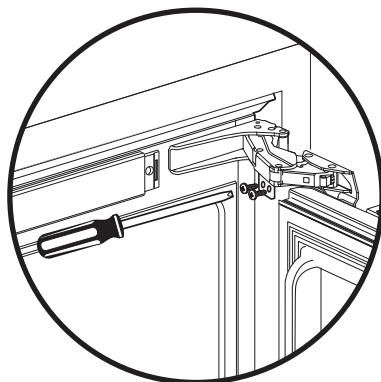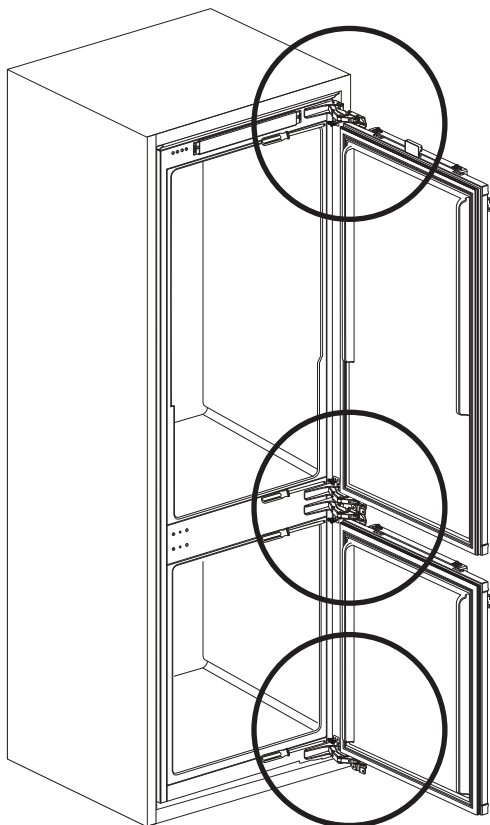





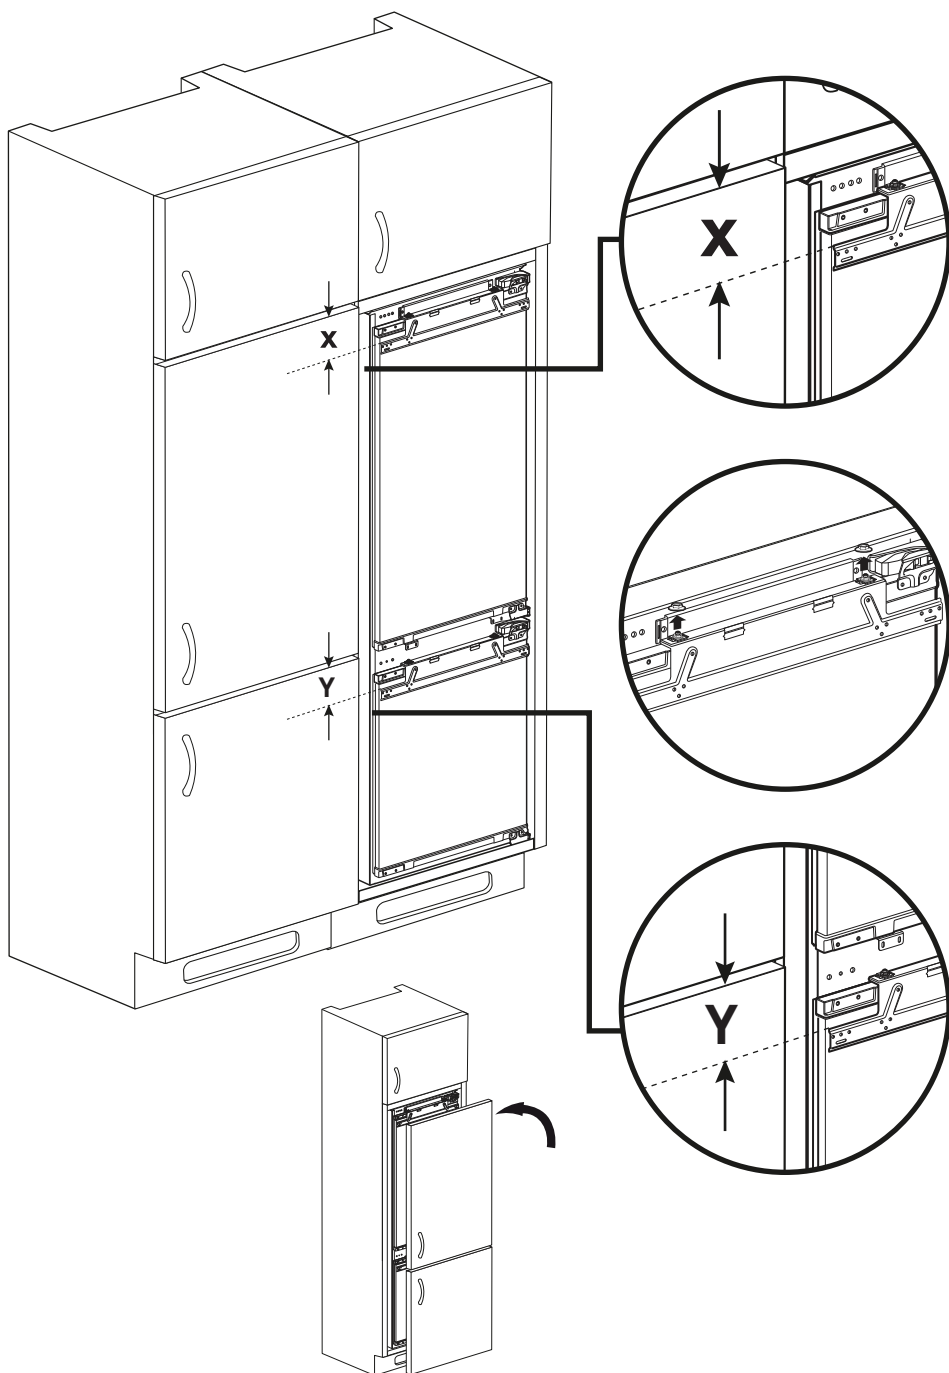


12


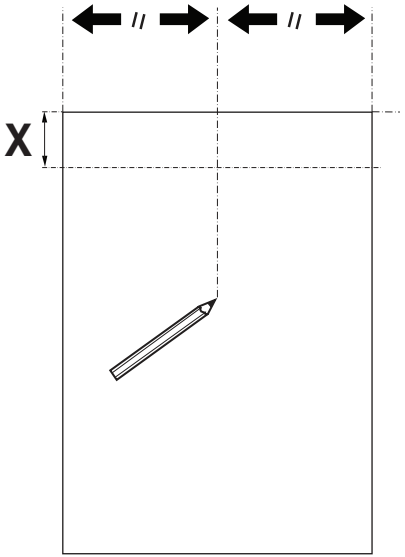


13

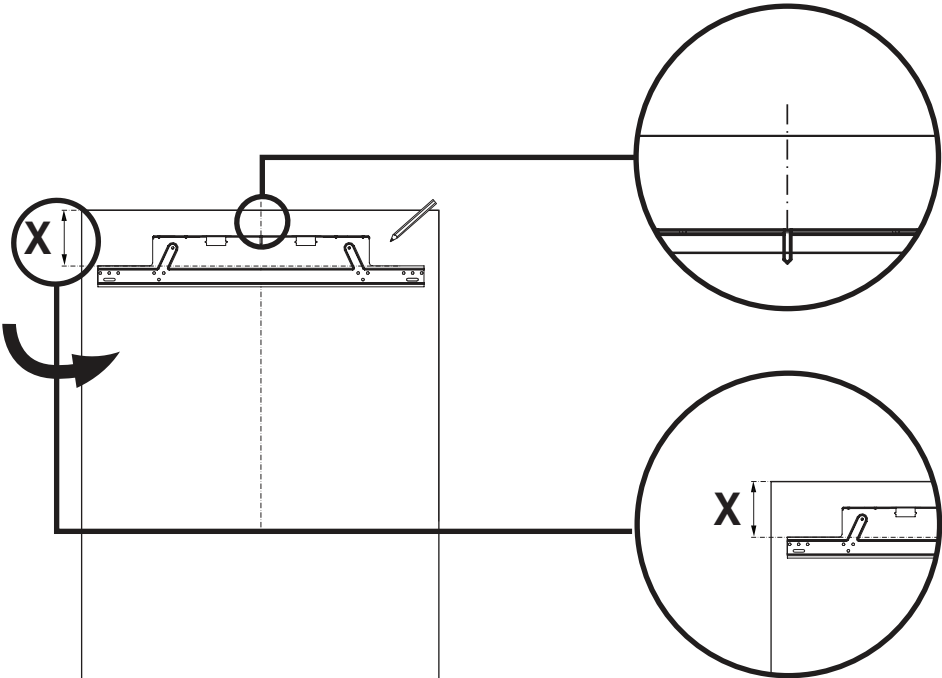


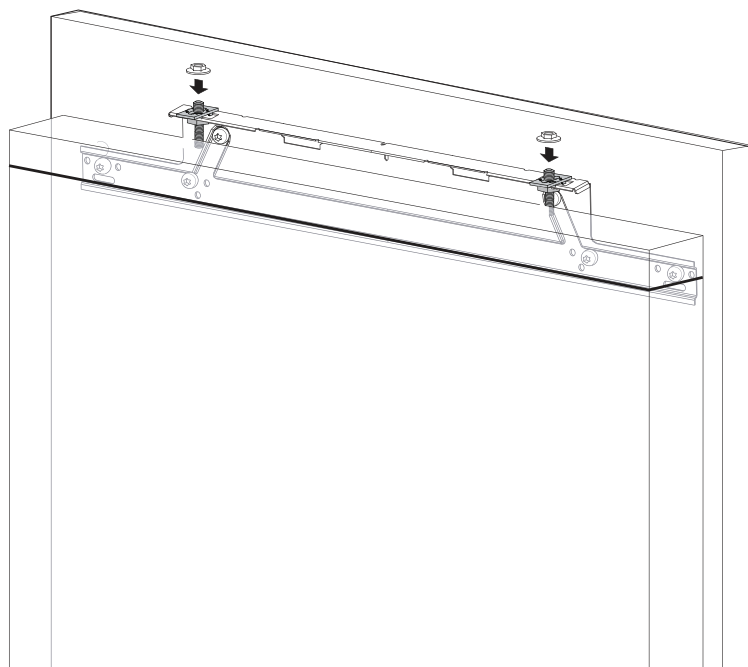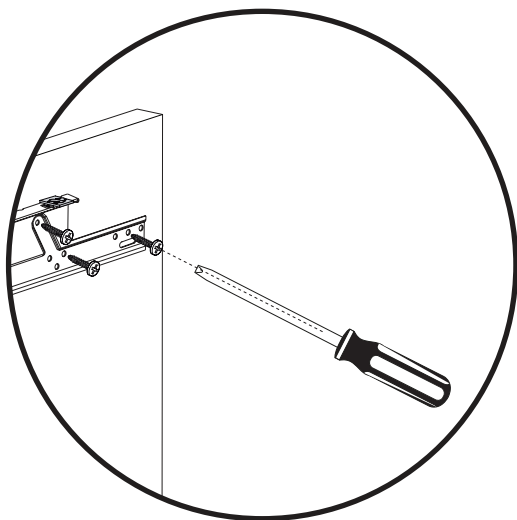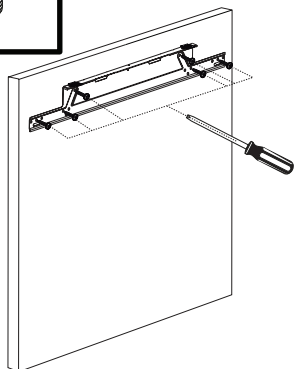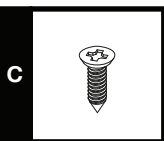




16

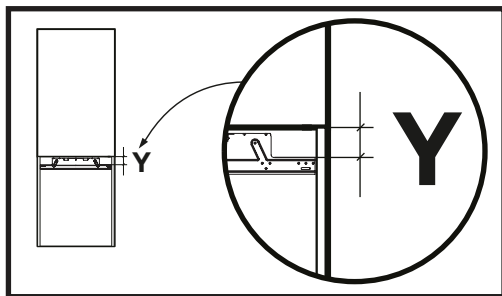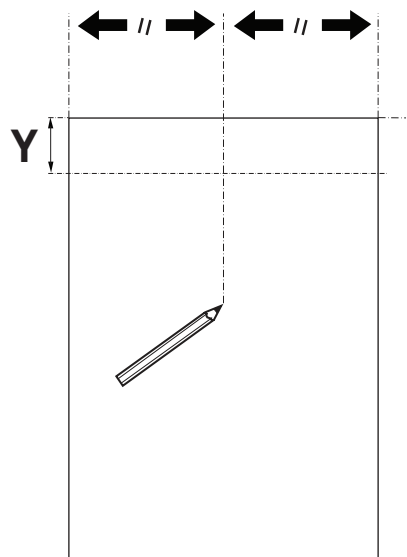

17

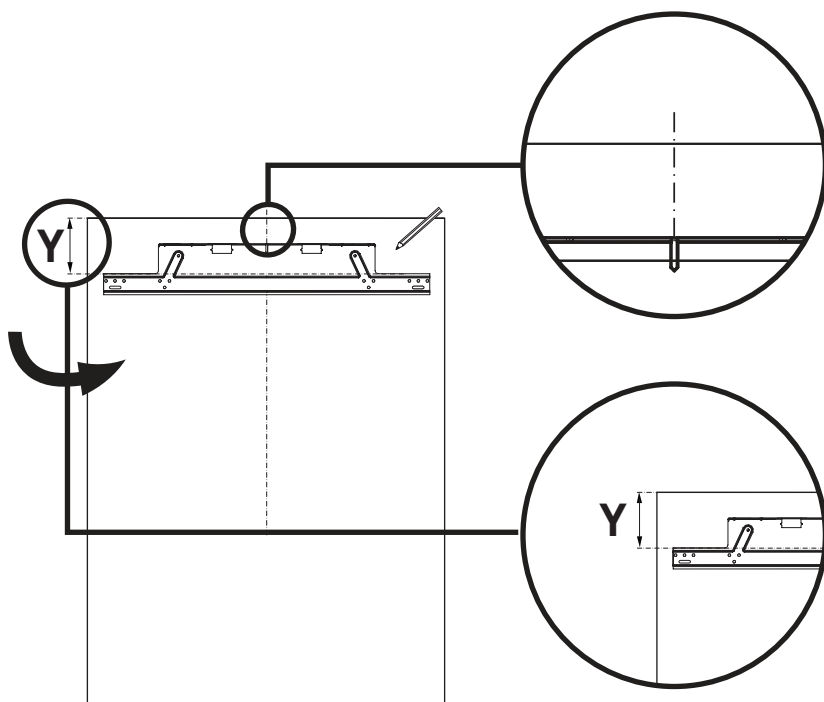

18

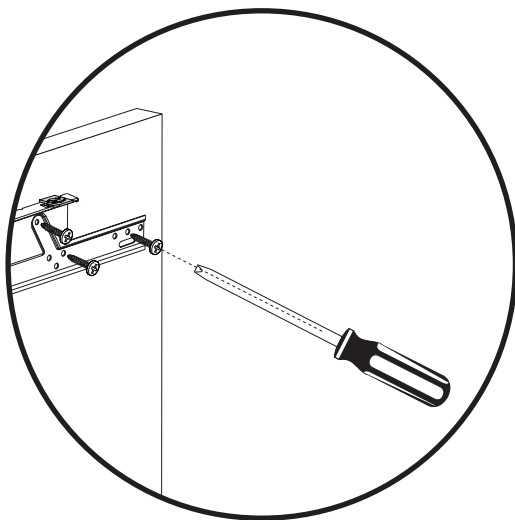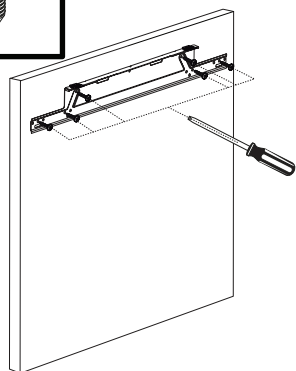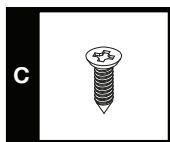

19

